

Full HD over IP

KVM Development &
Support



User Manual

FLEXline

www.kvm-development.com

Full HD
over IP

TABLE OF CONTENT

1. Introduction	6
1.1 Intended use	6
1.2 Safety Instructions	7
1.3 Technical Specifications	9
1.4 About the product - SMARTflex Single	10
1.5 Product elements - SMARTflex Dual	12
1.6 About your MASTERflex single copper	14
1.7 About your MASTERflex dual copper	16
1.8 Product elements - MASTERflex extender single in fiber	18
1.9 Product elements - MASTERflex extender dual fiber	20
1.10 MAXflex extender single copper	22
1.11 MAXflex extender dual copper	24
1.12 MAXflex extender single fiber	26
1.13 MAXflex Extender Dual Fiber	28
1.14 INDUSTRYFLEXline extender single copper	30
1.15 INDUSTRYFLEXline extender single fiber	32
1.16 About the product - USBflex Single copper	34
1.17 Product elements - USBflex single fiber	36
1.18 Productelements Flexline backpanel	38
1.19 About the Status LED	39
1.20 Unpacking and checking the contents	40

TABLE OF CONTENT

2. Installation Extender	47
2.2 Mounting options	47
2.2.1 Mounting pads and rubber feet	47
2.2.2 Mounting kits (optional)	47
2.3 Installing the extender	48
2.4 Quickinstallation SMARTflex Single	49
2.5 Quickinstallation SMARTflex Dual	50
2.6 Quickinstallation MASTERflex single copper	51
2.7 Quickinstallation MASTERflex dual in copper	52
2.8 Quickinstallation MASTERflex single in fiber	53
2.9 Quickinstallation MASTERflex dual in fiber	54
2.10 Quick Installation MAXflex single	55
2.11 Quick Installation MAXflex dual	56
2.12 Quick Installation MAXflex single fiber	57
2.13 Quick Installation MAXflex dual fiber	58
2.14 Quick Installation INDUSTRYFLEXline single	59
2.15 Quick Installation INDUSTRYFLEXline single fiber	60
2.16 Quickinstallation USBflex Single copper	61
2.17 Quickinstallation USBflex single fiber	62
2.18 Start up	63
2.19 Replacing the SFP module	63

TABLE OF CONTENT

2.20 Removing a CATx cable	64
2.21 Removing a fiber cable	64
2.22 Best practice for Windows 10	65
3. Extender settings	68
3.1 Access to the main menu	68
3.2 System Status	69
3.3 Features Menu	70
3.4.1 Point to Point	71
3.4.2 Matrix Switching Mode	71
3.4.3 USB save feature	71
3.4.4 Display the last received image „Freeze last image“	72
3.4.5 USB Emulation Mode	73
3.4.6 Power redundance Alert and Link redundance Alert	73
3.4.7 Diagnosis Menu	74
3.5 DDC Menu	76
3.5.1 DDC main (single)	77
3.5.2 DDC second (dual)	78
3.6 Extender Settings	79
3.6.1 Local Settings	80
3.6.2 USB Compatibility mode	81
3.6.3. USB Remote wake up	82
3.6.4 Compatibility with Linux	83

TABLE OF CONTENT

3.6.5 Bandwidth reduction	83
3.6.6 VGA Parameters	84
3.7 Remote Settings	85
3.7.1 Editing a keyboard layout	86
3.7.2 Editing keyboard shortcuts	87
3.7.3 Setting the audio volume	88
3.7.4 Setting a baud rate for your RS232 connection	89
3.7.5 USB share any key	91
3.7.6 Using the power saving mode	92
3.7.7 Hiding system status menu	93
3.7.8 Change keyboard fallback modus	94
3.7.9 Lock menu	95
3.7.10 Mouse speed	96
3.7.11 Monitor sync strength	96
3.8 Firmware update	98
3.8.1 Updating a firmware with Switching Manager	98
3.8.2 Firmware update with USB stick	99
3.9 About this device	101
4. Network settings	102
4.1 Display Switching list	102
4.2 PUSH / GET List	103
4.3 Favorite list	104

TABLE OF CONTENT

4.4 Connecting, disconnecting or selecting a current workplace connected devices	105
4.5 Searchbox-function	106
4.6 IP Management	107
5. Troubleshooting & First Aid	110
6. Maintance and care	112
6.1 EXTENDER CARE	112
6.2 Disposal	112
7. Warranty	113
7.1 Standard warranty	113
7.2 Extended warranty	113
8. Requirements for cable	114
8.1 Requirements for CAT5e/6/7 cables	114
8.2 Requirements fiber cables	115
8.2.1 Multi-Mode (standard)	115
8.2.2 Single-Mode (optional)	115
9. Requirements network- switch	116
10. Address & phone / emails	117
11. Notes	118

1. INTRODUCTION

Congratulations on the purchase of your new kvm-tec Flexline Extender. You have bought a high quality extender. These instructions are part of this product. They contain important information regarding safety, use and disposal for every user of the kvm-tec Flexline Extender. Please familiarise yourself with the information within prior to using your product. Use the product only in the manner as described and for the areas of application as stated. When passing the product to a third party be sure to also supply all instructions and other relevant documentation. Following proper use and maintenance, your kvm-tec Flexline Extender will bring you joy for many years to come.

1.1 INTENDED USE

This product is intended to be used as a device to increase the distance that a keyboard, monitor and mouse can be placed from a computer. This product is intended for professional use. The product should not be used in potentially explosive environments.

The product may only be used according to the instructions as described in this manual. All use, other than that described in this manual, is seen as unintended use. Modifications in the course of technological progress are reserved. In these user instructions the kvm-tec Flexline Extender is referred to as 'product' or 'extender'. The Flexline/PC is referred to as the 'local unit' (CPU) and the Flexline/Monitor is referred to as the 'remote unit' (CON).

1. INTRODUCTION

1.2 SAFETY INSTRUCTIONS

WARNING! Read and understand all safety instructions.

- Follow all the instructions. This will avoid accidents, fire, explosions, electric shocks or other hazards that may result in damage to property and/or severe or fatal injuries. Please ensure that everyone who uses the product has read and followed these warnings and instructions.
- Keep all safety information and instructions for future reference and pass them on to subsequent users of the product.
- The manufacturer is not liable for cases of material damage or personal injury caused by incorrect handling or non-compliance with the safety instructions. In such cases, the warranty will be voided.
- This product is not intended for use by persons (including children) with restricted physical, sensory or intellectual capability or lack of experience and/or knowledge, unless they are supervised by a person who is responsible for their safety or provides them with instructions on how to use the product.
- **DANGER!** Not for use in potentially explosive environments.
- **DANGER!** Be vigilant at all times, and always take care around this product. Do not use electrical equipment if you are lacking in concentration or awareness, or are under the influence of drugs, alcohol or medication. Even a moment of inattentiveness can lead to serious accidents and injuries when using electrical equipment. Check the product and the cables for any damage before use. If there is any visible damage, a strong odour, or excessive overheating of components unplug all the connections immediately and stop using the product.



DANGER! The Flexline-F KVM Extender is a Class 1 Laser Product 1 according to DIN 40008/EN and VDE 0837.

- If the product is not installed and used in accordance with this manual, it may cause disruptive interference with radio or television reception or affect other electronic products in residential areas.
- Use shielded cables only to connect the components in order to avoid such interference. Non-compliance invalidates the permission to operate this product.

Only the mains adapter included with the product should be used as the power supply. Do not use other adapters.



Prior to connecting to the mains, make sure your local mains voltage matches the rating indicated on the product.

The product must be connected to a permanent and earthed AC wall socket.

1. INTRODUCTION

- Protect cables from being strained, pinched or buckled and place them in a way to prevent people from tripping over the cord.
- In particular, ensure to avoid damage to the mains adapter.
- Use the product with a suitable, properly installed and easily accessible mains power socket. Make sure the product can be disconnected from the power socket at all times.

Unplug the product during electrical storms or when not in use.



DANGER! Never touch the adapter with wet hands.

Use the product within the specified performance limits.

Keep the product away from flammable materials such as curtains and drapes.

- Protect the mains adapter from use by third parties (particularly children). Keep the unused mains adapter in a dry, elevated or locked location away from children.
- Do not place the product near heaters.
- Do not drop or hit the product.
- Unplug all connections before cleaning the product. Do not use wipes or chemicals as these could damage the surface. Wipe the housing with a damp cloth. Electrical/ electronic parts must not be cleaned.
- Alterations to the product and technical modifications are not permitted.

1. INTRODUCTION


1.3 TECHNICAL SPECIFICATIONS

Type:	KVM Extender (local unit and remote unit)
Power supply input voltage:	100 - 240 V; 50/60 Hz AC
Power supply output:	12V; 1A (external power supply)
Power requirement:	6W per extender (excluding attached USB devices)
Operating temperature range:	0 °C to 45 °C / 32 °F to 113 °F
Storage temperature range:	-25 °C to 80 °C / -13 °F to 176 °F
Relative humidity:	max. 80% (non-condensing)
Storage humidity:	max. 80% (non-condensing)
Casing Material:	Anodized aluminium
Dimensions:	approx. 109 x 43 x 107,5 mm / 4.29 x 1.69 x 4.23 inch
Weight:	local unit 1005g/ 2,21 LB remote 890g/4.17 lb
Expected product life:	82 820 hours / 9.5 years

1. INTRODUCTION

1.4 ABOUT THE PRODUCT - SMARTFLEX SINGLE

Remote /CON Extender

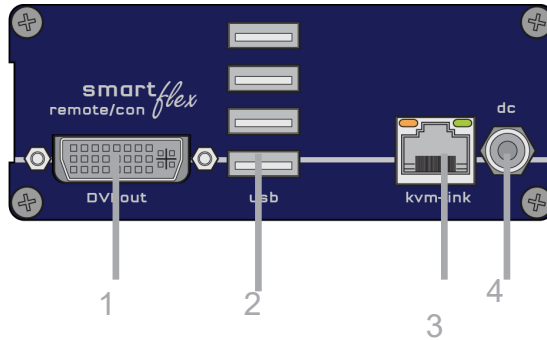

Nr.	Name	Function
-----	------	----------


1	dvi-out	DVI connection to monitor
2	USB	USB to Keyboard, mouse
3	kvm-link	connection for CAT5/6/7 cable
4	dc	Connection 12V1A power supply

LED STATUS

red	no active connection
yellow	no video signal
green	everything works

1. INTRODUCTION

Local /CPU Extender

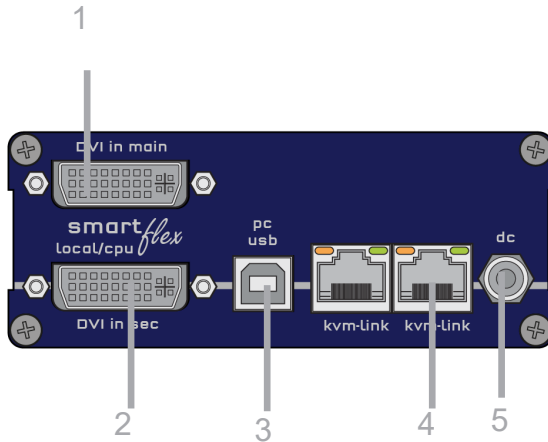

Nr.	Name	Function
1	DVI out	DVI to monitor
2	DVI in	DVI from PC
2	USB	USB to PC
4	kvm-link	Connection for CAT5/6/7 cable
5	dc	connection power supply 12V1A


LED STATUS

red	no active connection
yellow	no video signal
green	everything works

1. INTRODUCTION

1.5 PRODUCT ELEMENTS - SMARTFLEX DUAL

Remote/CON Extender

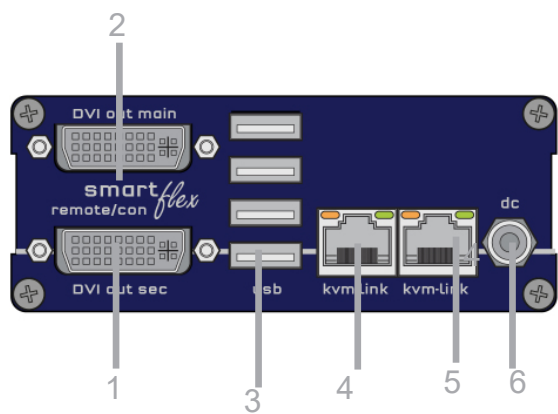


Nr.	Name	Function
1	DVI out sec	DVi to Monitor .
2	DVI out main	DVi to Monitor
2	USB	USB from keyboard and Maus
4	kvm-link	Connection for CAT5/6/7 cable
5	kvm-link	Connection for CAT5/6/7 cable
6	dc	Connection power supply 12V1A

LED STATUS

red	no active connection
yellow	no video signal
green	everything works

1. INTRODUCTION

Local /CPU Extender

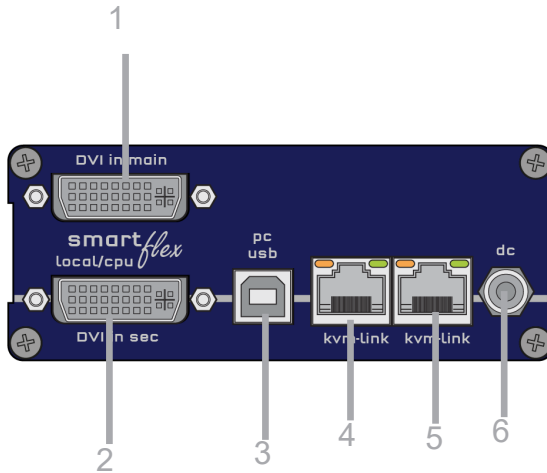

Nr. NameFunction

1	dvi-in second	DVI connection from PC
2	dvi-in main	DVI connection to PC
3	USB	USB to PC
4	kvm-link	Connection for CAT5/6/7 cable
5	kvm-link	Connection for CAT5/6/7 cable
6	dc	Conenction 12V1A power supply


LED STATUS

red	no active connection
yellow	no video signal
green	everything works

1. INTRODUCTION

1.6 ABOUT YOUR MASTERFLEX SINGLE COPPER

Local Extender (CPU)

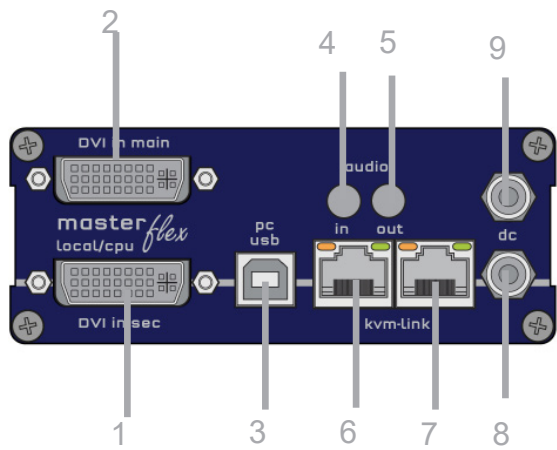


No.	Name	Function
1	dvi-in	DVI connection to PC
2	dvi-in	DVI connection from PC
3	USB	USB to PC
4	audio in	Audio in from PC
5	audio out	Audio out to PC
6	kvm-link	connection for CAT5/6/7 cable redundant
7	kvm-link	connection for CAT5/6/7 cable
8	dc	connection for 12V1A power supply redundant
9	dc	connection 12V2A power supply

LED STATUS	
yellow	LINK ok
green	Video ok
green blinking	Video and USB activity

1. INTRODUCTION

Remote Extender (CON)

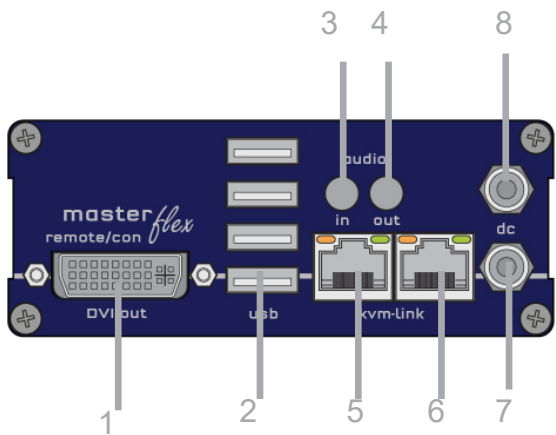

No.	Name	Function
1	DVI out	DVi to monitor .
2	USB	USB from keyboard and mause
3	audio in	Audio in from microfon etc.
4	audio out	Audio to loudspeaker
5	kvm-link	connection for CAT5/6/7 cable
6	kvm-link	connection for CAT5/6/7 cable redundant
7	dc	connection power supply 12V1A redundant
8	dc	connection power supply 12 V2A


LED STATUS

yellow	LINK ok
green	Video ok
green blinking	Video and USB activity

1. INTRODUCTION

1.7 ABOUT YOUR MASTERFLEX DUAL COPPER

Local Extender (CPU)

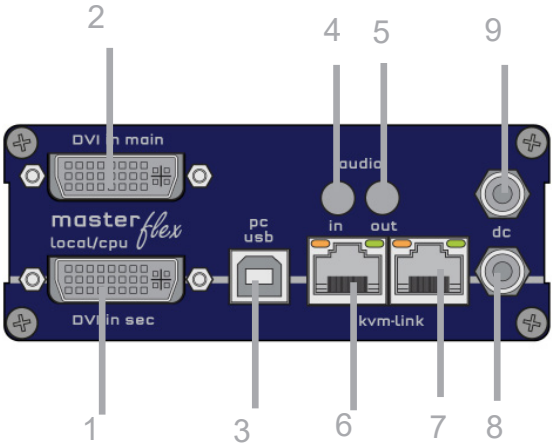


No.	Name	Function
1	dvi-in	DVI in 2 from PC
2	dvi-main	DVI connection to PC
3	USB	USB to PC
4	audio in	Audio Out from PC
5	audio out	Audio Out to PC
6	kvm-link	connection for CAT5/6/7 cable
7	kvm-link	connection for CAT5/6/7 cable
8	dc	connection 12V1A power supply
9	dc	connection 12V1A power supply

LED STATUS	
yellow	LINK ok
green	Video ok
green blinking	Video and USB activity

1. INTRODUCTION

Remote Extender (CON)

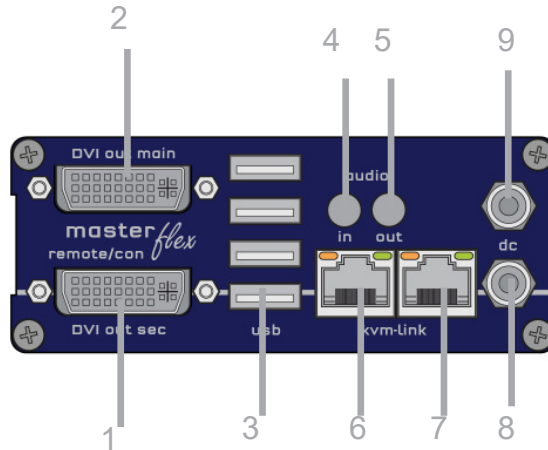

No.	Name	Function
-----	------	----------

1	DVI	DVI to Monitor 2
2	DVI	DVI to Monitor 1
3	USB	USB from Keyboard and mouse
4	audio in	Audio in from Microphone.
5	audio out	Audio to loudspeakers
6	kvm-link	connection for CAT5/6/7 cable
7	kvm-link	connection for CAT5/6/7 cable
8	dc	connection power supply 12V1A
9	dc	connection power supply 12V1A


LED STATUS

yellow	LINK ok
green	Video ok
green blinking	Video and USB activity

1. INTRODUCTION

1.8 PRODUCT ELEMENTS - MASTERFLEX EXTENDER SINGLE IN FIBER

Local Extender (CPU)

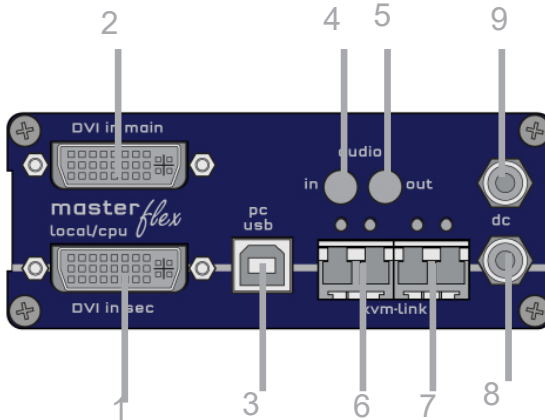

No	Name	Function
----	------	----------


1	dvi-out	DVI connection to monitor
2	dvi-in	DVI in from PC
3	USB	USB to PC
4	audio in	Audio in from PC
5	audio out	Audio out to PC
6	kvm-link	connection for OM3 fiber cable up to 500m redundant
7	kvm-link	connection for OM3 fiber cable up to 500m
8	dc	connection power supply 12V1A redundant
9	dc	connection power supply

LED STATUS

yellow	LINK ok
green	Video ok
green blinking	Video and USB activity

1. INTRODUCTION

Remote Extender (CON)

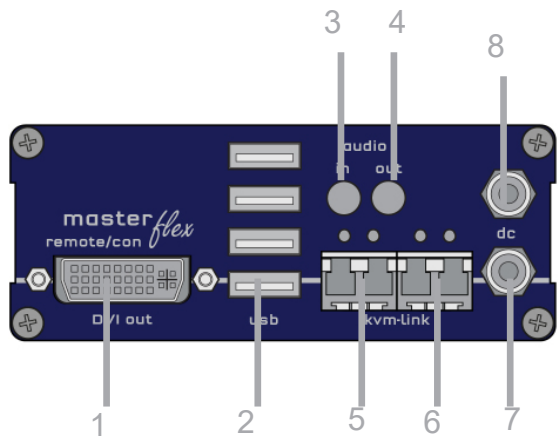

No.	Name	Function
1	DVI-out	DVI to Monitor.
2	USB	USB from keyboard and mouse
3	audio in	Audio in from microphone
4	audio out	Audio out to loudspeaker
5	kvm-link	connection for OM3 fiber cable up to 500m
6	kvm-link	connection for OM3 fiber cable up to 500m redundant
7	dc	connection 12V1A power supply redundant
8	dc	connection power supply


LED STATUS

yellow	LINK ok
green	Video ok
green blinking	Video and USB activity

1. INTRODUCTION

1.9 PRODUCT ELEMENTS - MASTERFLEX EXTENDER DUAL FIBER

Local Extender (CPU)

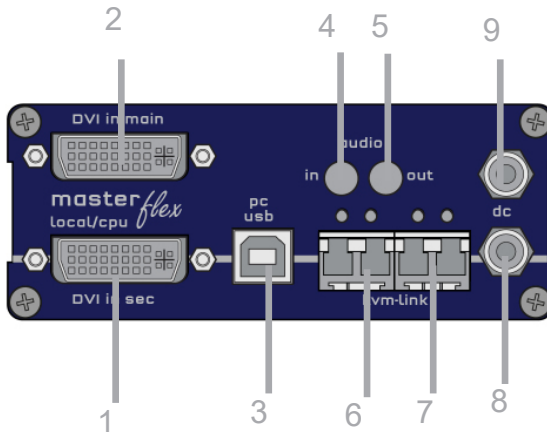

No.	Name	Function
-----	------	----------


1	dvi-in	DVI 2 connection from PC
2	dvi-main	DVI to PC
3	USB	USB from PC
4	audio in	Audio from PC
5	audio out	Audio to PC
6	kvm-link	connection for OM3 fiber cable up to 500m redundant
7	kvm-link	connection for OM3 fiber cable up to 500m
8	dc	connection power supply 12V1A redundant
9	dc	connection power supply 12V1A

LED STATUS

yellow	LINK ok
green	Video ok
green blinking	Video and USB activity

1. INTRODUCTION

Remote Extender (CON)

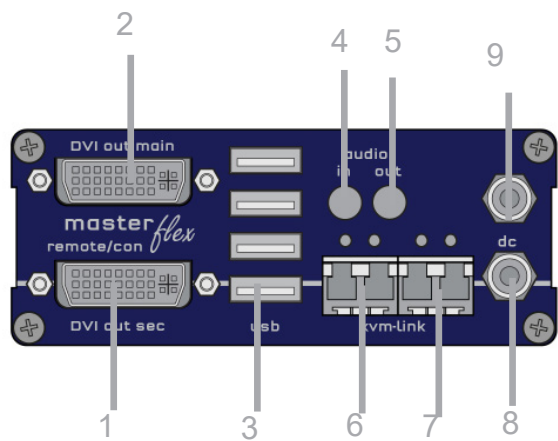

No.	Name	Function
1	dvi out	DVI to Monitor 2
2	dvi out	DVI to Monitor 1
3	USB	USB from keyboard and mouse .
4	audio in	Audio in from microphone
5	audio out	Audio out to loudspeaker
6	kvm-link	connection for OM3 fiber cable up to 500m
7	kvm-link	connection for OM3 fiber cable up to 500m redundant
8	dc	connection power supply 12V1A redundant
9	dc	connection power supply 12V1A


LED STATUS

yellow	LINK ok
green	Video ok
green blinking	Video and USB activity

1. INTRODUCTION

1.10 MAXFLEX EXTENDER SINGLE COPPER

Local Extender (CPU)

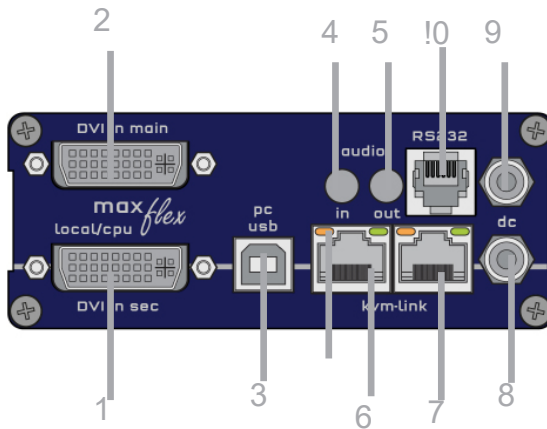

Nr. NameFunction


1	dvi-out	DVI connection to monitor
2	dvi - in	DVI connection to PC
3	USB	USB to PC
4	audio in	Audio in from PC
5	audio out	Audio out to PC
6	kvm-link	connection for CAT5/6/7 cable redundant
7	kvm-link	connection for CAT5/6/7 cable
8	dc	connection for 12 V power supply redundant
9	dc	connection for 12 V power supply
10	RS232 RS 232 connection	

LED STATUS

yellow	LINK ok
green	Video ok
green blinking	Video and USB activity

1. INTRODUCTION

Remote Extender (CON)

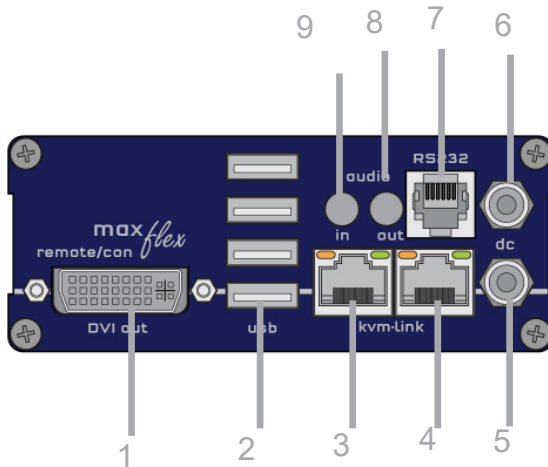

Nr.	Name	Function
-----	------	----------

1	DVI out	DVI to monitor .
2	USB	USB from keyboard and mouse
3	kvm-link	connection for CAT5/6/7 cable redundant
4	kvm-link	connection for CAT5/6/7 cable
5	dc	connection for 12V 1A power supply redundant
6	dc	connection for 12V 1A power supply
7	RS232	RS232 connection
8	audio out	Audio to loudspeaker
9	audio in	Audio in from microphone


LED STATUS

yellow	LINK ok
green	Video ok
green blinking	Video and USB activity

1. INTRODUCTION

1.11 MAXFLEX EXTENDER DUAL COPPER

Local Extender (CPU)

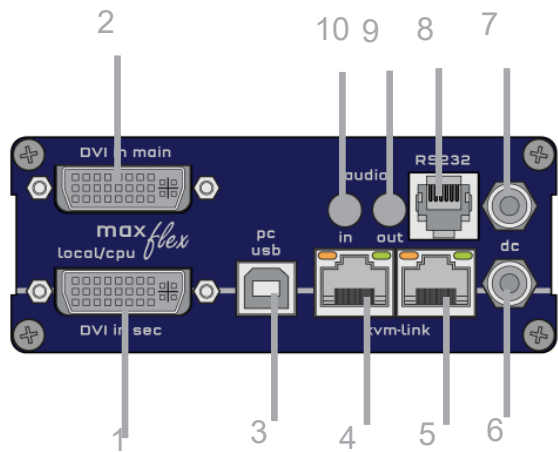


Nr.	Name	Function
1	dvi-in second	DVI connection to monitor
2	dvi - in main	DVI connection to monitor
3	USB	USB to PC
4	kvm-link	connection for CAT5/6/7 cable
5	kvm-link	connection for CAT5/6/7 cable
6	dc	connection for 12V 1A power supply redundant
7	dc	connection for 12V 1A power supply
8	RS232	RS 232 connection
9	audio out	Audio out to PC
10	audio in	Audio in from PC

LED STATUS

yellow	LINK ok
green	Video ok
green blinking	Video and USB activity

1. INTRODUCTION

Remote Extender (CON)

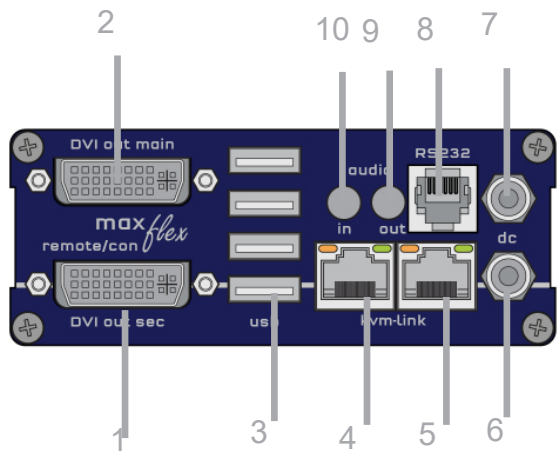

Nr.	Name	Function
1	DVI out second	DVI connection to monitor .
2	dvi- out main	DVI connection to monitor .
3	USB	USB from keyboard and mouse
4	kvm-link	Connection for CAT5/6/7 cable
5	kvm-link	Connection for CAT5/6/7 cable
6	dc	connection for 12V 1A power supply redundant
7	dc	connection for 12V 1A power supply
8	RS232	RS232 connection
9	audio out	Audio to loudspeaker
10	audio in	Audio in to microphone


LED STATUS

yellow	LINK ok
green	Video ok
green blinking	Video and USB activity

1. INTRODUCTION

1.12 MAXFLEX EXTENDER SINGLE FIBER

Local Extender (CPU)

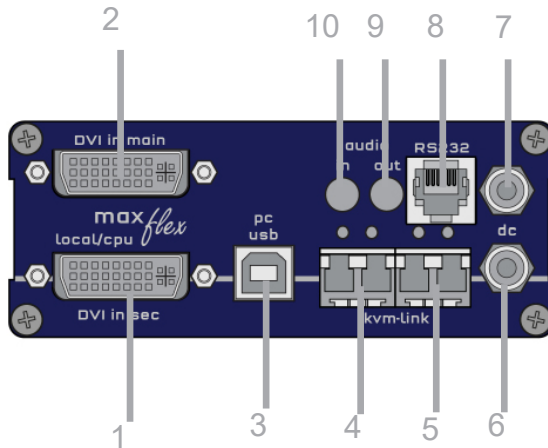

Nr.	Name	Function
-----	------	----------


1	dvi-out	DVI connection to monitor
2	dvi-in	DVI connection from PC
3	USB	USB to PC
4	kvm-link	connection for OM3 fiber cable up to 500m redundant
5	kvm-link	connection for OM3 fiber cable up to 500m
6	dc	connection for 12V 1A power supply redundant
7	dc	connection for 12V 1A power supply
8	RS232	RS 232 connection
9	audio out	Audio out to PC
10	audio in	Audio in from PC

LED STATUS

yellow	LINK ok
green	Video ok
green blinking	Video and USB activity

1. INTRODUCTION

Remote Extender (CON)

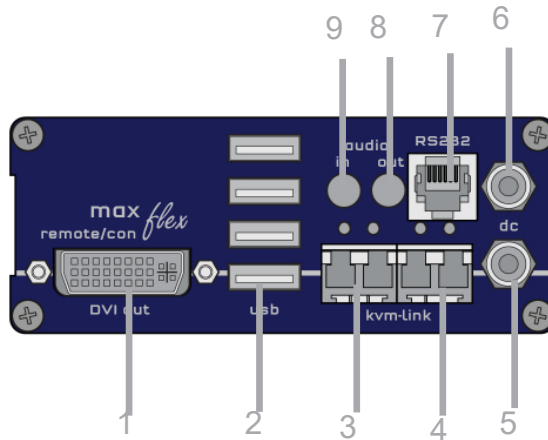

Nr. NameFunction

1	DVI out	DVI connection to monitor .
2	USB	USB from keyboard and mouse
3	kvm-link	connection for OM3 fiber cable up to 500m redundant
4	kvm-link	connection for OM3 fiber cable up to 500m
5	dc	connection for 12V 1A power supply redundant
6	dc	connection for 12V 1A power supply
7	RS232	RS232 connection
8	audio out	Audio to loudspeaker
9	audio in	Audio in from microphone ...


LED STATUS

yellow	LINK ok
green	Video ok
green blinking	Video and USB activity

1. INTRODUCTION

1.13 MAXFLEX EXTENDER DUAL FIBER

Local Extender (CPU)

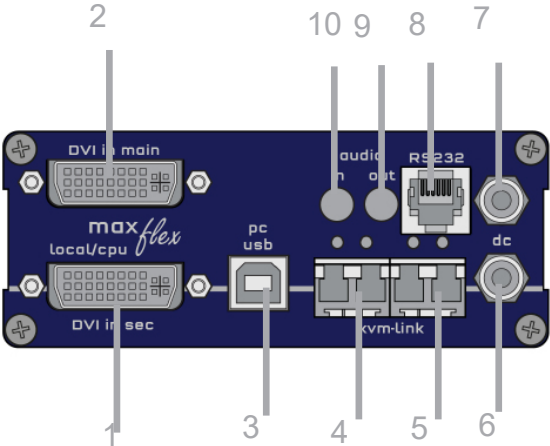


Nr.	Name	Function
1	dvi-in second	DVI connection to monitor
2	dvi-in main	DVI connection to monitor
3	USB	USB to PC
4	kvm-link	connection for OM3 fiber cable up to 500m
5	kvm-link	connection for OM3 fiber cable up to 500m
6	dc	Connection for 12V 1A power supply redundant
7	dc	Connection for 12V 1A power supply
8	RS232	RS 232 connection
9	audio out	Audio out to PC
10	audio in	Audio in from PC

LED STATUS

yellow	LINK ok
green	Video ok
green blinking	Video and USB activity

1. INTRODUCTION

Remote Extender (CON)

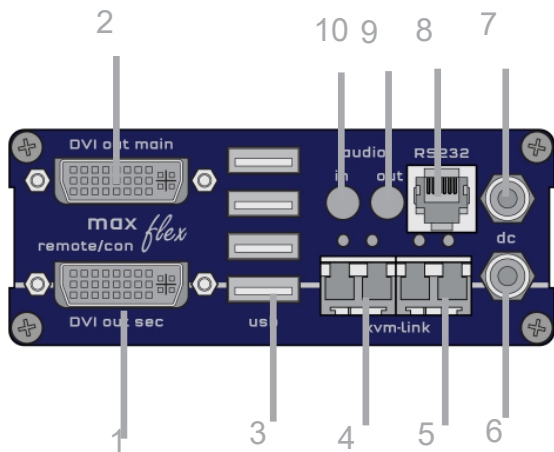


Nr.	Name	Function
1	DVI out	DVI to Monitor .
2	DVI out	DVI connection to Monitor
3	USB	USB from keyboard and mouse
4	kvm-link	connection for OM3 fiber cable up to 500m
5	kvm-link	connection for OM3 fiber cable up to 500m
6	dc	Connection for 12V 1A power supply redundant
7	dc	Connection for 12V 1A power supply
8	RS232	RS232 connection
9	audio out	Audio to loudspeaker
10	audio in	Audio in from microphone ..

LED STATUS	
yellow	LINK ok
green	Video ok
green blinking	Video and USB activity

1. INTRODUCTION

1.14 INDUSTRYFLEXLINE EXTENDER SINGLE COPPER

Local Extender (CPU)

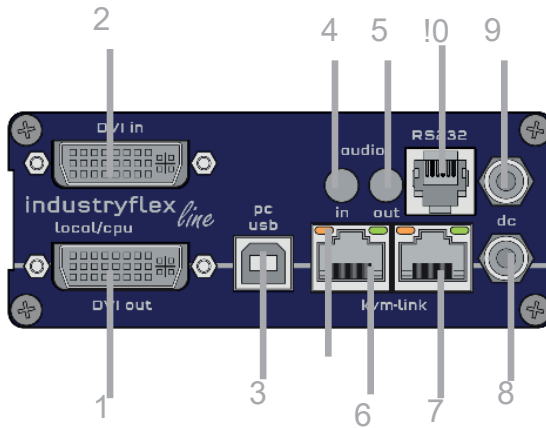

Nr.	Name	Function
-----	------	----------


1	dvi-out	DVI connection to monitor
2	dvi - in	DVI connection to PC
3	USB	USB to PC
4	audio in	Audio in from PC
5	audio out	Audio out to PC
6	kvm-link	connection for CAT5/6/7 cable redundant
7	kvm-link	connection for CAT5/6/7 cable
8	dc	connection for 12 V 2A power supply redundant
9	dc	connection for 12 V 2A power supply
10	RS232 RS 232 connection	

LED STATUS

yellow	LINK ok
green	Video ok
green blinking	Video and USB activity

1. INTRODUCTION

Remote Extender (CON)

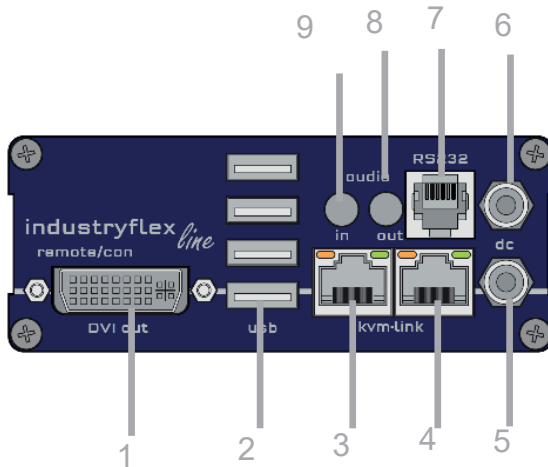

Nr. NameFunction

1	DVI out	DVI to monitor .
2	USB	USB from keyboard and mouse
3	kvm-link	connection for CAT5/6/7 cable redundant
4	kvm-link	connection for CAT5/6/7 cable
5	dc	connection for 12 V 2A power supply redundant
6	dc	connection for 12 V 2A power supply
7	RS232	RS232 connection
8	audio out	Audio to loudspeaker
9	audio in	Audio in from microphone


LED STATUS

yellow	LINK ok
green	Video ok
green blinking	Video and USB activity

1. INTRODUCTION

1.15 INDUSTRYFLEXLINE EXTENDER SINGLE FIBER

Local Extender (CPU)

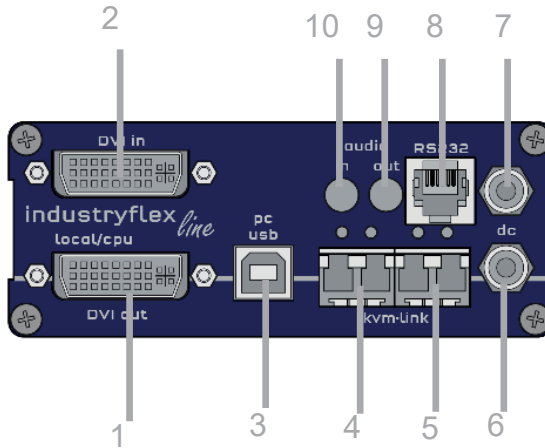

Nr.	Name	Function
-----	------	----------


1	dvi-out	DVI connection to monitor
2	dvi-in	DVI connection from PC
3	USB	USB to PC
4	kvm-link	connection for OM3 fiber cable up to 500m redundant
5	kvm-link	connection for OM3 fiber cable up to 500m
6	dc	connection for 12 V 2A power supply redundant
7	dc	connection for 12 V 2A power supply
8	RS232 RS 232 connection	
9	audio out	Audio out to PC
10	audio in	Audio in from PC

LED STATUS

yellow	LINK ok
green	Video ok
green blinking	Video and USB activity

1. INTRODUCTION

Remote Extender (CON)

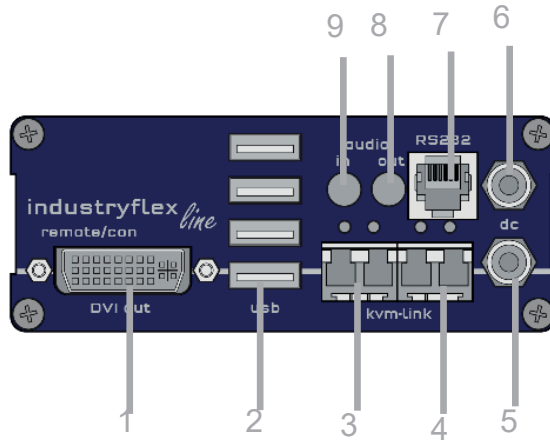

Nr.	Name	Function
-----	------	----------

1	DVI out	DVI connection to monitor .
2	USB	USB from keyboard and mouse
3	kvm-link	connection for OM3 fiber cable up to 500m redundant
4	kvm-link	connection for OM3 fiber cable up to 500m
5	dc	connection for 12 V 2A power supply redundant
6	dc	connection for 12 V 2A power supply
7	RS232	RS232 connection
8	audio out	Audio to loudspeaker
9	audio in	Audio in from microphone ...


LED STATUS

yellow	LINK ok
green	Video ok
green blinking	Video and USB activity

1. INTRODUCTION

1.16 ABOUT THE PRODUCT - USBFLEX SINGLE COPPER

Remote /CON Extender

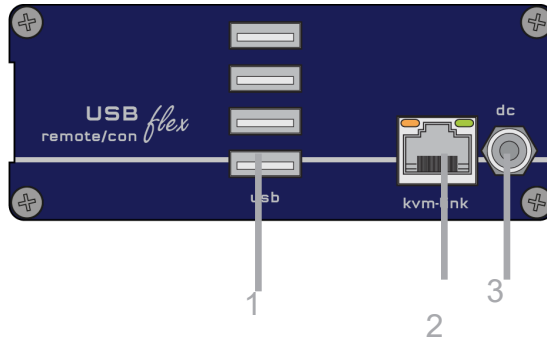

Nr. NameFunction


1	USB	USB from Videocamera, Photocamera, Joystick
2	kvm-link	Conenction for CAT5/6/7 cable
3	dc	Connection 12V1A power supply

LED STATUS

yellow	LINK ok
green	Video ok
green blinking	Video and USB activity

1. INTRODUCTION

Local /CPU Extender

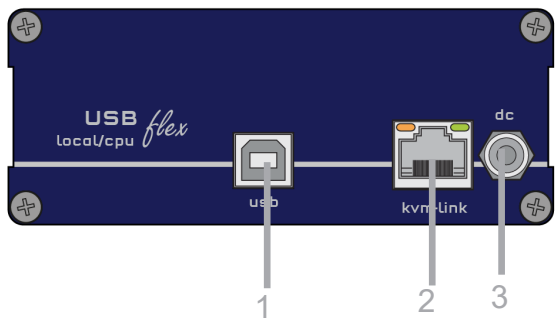


Nr.	Name	Function
1	USB	USB to PC
2	kvm-link	Connection for CAT5/6/7 cable
3	dc	connection power supply 12V 1A

LED STATUS	
yellow	LINK ok
green	Video ok
green blinking	Video and USB activity

1. INTRODUCTION

1.17 PRODUCT ELEMENTS - USBFLEX SINGLE FIBER

Remote/CON Extender

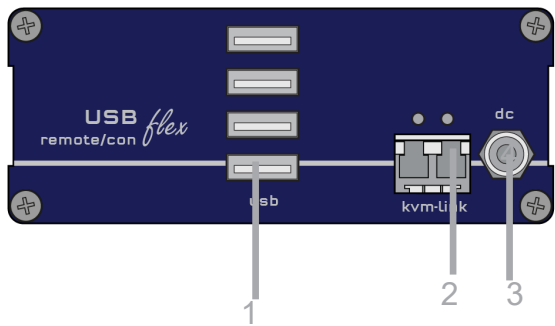


Nr.	Name	Function
1	USB	USB from Videocamera, Photocamera, Joystick
2	kvm-link	connection for OM3 fiber cable up to 500m
3	dc	Connection power supply 12V 1A

LED STATUS	
yellow	LINK ok
green	Video ok
green blinking	Video and USB activity

1. INTRODUCTION

Local /CPU Extender

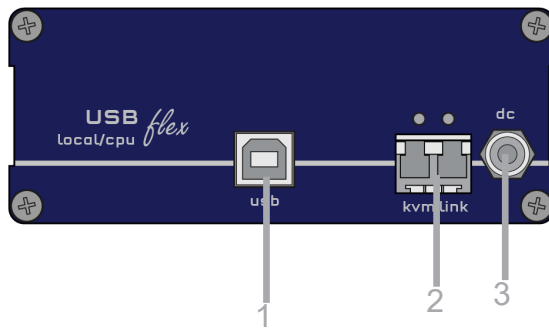

Nr.	Name	Function
-----	------	----------

1	USB	USB to PC
2	kvm-link	connection for OM3 fiber cable up to 500m
3	dc	Connection 12V 1A power supply

LED STATUS

yellow	LINK ok
green	Video ok
green blinking	Video and USB activity

1. INTRODUCTION

1.18 PRODUCELEMENTS FLEXLINE BACKPANEL

BACKSIDE



Nr.	Name	Function
1	LED Status	Display of LED Status
2	Reset	Button for Reset

1. INTRODUCTION

1.19 ABOUT THE STATUS LED

LED Status Update:

Farbe	Anzeige des Lichtes	Autoupdate Modus
	fast flashing	Update runs
	shining	Update failed
	shining	Update successful

Meaning LED displays

Farbe	Anzeige des Lichtes	Bedeutung
	shining	only network connection available
	fast flashing	No active connection
	shining	No video signal
	shining	everything works

1. INTRODUCTION

1.20 UNPACKING AND CHECKING THE CONTENTS

Before using the product for the first time it should be checked for damage. In case of damage due to transport inform the carrier immediately. Before delivery the product is checked for its function and its operating safety.

- Make sure that the packaging contains the following content:

SMARTflex Single

Local/CPU Unit

- 1 x SV1 local/CPU
- 1 x wall power supply unit 12 V 1A (EU-plug or Int plug)
- 1 x DVI-DVI cable 1,8m/5.9ft
- 1 x USB cable 1,8m/5.9ft
- 4 x rubber feet

Remote / CON Unit

- 1 x SV1 remote/CON
- 1 x wall power supply unit 12 V 1A (EU-plug or Int plug)
- 4 x rubber feet

SMARTflex Dual

Local/CPU Unit

- 1 x SV2 local/CPU
- 1 x wall power supply unit 12 V 1A (EU-plug or Int plug)
- 1 x DVI-DVI cable 1,8m/5.9ft
- 1 x USB cable 1,8m/5.9ft
- 4 x rubber feet

Remote / CON Unit

- 1 x SV2 remote/CON
- 1 x wall power supply unit 12 V 1A (EU-plug or Int plug)
- 4 x rubber feet

1. INTRODUCTION

Before using the product for the first time it should be checked for damage. In case of damage due to transport inform the carrier immediately. Before delivery the product is checked for its function and its operating safety.

- Make sure that the packaging contains the following content:

MASTERflex single copper delivery content - Local (CPU)

1 x MV1 local (CPU)
1 x wall power supply 12V 1A (EU-plug or int plug)
1 x DVI - DVI cable 1,8m/5.9 ft)
1 x USB cable 1,8m/ 5.9 ft
1 x VGA - DVI cable 1,8m / 5.9 ft (opt)
2 x Audio cable 1,8m/5.9ft (opt)

delivery content - Remote (CON)

1 x MV1 remote (CON)
1 x wall power supply 12V 1A (EU-plug or int plug)
4 x rubber feet

MASTERflex dual copper delivery content - Local (CPU)

1 x MV2 local (CPU)
1 x wall power supply 12V 1A (EU-plug or int plug)
2 x DVI - DVI cable 1,8m/5.9ft
1 x USB cable 1,8m/5.9ft
2 x VGA - DVI cable 1,8m/5.9 ft (opt)
2 x Audio cable 1,8m/5.9ft (opt)

delivery content - Remote (CON)

1 x MV2 remote (CON)
1 x wall power supply 12V 1A (EU-plug or int plug)
4 x rubber feet

1. INTRODUCTION

Make sure that the packaging contains the following content:

MASTERflex single fiber

Delivery content - Local (CPU)

1 x MV1-F local (CPU)
1 x wall power supply 12V 1A (EU-plug or Int plug))
1 x DVI - DVI cable 1,8m/5.9ft
1 x USB cable 1,8m/5.9ft
1 x VGA - DVI cable 1,8m/5.9ft (opt)
2 x Audio cable 1,8m/5.9 ft (opt)
2x SFP Module-Multimode up to 500m/1640 ft duplex LC
alternativ with Single-Mode up to 20km/12mi /ItemNr 6835
4 x rubber feet

Delivery content- Remote (CON)

1 x MV1-F Remote (CON)
1 x wall power supply 12V 1A (EU-plug or INT plug)
2 x SFP Module Multimode up to 500m/1640 ft duplex LC
Alternativ with Single-Mode up tp 20km/12mi ItemNr 6835
4 x rubber feet

MASTERflex dual fiber

Delivery content- Local (CPU)

1 x MV2-F local (CPU)
1 x wall power supply 12V 1A (EU-plug or INT plug)
2 x DVI - DVI cable 1,8m/5.9ft
1 x USB cable 1,8m/5.9 ft
2 x VGA - DVI cable 1,8m/5.9ft
2 x Audio cable 1,8m/5.9ft (opt)
2 x SFP Module-Multimode up to 500m/1640ft
(alternativ Single-Mode up to 20km/12mi ItemNr 6835)
4 x rubber feet

Delivery content Remote (CON)

1 x MV2 remote (CON)
1 x wall power supply 12V 1A (EU-plug or INT plug)
4 x rubber feet

1. INTRODUCTION

Before using the product for the first time it should be checked for damage. In case of damage due to transport inform the carrier immediately. Before delivery the product is checked for its function and its operating safety.

- Make sure that the packaging contains the following content:

MAXflex single copper

Delivery content - Local (CPU)

1 x MA local (CPU)
1 x wall power supply unit I 12V 1A (EU-plug or INT. plug)
1 x DVI - DVI cable 1,8m (5.9ft)
1 x USB cable 1,8m (5.9ft)
4 x rubber feet

Delivery Content - Remote (CON)

1 x MA remote (CON)
1 x wall power supply unit I 12V 1A (EU-plug or INT. plug)
4 x rubber feet

MAXflex dual copper

Delivery Content - Local (CPU)

1 x MA2 local (CPU)
1 x wall power supply unit I 12V 1A (EU-plug or INT. plug)
2 x DVI - DVI cable 1, 8m/5.9ft
1 x USB cable 1, 8m/5.9ft
4 x rubber feet

Delivery Content - Remote (CON)

1 x MA2 remote (CON)
1 x wall power supply unit I 12V 1A (EU-plug or INT. plug)
4 x rubber feet

2. INSTALLATION EXTENDER

Make sure that the packaging contains the following content:

MAXflex single Fiber

Delivery Content - Local (CPU)

1 x MA1-F local (CPU)
1 x wall power supply unit I 12V 1A (EU-plug or INT. plug)
1 x DVI - DVI cable 1, 8m/5.9ft
1 x USB cable 1, 8m/5.9 ft.
2 x SFP Module-Multimode up to 500m/1640ft
alternativ with Single-Mode up to 20km/12mi (item no 6855)
4 x rubber feet

Delivery Content - Remote (CON)

1 x MA-F remote (CON)
1 x wall power supply unit I 12V 1A (EU-plug or INT. plug)
2 x SFP Module Multimode up to 500m/1640 ft.
alternativ with Single-Mode up to 20km/12mi
4 x rubber feet

MAXflex dual Fiber

Delivery Content - Local (CPU)

1 x MA2- F local (CPU)
1 x wall power supply unit I 12V 1A (EU-plug or INT. plug)
2 x DVI - DVI cable 1, 8m/5.9ft
1 x USB cable 1, 8m/5.9 ft.
2 x SFP Module-Multimode up to 500m/1640ft
alternativ with Single-Mode up to 20km/12mi (Item 6855)
4 x rubber feet

Delivery Content - Remote (CON)

1 x MA2-F remote (CON)
1 x wall power supply unit I 12V 1A (EU-plug or INT. plug)
2 x SFP Module Multimode up to 500m/1640 ft.
alternativ with Single-Mode up to 20km/12mi
4 x rubber feet

2. INSTALLATION EXTENDER

Before using the product for the first time it should be checked for damage. In case of damage due to transport inform the carrier immediately. Before delivery the product is checked for its function and its operating safety.

- Make sure that the packaging contains the following content:

INDUSTRYFLEXline single copper

Delivery content - Local (CPU)

- 1 x IND local (CPU)
- 1 x wall power supply unit I 12V 1A (EU-plug or INT. plug)
- 1 x DVI - DVI cable 1,8m (5.9ft)
- 1 x USB cable 1,8m (5.9ft)
- 4 x rubber feet

Delivery Content - Remote (CON)

- 1 x IND remote (CON)
- 1 x wall power supply unit I 12V 1A (EU-plug or INT. plug)
- 4 x rubber feet

INDUSTRYFLEXline single fiber

Delivery Content - Local (CPU)

- 1 x IND-F local (CPU)
- 1 x wall power supply unit I 12V 1A (EU-plug or INT. plug)
- 1 x DVI - DVI cable 1, 8m/5.9ft
- 1 x USB cable 1, 8m/5.9 ft.
- 2 x SFP Module-Multimode up to 500m/1640ft
- alternativ with Single-Mode up to 20km/12mi (item no 6855)
- 4 x rubber feet

Delivery Content - Remote (CON)

- 1 x IND-F remote (CON)
- 1 x wall power supply unit I 12V 1A (EU-plug or INT. plug)
- 2 x SFP Module Multimode up to 500m/1640 ft.
- alternativ with Single-Mode up to 20km)/12mi
- 4 x rubber feet

2. INSTALLATION EXTENDER

Before using the product for the first time it should be checked for damage. In case of damage due to transport inform the carrier immediately. Before delivery the product is checked for its function and its operating safety.

- Make sure that the packaging contains the following content:

USBflex Single copper

Local/CPU Unit

- 1 x UB1 local/CPU
- 1 x wall power supply unit 12 V 1A (EU-plug or Int plug)
- 1 x USB cable 1,8m/5.9ft
- 4 x rubber feet

Remote / CON Unit

- 1 x UB1 remote/CON
- 1 x wall power supply unit 12 V 1A (EU-plug or Int plug)
- 4 x rubber feet

USBflex Single fiber

Local/CPU Unit

- 1 x UB1-F local/CPU
- 1 x wall power supply unit 12 V 1A (EU-plug or Int plug)
- 1 x USB cable 1,8m/5.9ft
- 1 x SFP module multimode up to 500m (optionally with single mode up to 20km)
- 4 x rubber feet

Remote / CON Unit

- 1 x UB1-F remote/CON
- 1 x wall power supply unit 12 V 1A (EU-plug or Int plug)
- 1 x SFP module multimode up to 500m (optionally with single mode up to 20km)
- 4 x rubber feet

2. INSTALLATION EXTENDER

2.1 MOUNTING OPTIONS

2.1.1 MOUNTING PADS AND RUBBER FEET

The mounting pads and rubber feet can be used to hold the extenders in place and prevents them from sliding and falling.

To attach the mounting pads or rubber feet:

1. Remove the protection layer from the **mounting pads** or **rubber feet** (G).
2. Attach the **mounting pads** or **rubber feet** (G) to the bottom the units.

2.1.2 MOUNTING KITS (OPTIONAL)

The following mounting kits are available:

Rackmounting kit RMK-FLEX-F

Part Nr. 6232 RMK-FLEX-F

Rack mounting kit RMK-F for mounting FLEXline Extender. 4 Single or Dual Extender. It consists of a 19" rack shelf and an alu-faceplate.

Rackmountingkit RMK- FLEX- FN - T

Part-Nr. 6233 RMK- FLEX-FN

Rack mounting kit RMK-F for mounting FLEXline Extender. 4 Single or Dual Extender. It consists of a 19" rack shelf and an alu-faceplate and a power supply

Rackmontagesatz RMK- FLEX

Part-Nr. 6234 RMK- FLEX

Rack mounting kit RMK-Flex for mounting kvm-tec MASTERflex und MAXflex. 4 Single or Dual Extender It consists of a 19" rack shelf and an alu-faceplate and a redundant power supply

Rackmontagesatz RMK- FLEX-S

Part-Nr. 6234S RMK- FLEX-S

Rack mounting kit RMK-Flex for mounting kvm-tec SMARTflex. 4 Single or Dual Extender It consists of a 19" rack shelf and an alu-faceplate and a redundant power supply

Under table mounting kit

Part Nr 6231 UMK-FLEX

The Under Desk Mounting kit is for underdesk mounting of FLEXline Extender.

Din rail Mounting

Part-Nr. 6235 DINMK-FLEX

The DIN rail mounting is used for space-saving installation in control cabinets or on DIN rails. The attachment to the MA extenders is possible in several ways.

Vesa Mounting

Part-Nr. 6236 VH-FLEX

The robust VESA mounting is used to attach an extender to a monitor with existing VESA mounting points. The Extender becomes one unit with the monitor and saves a lot of space and cable clutter. The VESA mounting kit can be combined with an existing monitor mounting.

2. INSTALLATION EXTENDER


2.3 INSTALLING THE EXTENDER

WARNING! Read and understand all safety information before installing the product.




The units can be set up to access one host computer, or to access numerous host computers. In the case of the latter, an additional Network Switch must be installed. With a Network Switch, each user can gain quick access to any of the required computers.

point to point connection & Matrix Switching System

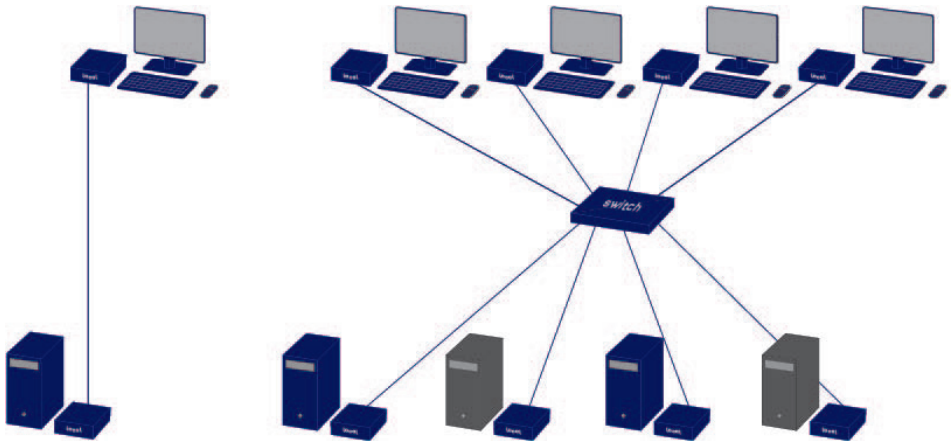

2. INSTALLATION EXTENDER

2.4 QUICKINSTALLATION SMARTFLEX SINGLE

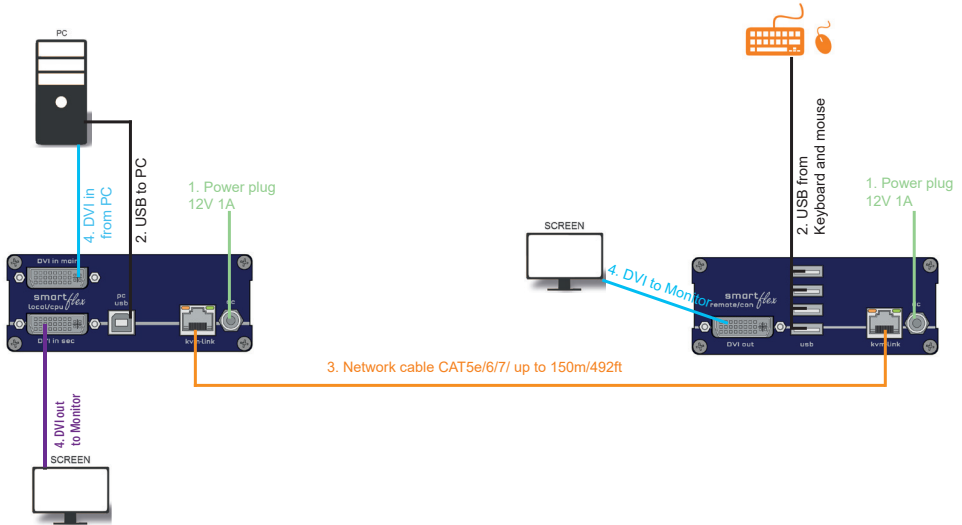


Quick Installation SMARTflex Single local / CPU – remote / CON

1. Connect the CON / Remote and the CPU / Local Unit to the included 12V 1A power supply.
2. Now connect the USB cable to a USB port on your PC and connect the other end of the USB cable to the CPU / Local Unit. Connect keyboard and mouse to the CON / Remote Unit.
3. Connect the CPU / Local and the CON / Remote Unit with a network cable.
4. Now connect the DVI cable to the DVI socket of the PC and the other end to the DVI socket of the CPU / Local Unit (PC-in). Then connect the monitor with the DVI cable to the CON / Remote Unit.
5. Using a switch: Connect all endpoints to the switch. Ensure that all connections have a bandwidth of 1Gbit/sec. For video sharing the network has to support IGMP snooping.

2. INSTALLATION EXTENDER

2.5 QUICKINSTALLATION SMARTFLEX DUAL

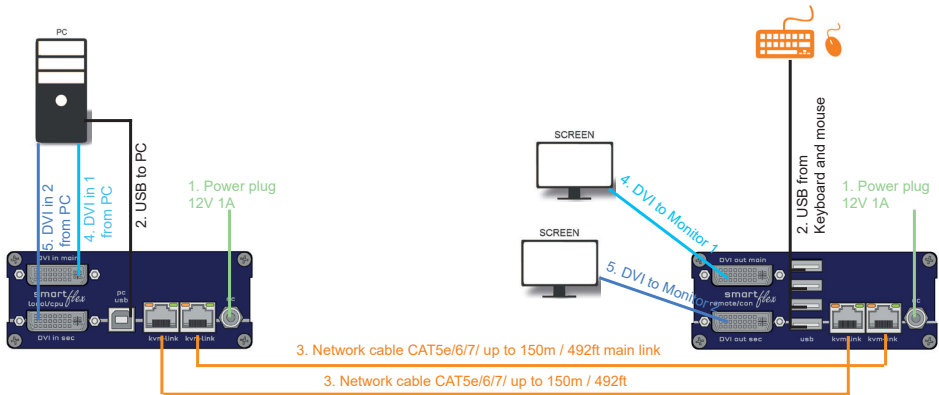


Quick Installation SMARTflex Dual local / CPU – remote / CON

1. Connect the CON / Remote and the CPU / Local Unit to the included 12V 1A power supply.
2. Now connect the USB cable to a USB port on your PC and connect the other end of the USB cable to the CPU / Local Unit. Connect keyboard and mouse to the CON / Remote Unit.
3. Connect the CPU / Local and the CON / Remote Unit with the network cable.
4. Now connect the DVI cable to the DVI socket of the PC and the other end to the DVI socket of the CPU / Local Unit (PC-in 1).
5. Now connect the cable to the DVI socket of the PC and the other end to the DVI socket of the CPU / Local Unit (PC-in 2). Then connect the monitor with the DVI cable to the CON / Remote Unit.
6. Using a switch: Connect all endpoints to the switch. Ensure that all connections have a bandwidth of 1Gbit/sec. For video sharing the network has to support IGMP snooping.

2. INSTALLATION EXTENDER


2.6 QUICKINSTALLATION MASTERFLEX SINGLE COPPER

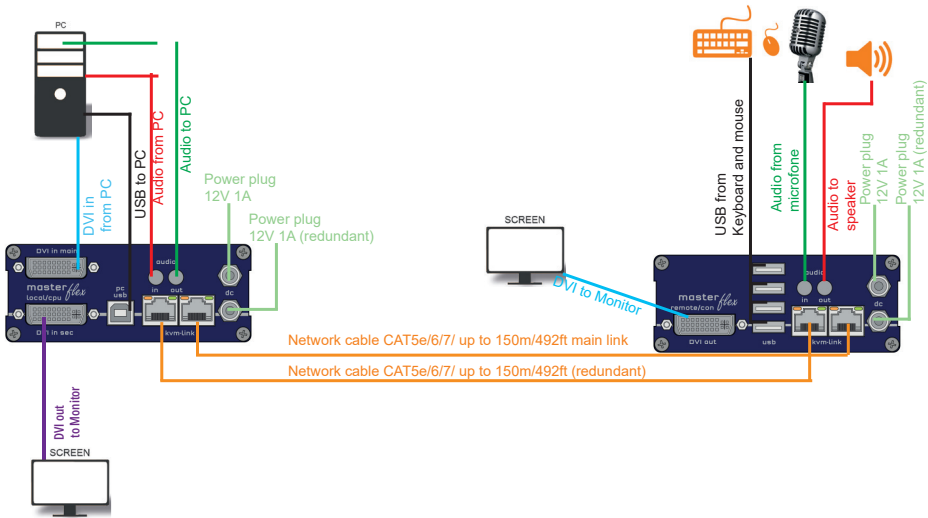

1. Connect the CON / Remote and the CPU / Local Unit to the included 12V 2A power supply.
2. Now connect the USB cable to a USB port on your PC and connect the other end of the USB cable to the CPU / Local Unit. Connect keyboard and mouse to the CON / Remote Unit.
3. Connect the CPU / Local and the CON / Remote Unit with a network cable.
4. Now connect the DVI cable to the DVI socket of the PC and the other end to the DVI socket of the CPU Local Unit (PC-in).
5. Opt: Connect PC audio/out with the audio cable to local audio/in. Connect audio/out via the audio cable
6. Almost done! Opt: Connect the audio cable local audio/out to the PC audio/in and remote audio/out with audio cable to the microphone
7. Using a switch: Connect all endpoints to the switch. Ensure that all connections have a bandwidth of 1Gbit/sec. For video sharing the network has to support IGMP snooping.

2. INSTALLATION EXTENDER


2.7 QUICKINSTALLATION MASTERFLEX DUAL IN COPPER

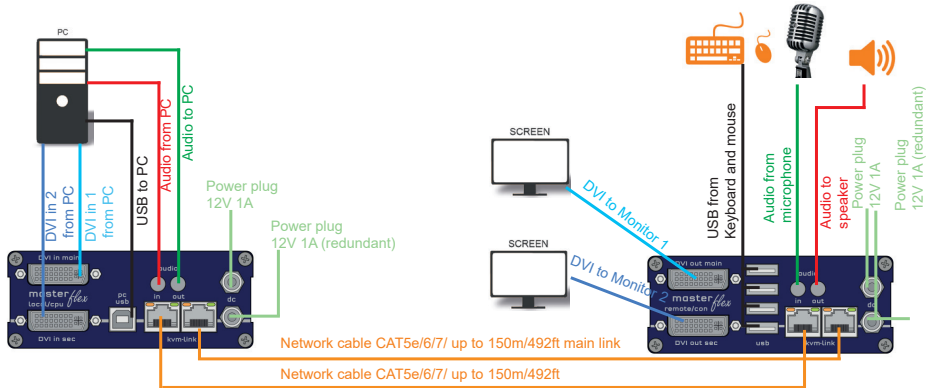

1. Connect the CON / Remote and the CPU / Local Unit to the included 12V 2A power supply.
2. Now connect the USB cable to a USB port on your PC and connect the other end of the USB cable to the CPU / Local Unit. Connect keyboard and mouse to the CON / Remote Unit.
3. Connect the CPU / Local and the CON / Remote Unit with a network cable.
4. Now connect the DVI cable to the DVI socket of the PC and the other end to the DVI socket of the CPU / Local Unit (PC-in).
5. Connect the DVI cable to the DVI socket of the PC and the other end to the DVI socket of the CON / Local Unit (PC-in 2). Then connect the monitor to the CON / Remote Unit using the DVI cable.
6. Opt: Connect PC Audio out with the audio cable to local audio/in. Connect audio/out via the audio cable
7. Almost done! Opt: Connect the audio cable local audio/out to the PC audio/in and remote audio/out with audio cable to the microphone
8. Using a switch: Connect all endpoints to the switch. Ensure that all connections have a bandwidth of 1Gbit/sec. For video sharing the network has to support IGMP snooping.

2. INSTALLATION EXTENDER


2.8 QUICKINSTALLATION MASTERFLEX SINGLE IN FIBER

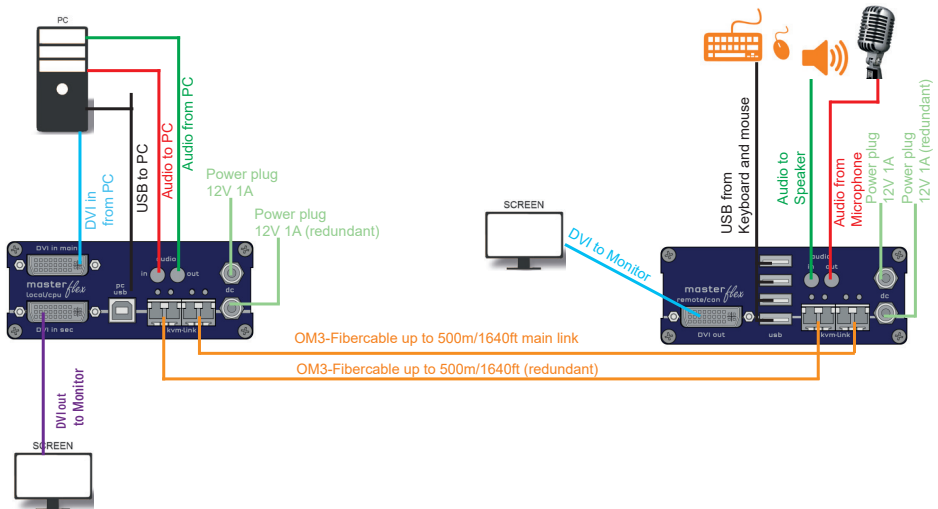

1. Connect the CON / Remote and the CPU / Local Unit to the included 12V 2A power supply.
2. Now connect the USB cable to a USB port on your PC and connect the other end of the USB cable to the CPU / Local Unit. Connect keyboard and mouse to the CON / Remote Unit.
3. Connect the CPU / Local and the CON / Remote Unit with a network cable.
4. Now connect the DVI cable to the DVI socket of the PC and the other end to the DVI socket of the CPU / Local Unit (PC-in).
5. Then connect the monitor with the DVI cable to the CON / Remote Unit.
6. Opt: Connect PC audio/out with the audio cable to local audio/in. Connect audio/out via the audio cable
7. Almost done! Opt: Connect the audio cable local audio/out to the PC audio/in and remote audio/out with audio cable to the microphone
8. Using a switch: Connect all endpoints to the switch. Ensure that all connections have a bandwidth of 1Gbit/sec. For video sharing the network has to support IGMP snooping.
9. Almost done! Connect the audio cable Local audio/out to the PC audio/in and Remote audio/out with the audio cable to the microphone

2. INSTALLATION EXTENDER

2.9 QUICKINSTALLATION MASTERFLEX DUAL IN FIBER

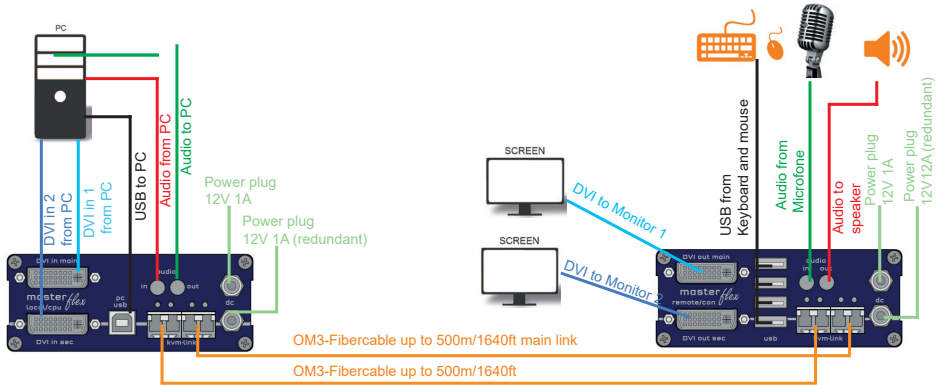


1. Connect the CON / Remote and the CPU / Local Unit to the included 12V 2A power supply.
2. Now connect the USB cable to a USB port on your PC and connect the other end of the USB cable to the CPU / Local Unit. Connect keyboard and mouse to the CON / Remote Unit.
3. Connect the CPU / Local and the CON / Remote Unit with a network cable.
4. Now connect the DVI cable to the DVI socket of the PC and the other end to the DVI socket of the CPU / Local Unit (PC-in).
5. Now connect the DVI cable to the DVI socket of the PC and the other end to the DVI socket of the CPU / Local Unit (PC-in 2). Then connect the monitor with the DVI cable to the CON / Remote Unit.
6. Connect PC audio/out with the audio cable to local audio/in. Connect audio/out via the audio cable
7. Almost done! Connect the audio cable local audio/out to the PC audio/in and remote audio/out with audio cable to the microphone
8. Using a switch: Connect all endpoints to the switch. Ensure that all connections have a bandwidth of 1Gbit/sec. For video sharing the network has to support IGMP snooping.

2. INSTALLATION EXTENDER

2.10 QUICK INSTALLATION MAXFLEX SINGLE

local / CPU – remote / CON

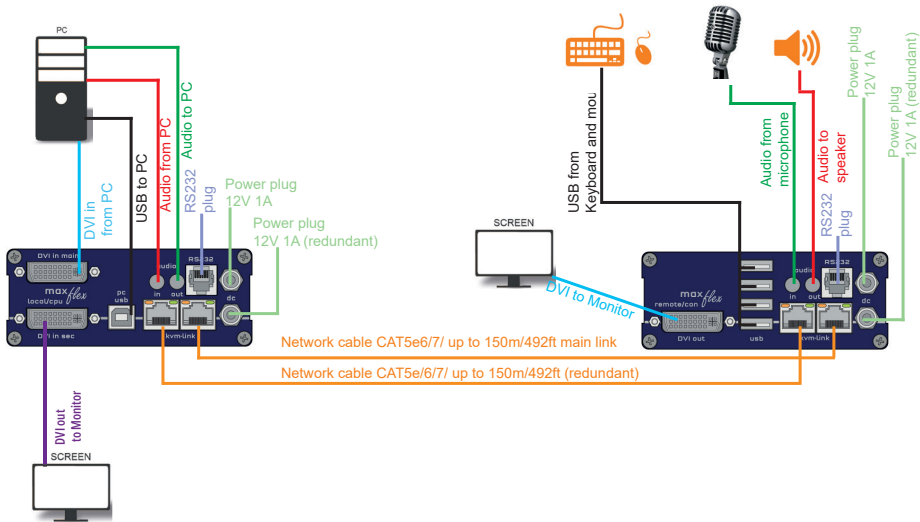


1. Connect the CON / Remote and the CPU / Local Unit to the included 12V 1A power supply.
2. Now connect the USB cable to a USB port on your PC and connect the other end of the USB cable to the CPU / Local Unit. Connect keyboard and mouse to the CON / Remote Unit.
3. Connect the CPU / Local and the CON / Remote Unit with a network cable.
4. Now connect the DVI cable to the DVI socket of the PC and the other end to the DVI socket of the CPU / Local Unit (PC-in).
5. Almost done! Connect the audio cable local audio/out to the PC audio/in and remote audio/out with audio cable to the microphone
6. Using a switch: Connect all endpoints to the switch. Ensure that all connections have a bandwidth of 1Gbit/sec. For video sharing the network has to support IGMP snooping.

2. INSTALLATION EXTENDER

2.11 QUICK INSTALLATION MAXFLEX DUAL

local / CPU – remote / CON

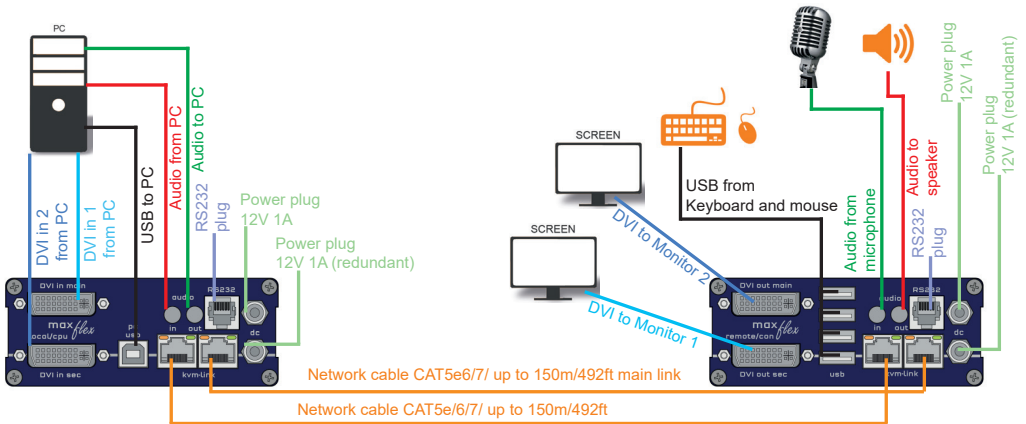


1. Connect the CON / Remote and the CPU / Local Unit to the included 12V 1A power supply.
2. Now connect the USB cable to a USB port on your PC and connect the other end of the USB cable to the CPU / Local Unit. Connect keyboard and mouse to the CON / Remote Unit.
3. Connect the CPU / Local and the CON / Remote Unit with a network cable.
4. Now connect the DVI cable to the DVI socket of the PC and the other end to the DVI socket of the CPU / Local Unit (PC-in).
5. Now connect the DVI cable to the DVI socket of the PC and the other end to the DVI socket of the CPU / Local Unit (PC-in 2). Then connect the monitor with the DVI cable to the CON / Remote Unit.
6. Connect PC audio/out with the audio cable to local audio/in. Connect audio/out via the audio cable
7. Almost done! Connect the audio cable local audio/out to the PC Audio in and remote audio/out with audio cable to the microphone
8. Using a switch: Connect all endpoints to the switch. Ensure that all connections have a bandwidth of 1Gbit/sec. For video sharing the network has to support IGMP snooping.

2. INSTALLATION EXTENDER

2.12 QUICK INSTALLATION MAXFLEX SINGLE FIBER

local / CPU – remote / CON

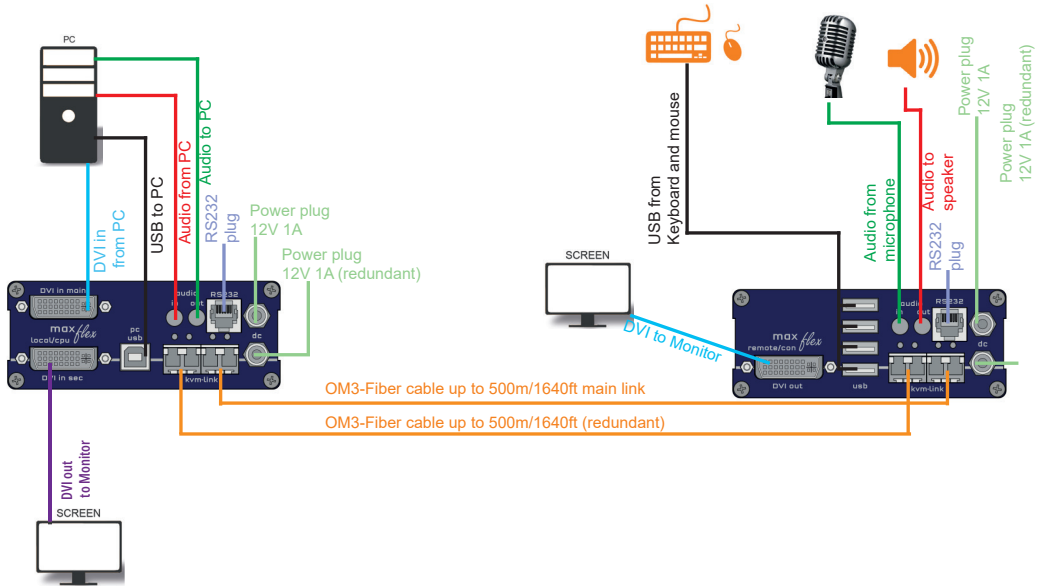


1. Connect the CON / Remote and the CPU / Local Unit to the included 12V 1A power supply.
2. Now connect the USB cable to a USB port on your PC and connect the other end of the USB cable to the CPU / Local Unit. Connect keyboard and mouse to the CON / Remote Unit.
3. Connect the CPU / Local and the CON / Remote Unit with a network cable.
4. Now connect the DVI cable to the DVI socket of the PC and the other end to the DVI socket of the CPU / Local Unit (PC-in).
5. Connect PC audio/out with the audio cable to local audio/in. Connect audio/out via the audio cable.
6. Almost done! Connect the audio cable local audio/out to the PC audio/in and remote audio/out with audio cable to the microphone
7. Using a switch: Connect all endpoints to the switch. Ensure that all connections have a bandwidth of 1 Gbit/sec. For video sharing the network has to support IGMP snooping.

2. INSTALLATION EXTENDER

2.13 QUICK INSTALLATION MAXFLEX DUAL FIBER

local / CPU – remote / CON

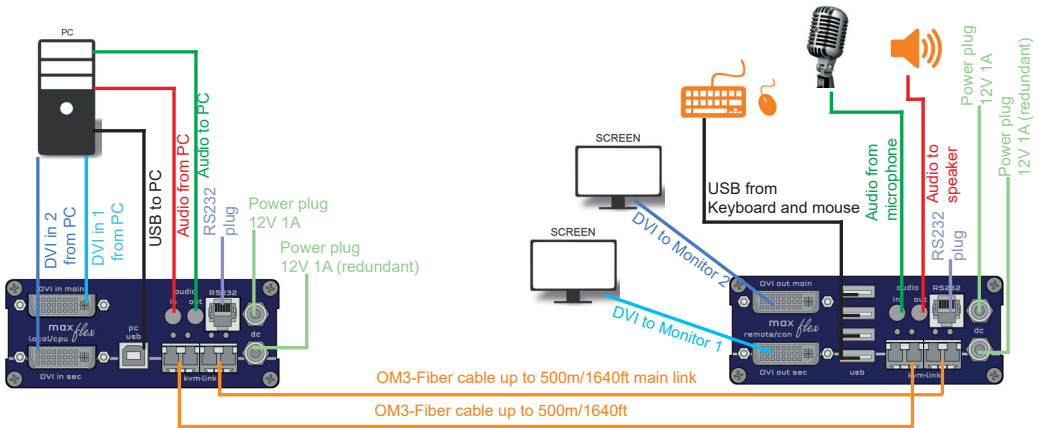


1. Connect the CON / Remote and the CPU / Local Unit to the included 12V 1A power supply.
2. Now connect the USB cable to a USB port on your PC and connect the other end of the USB cable to the CPU / Local Unit. Connect keyboard and mouse to the CON / Remote Unit.
3. Connect the CPU / Local and the CON / Remote Unit with a network cable.
4. Now connect the DVI cable to the DVI socket of the PC and the other end to the DVI socket of the CPU / Local Unit (PC-in).
5. Now connect the DVI cable to the DVI socket of the PC and the other end to the DVI socket of the CPU / Local Unit (PC-in 2). Then connect the monitor with the DVI cable to the CON / Remote Unit.
6. Connect PC audio/out with the audio cable to local audio/in. Connect audio/out via the audio cable
7. Almost done! Connect the audio cable local audio/out to the PC audio/in and remote audio/out with audio cable to the microphone
8. Using a switch: Connect all endpoints to the switch. Ensure that all connections have a bandwidth of 1Gbit/sec. For video sharing the network has to support IGMP snooping.

2. INSTALLATION EXTENDER

2.14 QUICK INSTALLATION INDUSTRYFLEXLINE SINGLE

local / CPU – remote / CON

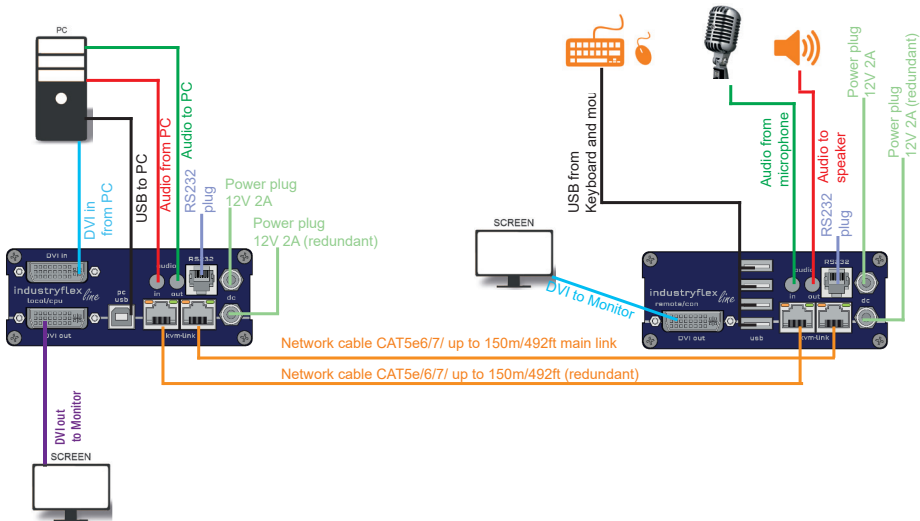


1. Connect the CON / Remote and the CPU / Local Unit to the included 12V 2A power supply.
2. Now connect the USB cable to a USB port on your PC and connect the other end of the USB cable to the CPU / Local Unit. Connect keyboard and mouse to the CON / Remote Unit.
3. Connect the CPU / Local and the CON / Remote Unit with a network cable.
4. Now connect the DVI cable to the DVI socket of the PC and the other end to the DVI socket of the CPU / Local Unit (PC-in).
5. Almost done! Connect the audio cable local audio/out to the PC audio/in and remote audio/out with audio cable to the microphone
6. Using a switch: Connect all endpoints to the switch. Ensure that all connections have a bandwidth of 1Gbit/sec. For video sharing the network has to support IGMP snooping.

2. INSTALLATION EXTENDER

2.15 QUICK INSTALLATION INDUSTRYFLEXLINE SINGLE FIBER


local / CPU – remote / CON

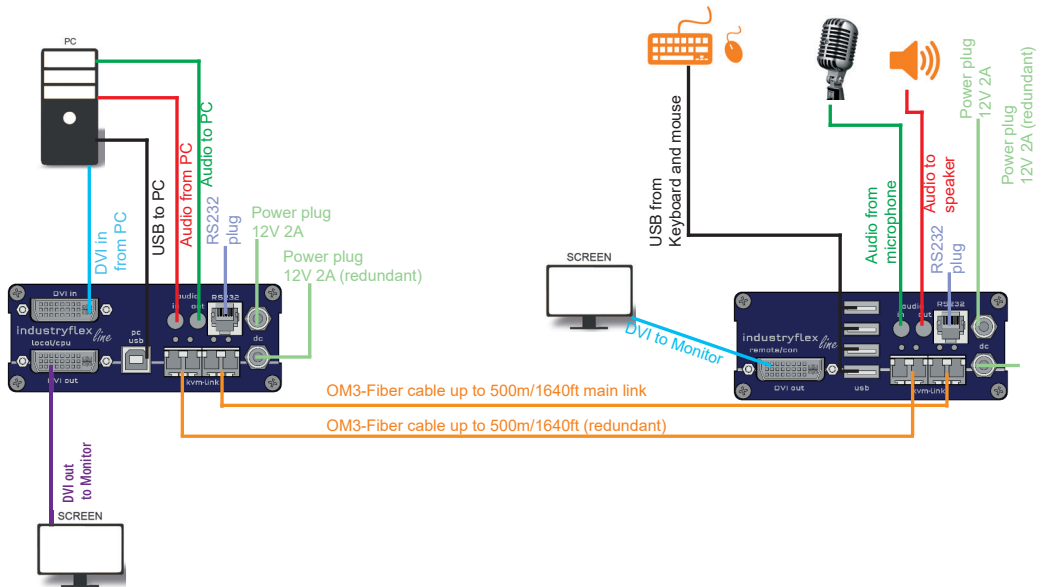

1. Connect the CON / Remote and the CPU / Local Unit to the included 12V 2A power supply.
2. Now connect the USB cable to a USB port on your PC and connect the other end of the USB cable to the CPU / Local Unit. Connect keyboard and mouse to the CON / Remote Unit.
3. Connect the CPU / Local and the CON / Remote Unit with a network cable.
4. Now connect the DVI cable to the DVI socket of the PC and the other end to the DVI socket of the CPU / Local Unit (PC-in).
5. Connect PC audio/out with the audio cable to local audio/in. Connect audio/out via the audio cable.
6. Almost done! Connect the audio cable local audio/out to the PC audio/in and remote audio/out with audio cable to the microphone
7. Using a switch: Connect all endpoints to the switch. Ensure that all connections have a bandwidth of 1 Gbit/sec. For video sharing the network has to support IGMP snooping.

2. INSTALLATION EXTENDER

2.16 QUICKINSTALLATION USBFLEX SINGLE COPPER

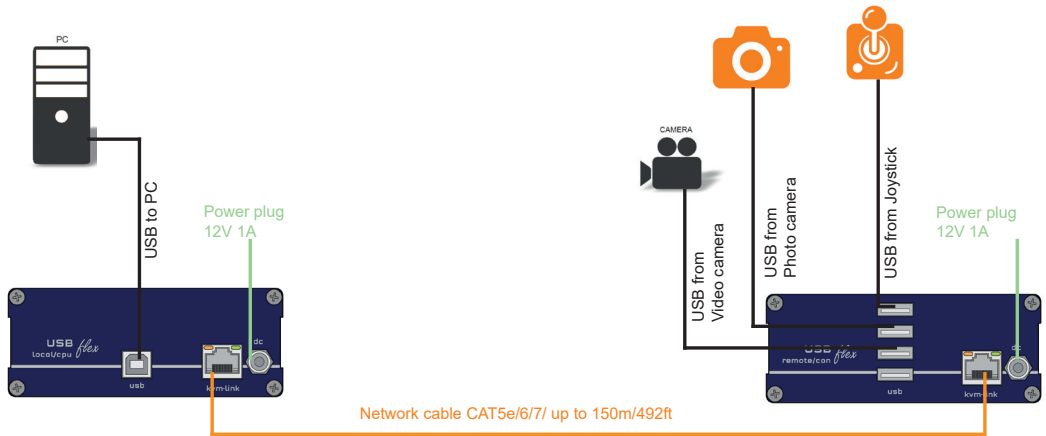


Quick Installation USBflex local / CPU – remote/ CON

1. Connect the CON / Remote and the CPU / Local Unit to the included 12V 1A power supply.
2. Now connect the USB cable to a USB port on your PC and connect the other end of the USB cable to the CPU / Local Unit. Connect some USB devices to the CON / Remote Unit.
3. Connect the CPU / Local and the CON / Remote Unit with a network cable.

HAVE FUN - your kvm-tec Extender is now in use for many years (MTBF approx 10 years)

2. INSTALLATION EXTENDER

2.17 QUICKINSTALLATION USBFLEX SINGLE FIBER

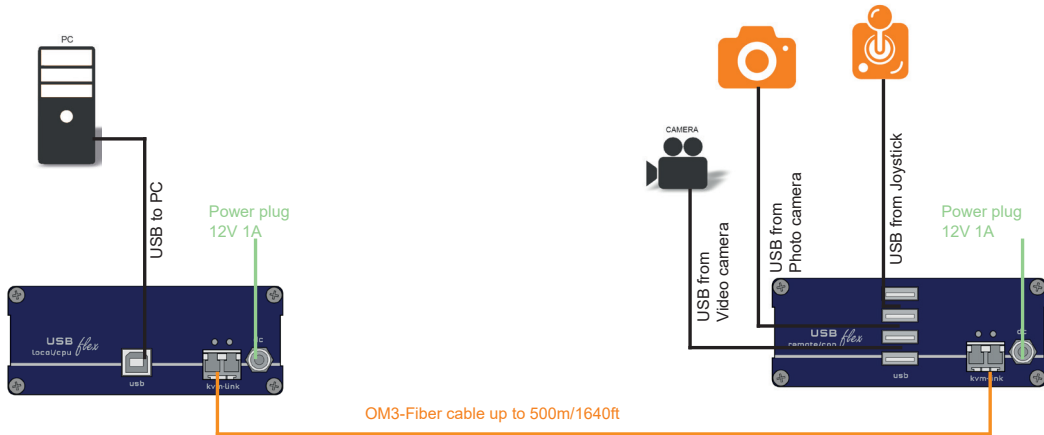

Quick Installation USBflex Fiber local / CPU – remote/ CON

1. Connect the CON / Remote and the CPU / Local Unit to the included 12V 1A power supply.
2. Now connect the USB cable to a USB port on your PC and connect the other end of the USB cable to the CPU / Local Unit. Connect some USB devices to the CON / Remote Unit.
3. Connect the CPU / Local and the CON / Remote Unit with a network cable.

HAVE FUN - your kvm-tec Extender is now in use for many years (MTBF approx 10 years)

2. INSTALLATION EXTENDER

2.18 START UP

To start up the system without switch:


1. Make sure that the two monitors and the computer are switched on.
2. If you are using a Network Switch, connect the power supply to an earthed wall socket.
3. Connect both extender **power supplies (C)** to an earthed wall socket. Both extenders will start an initialisation process. The red status LED blinks a few seconds. After a few seconds the status LED lights green. The monitor will display your computer's desktop or any open applications.

2.19 REPLACING THE SFP MODULE

The Flexline-F is delivered with a multimode SFP module.

To replace an SFP module with a different SFP module:

1. Remove the black dust protector from the SFP module.
2. Pull the metal latch of the SFP module forwards until it is at a right angle.
3. Replace the SFP module with the other module. Put the metal latch back in position. Only use SFP modules from `kvm-development`, or recommended by `kvm-development`.

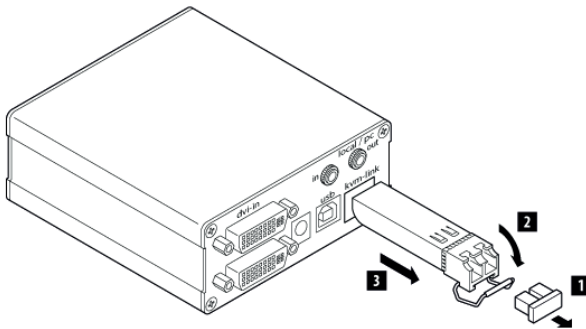


2. INSTALLATION EXTENDER

2.20 REMOVING A CATx CABLE

To remove a CATx cable:


- Press the latch down and slowly pull the cable out.

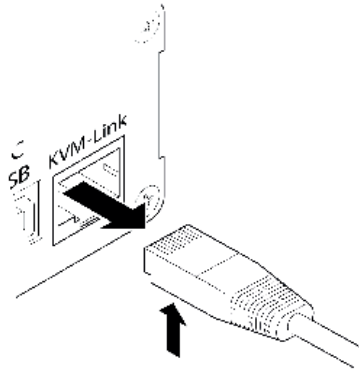

2.21 REMOVING A FIBER CABLE

To remove a fiber cable:



- Press the latch down and slowly pull the cable out.

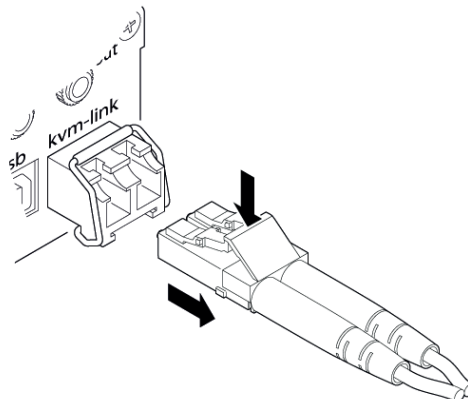



2. INSTALLATION EXTENDER

2.22 BEST PRACTICE FOR WINDOWS 10



Disable USB Energy Savings in Windows 10

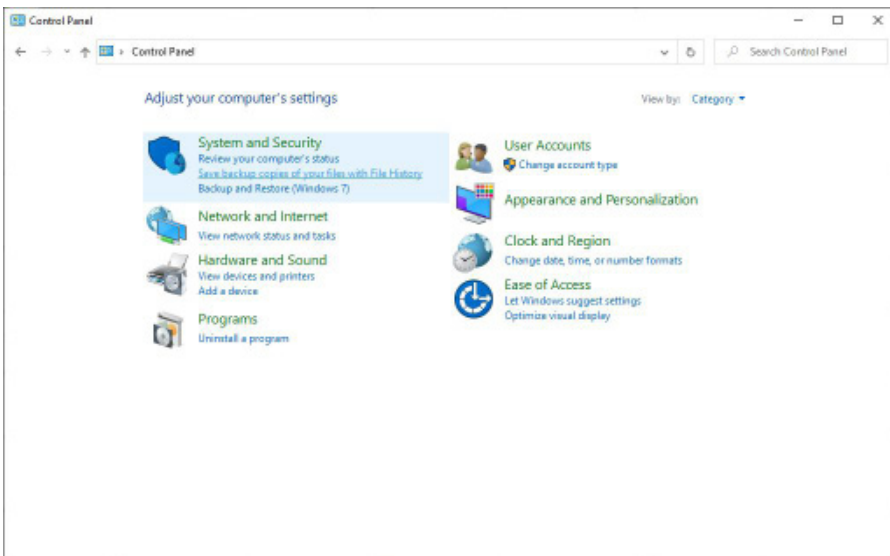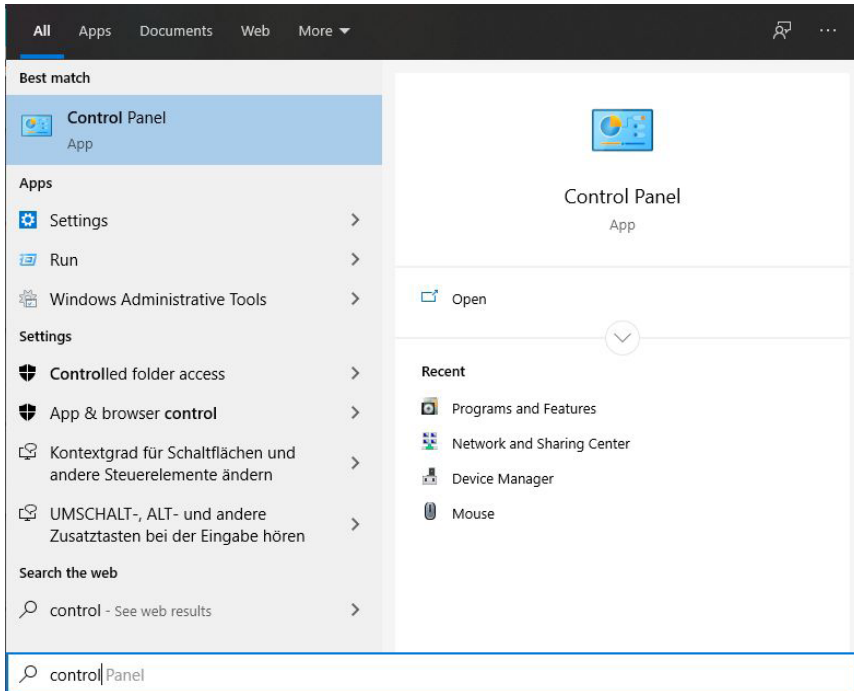

2. INSTALLATION EXTENDER

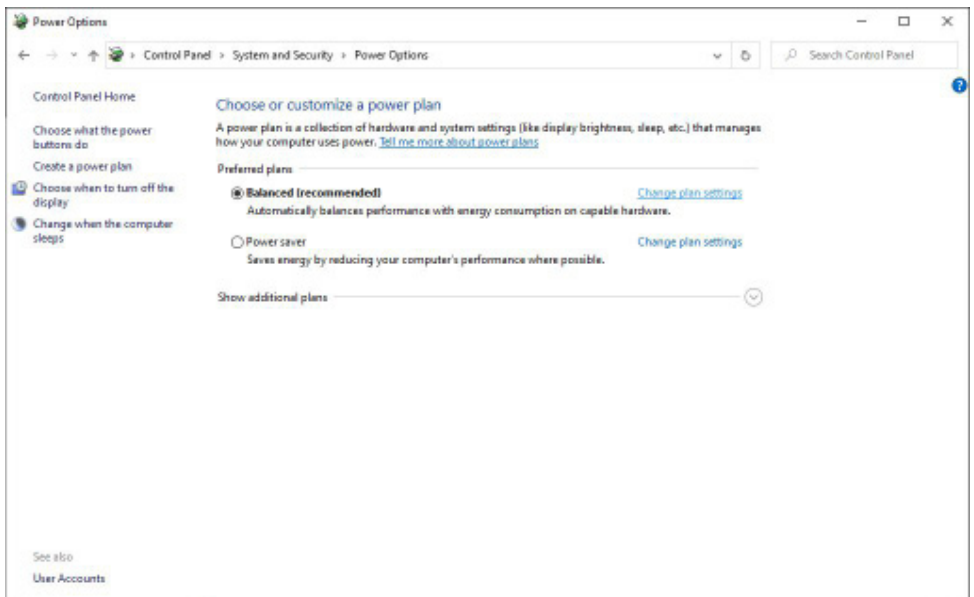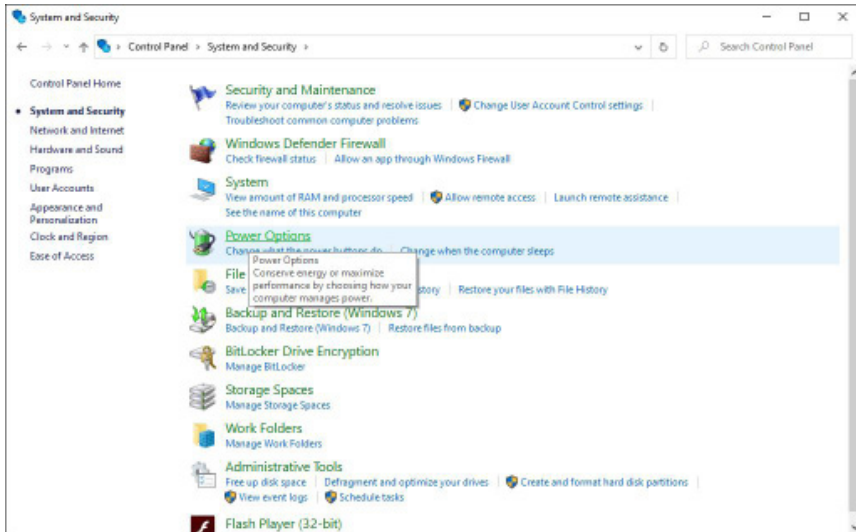

2. INSTALLATION EXTENDER

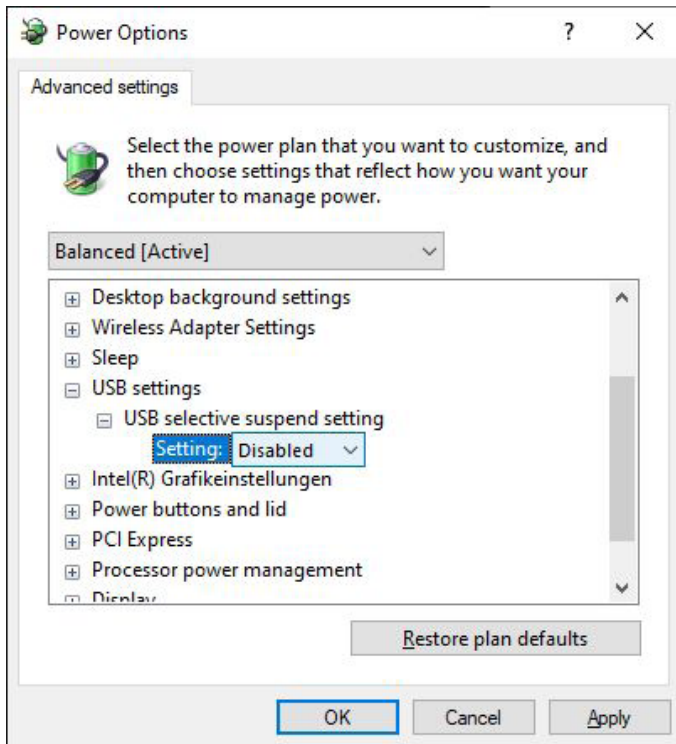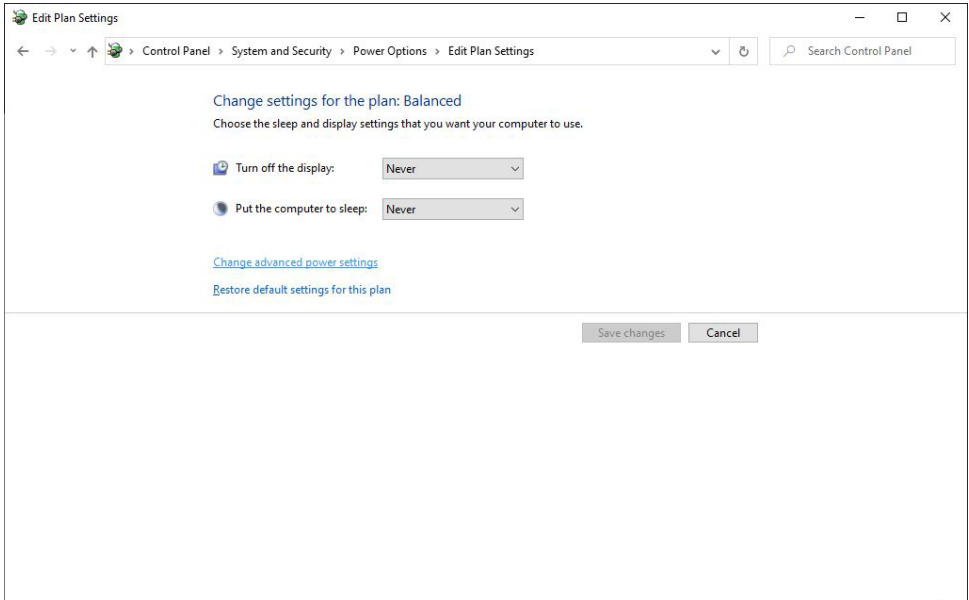


3. EXTENDER SETTINGS

3.1ACCESS TO THE MAIN MENU

Use the monitor and keyboard to access the main menu

Access to the main menu (main menu):

- 1. Make sure the extenders, monitors and computers are turned on.
- 2. Press the Alt Gr key five times quickly. The **main menu** and an overview of the an overview of the submenus is displayed.
- 3. To enter a submenu, press the corresponding key.

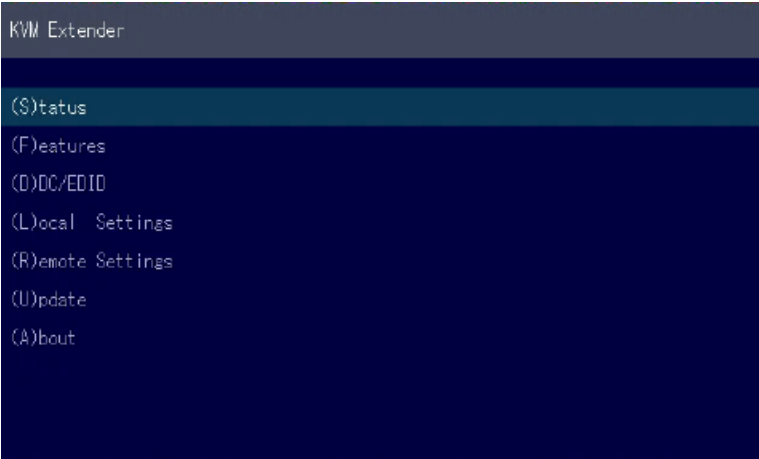


Main Menu

Main menu Short Cuts :


S	Status Overview	Status menu / current status
F	Features Overview	Features settings
D	DDC Option	DDC Option Fixed Setting 1020 x 1080
L	Local Settings	Settings Local
R	Remote Setting	Settings Remote
U	Update Flash FW	Update firmware
A	About Overview	Upgrade overview
L	Link redundancy	for single units
Q	Exit	Finish

3. EXTENDER SETTINGS

3.2 SYSTEM STATUS

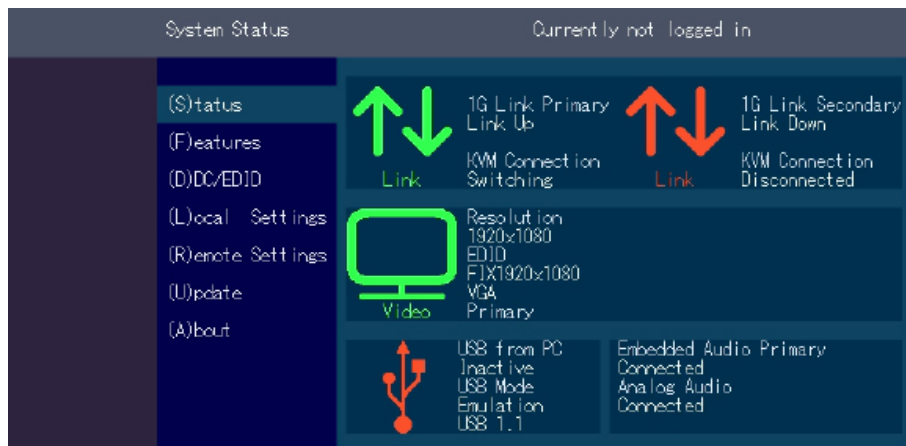

Single

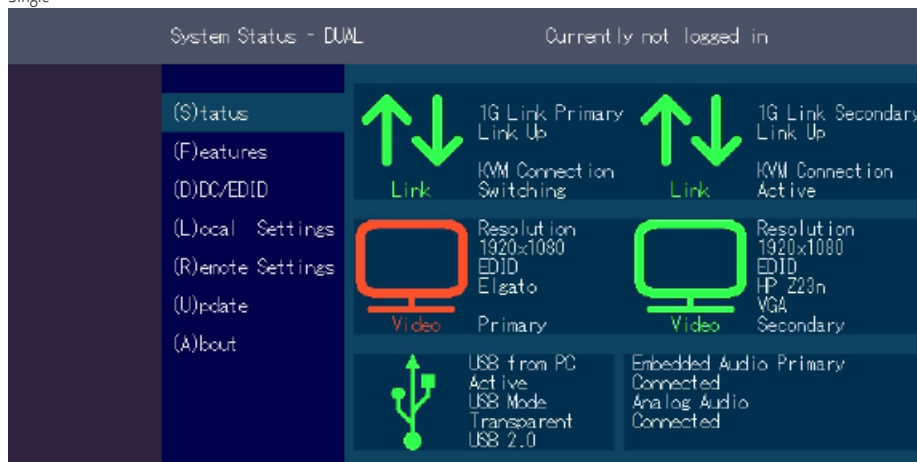

Dual

In the status overview menu the current status of the extender connection is displayed. It provides information on the connection itself as well as resolution of the video channel, and USB-status.

The enabled options and the current firmware-version is displayed in the left top corner.

Link status shows whether there is a physical connection available. **Connected** indicates if kvm data is currently able to be transmitted.

Video and USB show if data is currently being transmitted.


3. EXTENDER SETTINGS

3.2 FIRMWARE VERSION DISPLAY

Make sure that the main menu is open. Under „A“ - About the currently installed firmware version of the remote (CON) and local (CPU) extender is displayed (e.g. ,4267“).

3.3 FEATURES MENU

Press the F key to enter the Features menu.

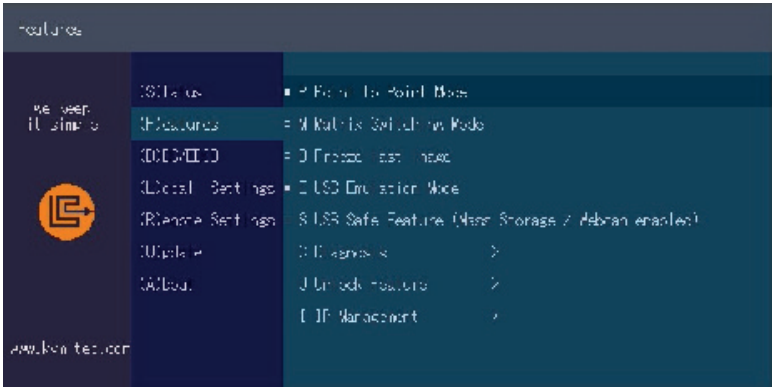

Features Menu


P	Point to Point Mode	Enabled/Disabled (Point to Point excludes itself with Matrix mode)
M	Matrix Switching Mode	Disabled/Enabled
D	Freeze last Image	(Disabled)Disabled/Enabled
E	USB Emulation Mode	(Disabled) Disabled/Enabled
S	USB Save Feature	(mass storage usable) Disabled/Enabled
C	Diagnosis	Diagnostic menu
U	Unlock Features	Activate features
I	IP Management	IP Management
L	Link redundancy	for single units

3. EXTENDER SETTINGS

3.4.1 POINT TO POINT

You can switch the Point to Point mode on and off by pressing the „P“ key

ATTENTION - if the point to point mode is activated, the switching mode cannot be activated

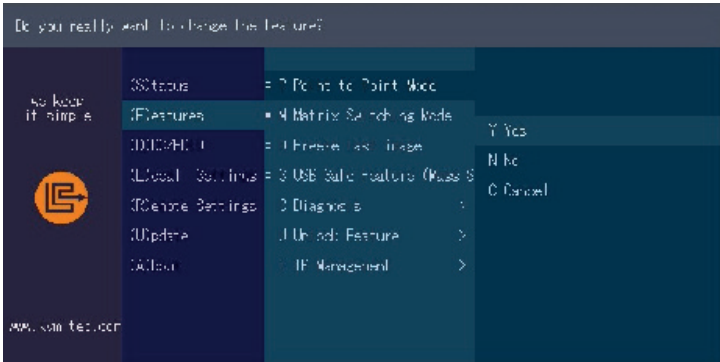

3.4.2 MATRIX SWITCHING MODE

By pressing the „M“ button you can switch the Matrix Switching Mode off and on

3.4.3 USB SAVE FEATURE

The kvm-tec feature „USB save“ prevents the intrusion of viruses via the USB interface by deactivating mass storage devices.

By pressing the key „S“ you can switch the USB save feature on and off

3. EXTENDER SETTINGS

3.4.4 DISPLAY THE LAST RECEIVED IMAGE „FREEZE LAST IMAGE“

With the „freeze the last image“ function, the last image received can be displayed instead of a black screen when the remote extender (CON) is disconnected from the local extender (CPU). To show that it is the last image received, the frame of the image will blink red.

To enable or disable the „Freeze last image „ function: 1. from the Extender Settings menu,


press the **F** button. The Feature Settings menu is displayed.

Press the **D** button to enable or disable the function.

Press **ESC** to return to the main menu.

Press **I** to enable or disable the function.

Press **ESC** to return to the main menu

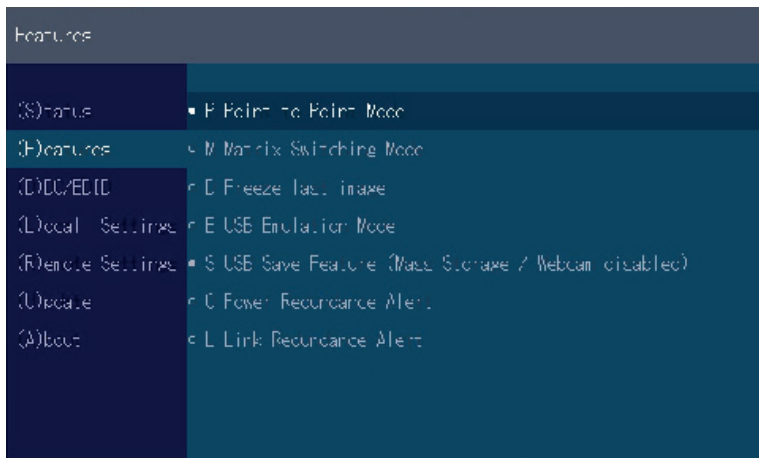

3. EXTENDER SETTINGS

3.4.5 USB EMULATION MODE

When this mode is set, the local extender emulates a keyboard and mouse always connected to the PC. The result is switching from one PC to another PC without any switching delay. Emulation Mode is restricted to mouse and keyboard only.

3.4.6 POWER REDUNDANCE ALERT AND LINK REDUNDANCE ALERT

Our Masterflex and Maxflex single devices are redundant. Should one port fail, the other port immediately takes over. In such a case you will receive an alarm and can see which port has failed.

Power Redundance Alert (Only for devices with two DC sockets):

„SEC POWER LOST“ / „PRIM POWER LOST“


Link Redundance Alert (Only for single devices with two RJ45 jacks):

„PRIM LINK LOST“ / „SEC LINK LOST“ / „BOTH LINK LOST“

Oder

„SEC LINK ERROR“ with active redundancy


„PRIM LINK ERROR“ with active redundancy.

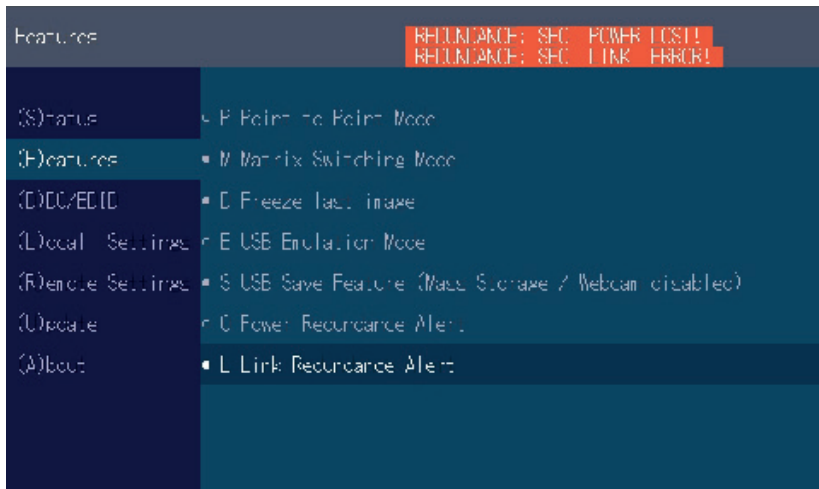


3. EXTENDER SETTINGS

3.4.7 DIAGNOSIS MENU

In the Diagnosis menu, the runtimes of the individual connected channels are displayed. Both Remote Unit and Partner Local Unit are listed.

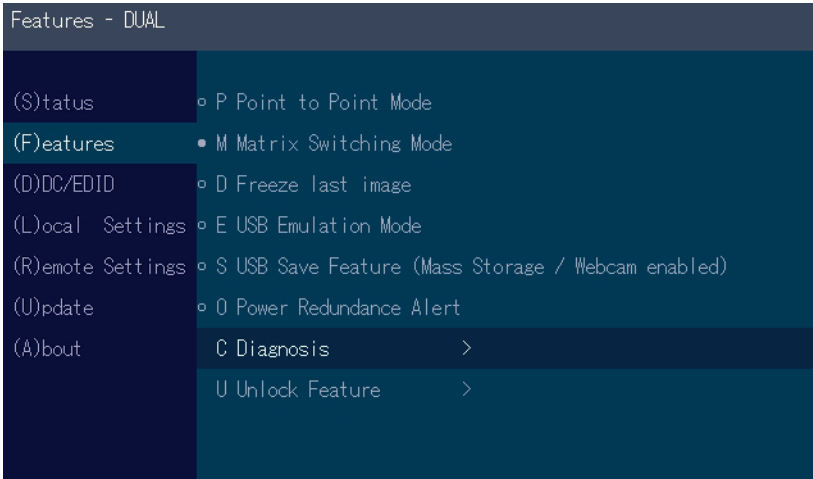

Additionally you get the CPU temperature information of both units.
Another feature is the cable test

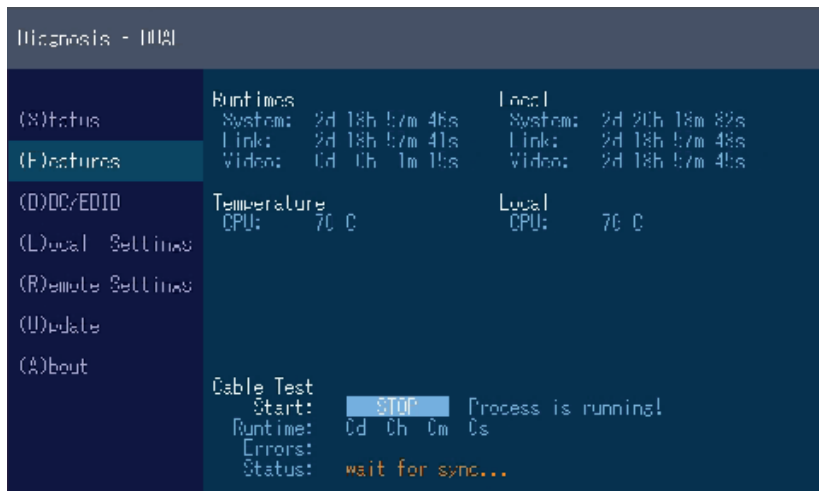

3. EXTENDER SETTINGS

As soon as a connection to the partner has been established, the test can be started with the „Enter“ key or the arrow key on the right „→“.

After a valid synchronization process, the test is started and the test run time and errors are displayed.

Diagnosis - HDA			
(S)tatus	Run times	Local	
(F)eatures	System: 2c 18h 57m 58s	System: 2d 20h 18m 38s	
	Link: 2c 18h 57m 48s	Link: 2d 18h 54m 50s	
	Video: 0c 0h 1m 22s	Video: 2d 18h 54m 52s	
(D)DC/EDID	Temperature	Local	
(L)ocal Settings	CPU: 70 C	CPU: 76 C	
(R)emote Settings			
(U)pdate			
(A)bort			
	Cable Test		
	Start: STOP	Process is running!	
	Runtime: 0d 0h 0m 7s		
	Errors: 0		
	Status: Check Errors...		

The test can be ended at any time by pressing the “Enter” or “→” key. If no error has occurred, the status reports: “Test OK! If errors occurred during the test, the status displays the sum of all errors that occurred.


Diagnosis - HDA			
(S)tatus	Run times	Local	
(F)eatures	System: 2d 18h 57m 58s	System: 2d 20h 18m 42s	
	Link: 2d 18h 57m 51s	Link: 2d 18h 57m 53s	
	Video: 0d 0h 1m 28s	Video: 2d 18h 57m 55s	
(D)DC/EDID	Temperature	Local	
(L)ocal Settings	CPU: 70 C	CPU: 76 C	
(R)emote Settings			
(U)pdate			
(S)top			
	Cable Test		
	Start: RUN	(Press Enter or Right-Key)	
	Runtime: 0d 0h 0m 0s		
	Errors: 0		
	Status: Test OK!		

3. EXTENDER SETTINGS

3.5 DDC MENU

The DDC Information menu allows the user to specify which DDC information is used by the PC.
Definition of the DDC information used by the PC:

- 1. make sure that the main menu is open.
Press the D button and the DDC option menu will be displayed.
 - Press 0 to display the DDC information of the monitor connected to the remote (CON)
Extender is connected.
 - Press 2 to save the current DDC information. The system will
applies the same settings after restarting the Extender
 - Press the keys 4 to 8 to use a predefined resolution, which
is saved.
- 3. press ESC to return to the main menu

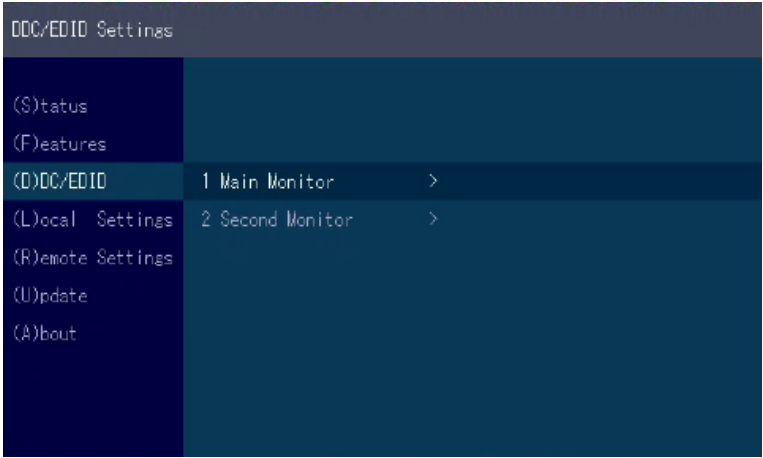

3. EXTENDER SETTINGS

3.5.1 DDC MAIN (SINGLE)

DDC/EDID Settings Main		
(S)tatus		Current Setting Remote Main
(F)eatures		
(D)DC/EDID	1 Main Monitor >	1 Remote Main
(L)ocal Settings	2 Second Monitor >	2 Set current DDC as fixed
(R)emote Settings		3 FIX 640 × 480
(U)pdate		4 FIX 1024 × 768
(A)bout		5 FIX 1280 × 1024
		6 FIX 1680 × 1050
		7 FIX 1920 × 1080
		8 FIX 1920 × 1200

3. EXTENDER SETTINGS

3.5.2 DDC SECOND (DUAL)

DDC/EDID Settings Second		
(S)tatus		Current Setting Remote Second
(F)eatures		
(D)DC/EDID	1 Main Monitor >	1 Remote Second
(L)ocal Settings	2 Second Monitor >	2 Set current DDC as fixed
(R)emote Settings		3 FIX 640 × 480
(U)pdate		4 FIX 1024 × 768
(A)bout		5 FIX 1280 × 1024
		6 FIX 1680 × 1050
		7 FIX 1920 × 1080
		8 FIX 1920 × 1200


3. EXTENDER SETTINGS

3.6 EXTENDER SETTINGS

The Extender Settings menu allows the user to change a number of other settings. Select one of the three options (VGA, Audio and RS232) to enter the submenu. The other four can be activated or deactivated by pressing the corresponding button.

Display the Extender Settings menu:


1. Make sure that the main menu is open.
2. Press the L button. The Local Settings menu is displayed.
3. Press the R button. The Remote Settings menu is displayed.

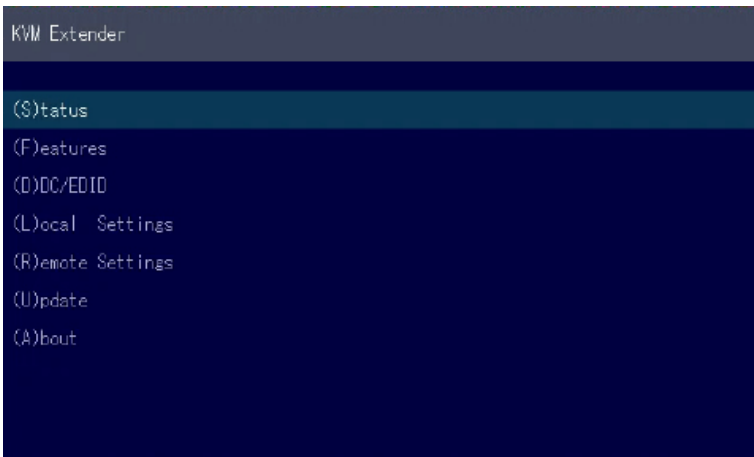

3. EXTENDER SETTINGS

3.6.1 LOCAL SETTINGS

View the local or remote Extender settings:
- Press the L button to display the Local Setting menu.

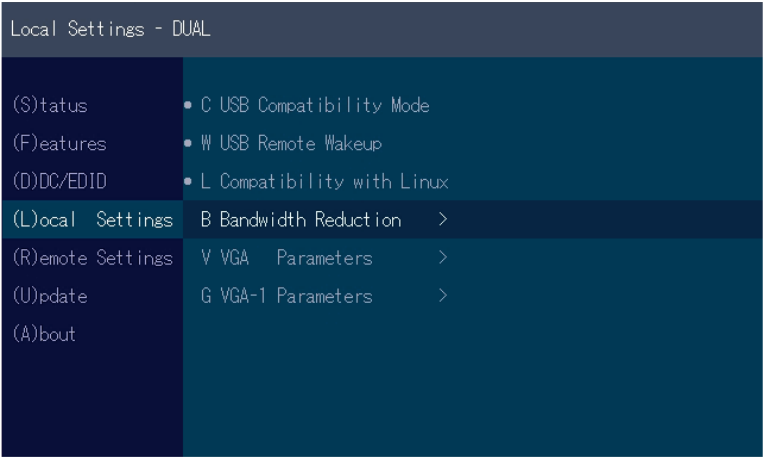

View the local or remote Extender settings:
- Press the L button to display the Local Setting menu.

C	USB Compatibility Mode	Disabled/Enabled
W	USB Remote Wakeup	Disabled/Enabled
L	Compatibility with Linux	Disabled/Enabled
B	Bandwidth Reduction	
V	VGA Parameters	
G	VGA-1 Parameters	

3. EXTENDER SETTINGS

3.6.2 USB COMPATIBILITY MODE



Some PC's require a USB FullSpeed (USB 1.1) connection at startup. Our extenders are detected as USB HUB's - this may cause some PC's to abort the boot process. This can be avoided with the USB Compatibility Mode.

The USB compatibility mode can be enabled or disabled. To enable / disable the USB compatibility mode

1. From the Extender Settings menu, press the L key: The LOCAL SETTINGS menu appears
2. Press the U key to enable or disable the USB compatibility mode

Local Settings - DUAL		
(S)tatus	• C USB Compatibility Mode	
(F)eatures	• W USB Remote Wakeup	
(D)DC/EDID	• L Compatibility with Linux	
(L)ocal Settings	B Bandwidth Reduction	>
(R)emote Settings	V VGA Parameters	>
(U)pdate	G VGA-1 Parameters	>
(A)bout		

3. EXTENDER SETTINGS

3.6.3. USB REMOTE WAKE UP

The PC can be set into sleep mode and can be reactivated with any key.

Local Settings - DUAL		
(S)tatus	• C USB Compatibility Mode	
(F)eatures	• W USB Remote Wakeup	
(D)DC/EDID	• L Compatibility with Linux	
(L)ocal Settings	B Bandwidth Reduction	>
(R)emote Settings	V VGA Parameters	>
(U)pdate	G VGA-1 Parameters	>
(A)bout		

3. EXTENDER SETTINGS

3.6.4 COMPATIBILITY WITH LINUX

Older Linux (before 2010) versions may not recognize the keyboard.
In this case please activate the Linux compatibility mode

Local Settings - DUAL		
(S)tatus	• C USB Compatibility Mode	
(F)eatures	• W USB Remote Wakeup	
(D)DC/EDID	• L Compatibility with Linux	
(L)ocal Settings	B Bandwidth Reduction	>
(R)emote Settings	V VGA Parameters	>
(U)pdate	G VGA-1 Parameters	>
(A)bout		

3.6.5 BANDWIDTH REDUCTION

Here the bandwidth can be reduced. The basic setting is 0!
You can change the bandwidth with +/- or u/d.

Bandwidth Settings - DUAL		
(S)tatus	• C USB Compatibility Mode	
(F)eatures	• W USB Remote Wakeup	
(D)DC/EDID	• L Compatibility with Linux	
(L)ocal Settings	B Bandwidth Reduction	>
(R)emote Settings	V VGA Parameters	>
(U)pdate	G VGA-1 Parameters	>
(A)bout		

Bandwidth Reduction
value: 0

Use (+/-) for value change
or (u/d) for value change

3. EXTENDER SETTINGS

3.6.6 VGA PARAMETERS


The VGA settings can be adjusted and optimized.

Optimize the VGA settings:

1. press the **L** button in the Extender Settings menu. The Local Settings menu is displayed.


Press the **V**. The VGA menu will be displayed

- Pressing **F1** moves the display range upwards.
- Pressing **F4** moves the display range down.
- Pressing **F2** moves the display range to the left.
- Pressing **F3** moves the display area to the right.
- Pressing **F5** reduces the image (zoom out).
- Pressing **F6** enlarges the image (zoom in).
- Pressing the space bar changes the speed of the above mentioned settings.
The speed can be switched between 1 and 10.
- Pressing M switches the video mode between the following modes:
 - Auto - the mode is automatically detected and set by the Extender.
 - DVI - only the DVI input is recognized.
 - VGA - only the VGA input is recognized
- Press K to automatically adjust and position the screen area.
- Press I to reset the parameters to the default values.
- Press S to save the settings and exit the menu.
- Press Q to exit without saving.

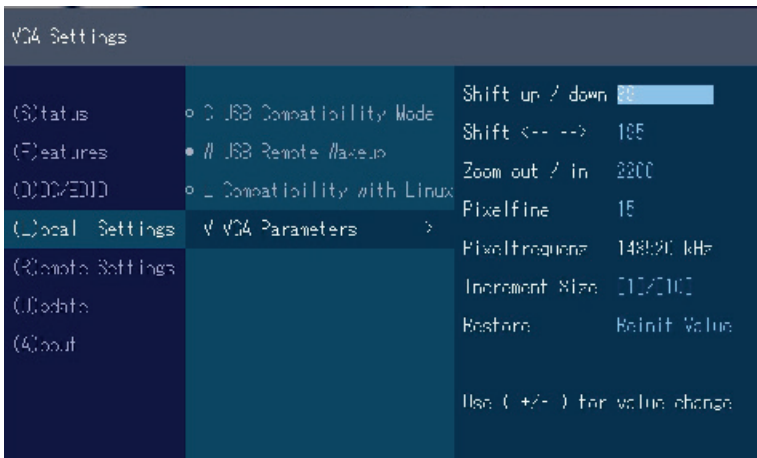

VGA Parameters


3. EXTENDER SETTINGS

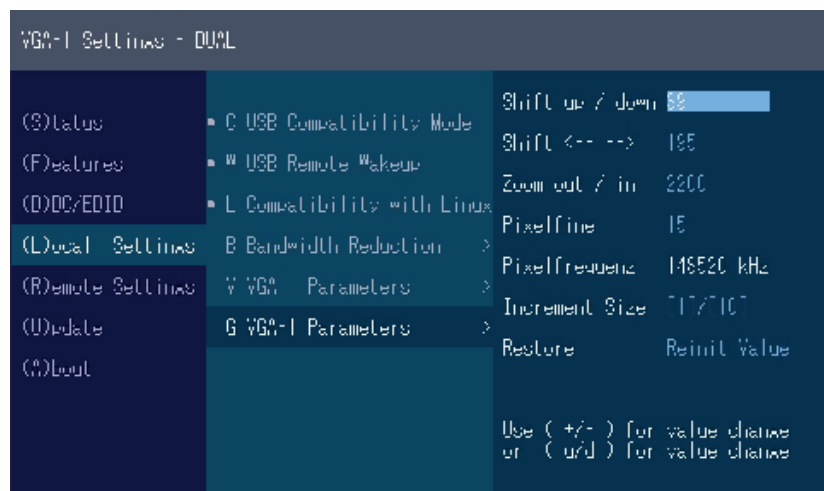

VGA-1 Parameters

3.7 REMOTE SETTINGS

- Press the **R** button to display the Remote Setting menu.

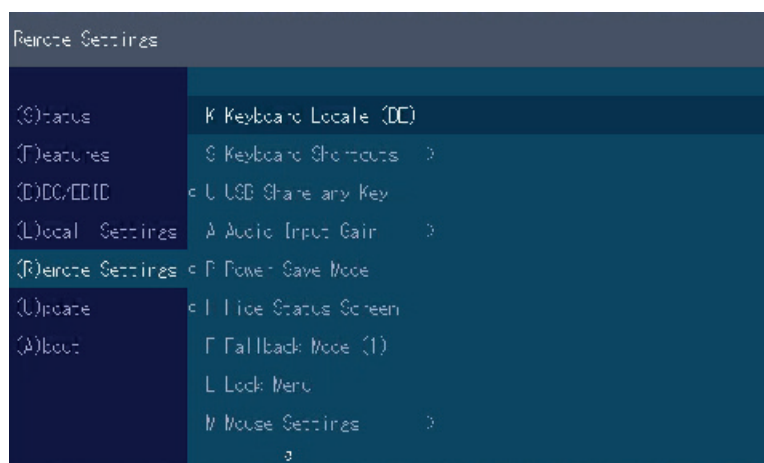


3. EXTENDER SETTINGS

3.7.1 EDITING A KEYBOARD LAYOUT

The **Keyboard Local** menu lets you switch between keyboard layouts for navigating the on screen display menu (OSD). You can choose between French (FR), English (EN) and German (DE).

Selecting a keyboard layout:

1. Press **R** in the **Main menu**. The **Remote Settings** menu appears.
2. Press the **K** key. The **Keyboard Locale** menu opens:
 - Press **E** to select English (QWERTY)
 - Press **D** to select German (QWERTZ)
 - Press **F** to select French (AZERTY)

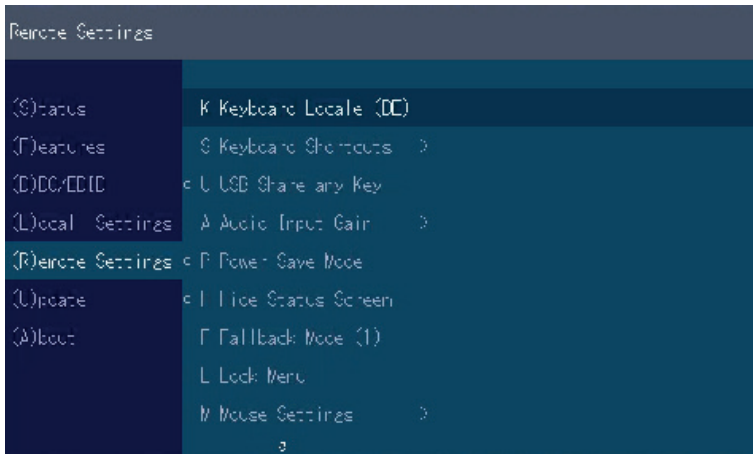

3. EXTENDER SETTINGS

3.7.2 EDITING KEYBOARD SHORTCUTS

You can change the keyboard shortcuts for common commands. You can choose your scroll speed. Edit shortcuts and change scroll speed on the Keyboard Shortcuts screen.

To edit the shortcuts:

1. From the **Extender Settings** menu, press the **R** key. The **Remote Settings** menu appears.
2. Press the **H** key. The **Keyboard Shortcuts** menu opens.
3. Use the arrows to select a command.
4. Press **E** to edit the shortcut.

To edit:

Press a single key. Edit the frequency with left and right arrows.

OR -

Press a key combination

Keyboard Shortcuts			ENTER to Edit
(S)tatus	K Keyboard Locale (DE)		M Main Menu
(F)eatures	S Keyboard Shortcuts >		L Device List
(D)DC/EDID	U USB Share and Key		S Status
(L)ocal Settings	A Audio Input Gain >		D Disconnect
(R)emote Settings	P Power Save Mode		F Favourites Prefix
(U)pdate	H Hide Status Screen		U USB Sharing
(A)bout	F Fallback Mode (1)		H Share List
	L Lock Menu		L Logout
	M Mouse Settings >		5x <SCROLLLOCK>

Keyboard Shortcuts - DUAL			ENTER to Edit
(S)tatus	K Keyboard Locale (DE)		M Main Menu
(F)eatures	S Keyboard Shortcuts >		L Device List
(D)DC/EDID	U USB Share and Key		S Status
(L)ocal Settings	A Audio Input Gain >		D Disconnect
(R)emote Settings	P Power Save Mode		F Favourites Prefix
(U)pdate	H Hide Status Screen		U USB Sharing
(A)bout	F Fallback Mode (1)		H Share List
	L Lock Menu		L Logout
	M Mouse Settings >		5x <SCROLLLOCK>


3. EXTENDER SETTINGS

3.7.3 SETTING THE AUDIO VOLUME

The volume of the audio input (microphone) on the remote unit can be changed. The default value is 5 but can be set to any value in between 0 and 9. At 0 the audio input on the remote unit is disabled.

Setting the volume:

1. From the **Extender Settings** menu, press the **R** key. The **Remote Settings** menu appears.
2. Press the **A** key. The **Audio Input Gain** menu appears.
Press arrow left / right to change volume
Press arrow up / down to set direction

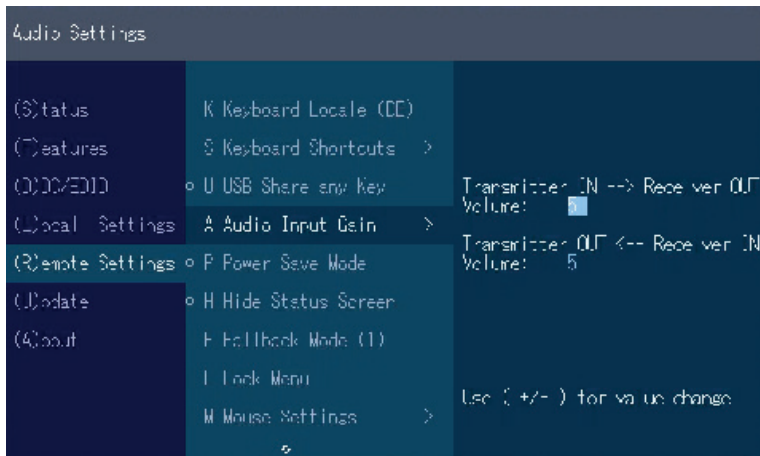

3. EXTENDER SETTINGS

3.7.4 SETTING A BAUD RATE FOR YOUR RS232 CONNECTION

RS232 Baudrate Settings		
(S)tatus	K Keyboard Locale (DE)	Current Baudrate any below
(F)eatures	S Keyboard Shortcuts >	
(D)DC/EDID	U USB Share any Key	1 any below
(L)ocal Settings	A Audio Input Gain >	2 4800
(R)emote Settings	R RS232 Settings >	3 9600
(U)pdate	P Power Save Mode	4 19200
(A)bout	H Hide Status Screen	5 38400
	F Fallback Mode (0)	6 57600
	L Lock Menu	7 115200
		8 230400

Setting the baud rate with activated RS232 upgrade

1. In the extender settings menu, press the **R** button. The Remote Settings Menu is displayed.
2. Press the **R** button. 2. The Baud Rate menu is displayed.
3. To select a baud rate, press the **corresponding key**.
4. The **Enter Parity menu** opens.
5. Press the **appropriate button** to select a parity

3. EXTENDER SETTINGS

RS232 CONNECTOR PINNING

Local Unit (CPU) Pinout (DCE):

Pin	Function	direction
2	TxD	OUT
3	RxD	IN
4	DTR	IN
5	GND	—
8	CTS	OUT

Remote Unit (CON)Pinout (DTE):

Pin	Function	direction
2	RxD	IN
3	TxD	OUT
4	DTR	OUT
5	GND	—
8	CTS	IN

The pin numbers refer to a 9-pin D-sub plug.

The baud rate can be set in the menu. There is a universal setting for baud rates up to 9600 which transmits all different RS232 configurations transparently. For higher baud rates the following settings are available.

possible baudrate

- 4800
- 9600
- 19200
- 38400
- 57600
- 115200
- 230400

possible Parity

- No
- Odd
- Even
- Mark
- Space

possible Stopbits

- 1
- 2


3. EXTENDER SETTINGS

3.7.5 USB SHARE ANY KEY

By pressing the button „B“ the USB Share any Key mode can be activated or deactivated.

If the USB share any key, the USB function can be taken over with any key.

If the function is deactivated, this works with the predefined hotkeys (see 3.7.2.)

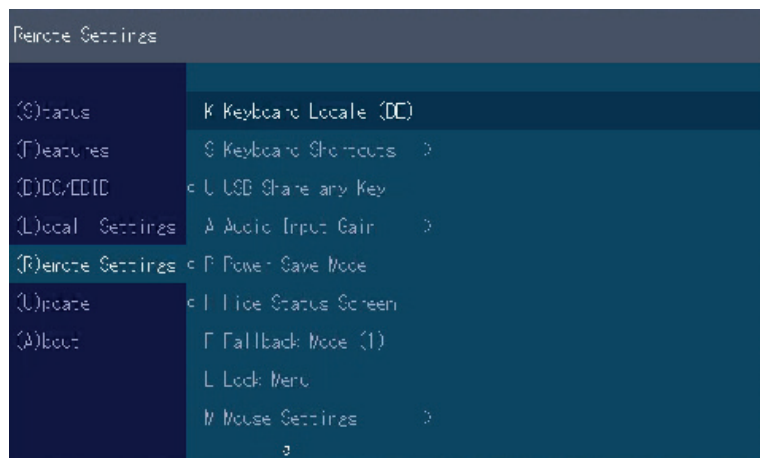

3. EXTENDER SETTINGS

3.7.6 USING THE POWER SAVING MODE

In power save mode, the Extender can switch off the video output. The power off delay can be set or deactivated as desired in the Power Save Setting menu.

To return from power save mode, press any key.

Enable and disable power save mode on the remote screen. In the main menu, press G > R.

If the powersave mode is active, the image output at the video outputs is turned off after the time has elapsed. To reactivate the monitor, press any key on the keyboard or connect to a partner


Power Save Settings			
(S)tatus	K Keyboard Locale (DD)		Current Setting Power Save Mode Off
(F)eatures	S Keyboard Shortcuts >		0 Power Save Mode Off
(D)DC/CC/IC	U USB Share any Key		1 5 Seconds
(L)ocal Settings	A Audio Input Gain >		2 10 Seconds
(R)emote Settings	P Power Save Mode >		3 30 Seconds
(I)ncrate	H Hide Status Screen		4 1 Minute
(A)bout	F Fallback Mode (?)		5 5 Minutes
	L Lock Menu		6 10 Minutes
	M Mouse Settings >		7 30 Minutes
	←		

3. EXTENDER SETTINGS

3.7.7 HIDING SYSTEM STATUS MENU

Press **N** in the Remote Settings menu.

This will remove the status screen and the image remains black.

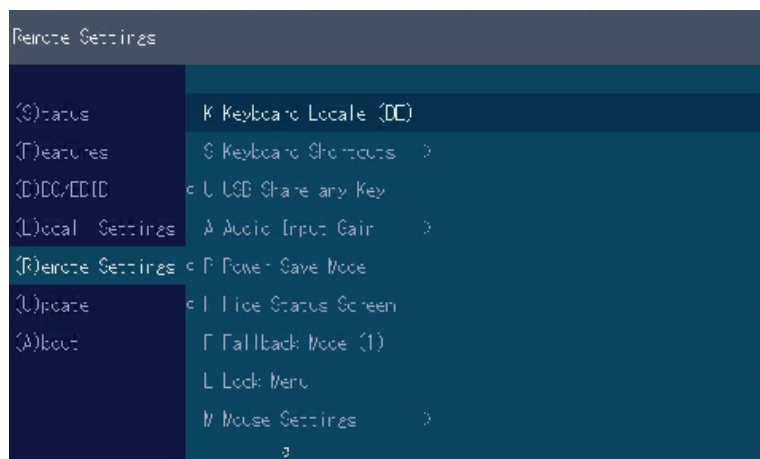


3. EXTENDER SETTINGS

3.7.8 CHANGE KEYBOARD FALLBACK MODUS

To use the OSD menu, the keyboard on the remote device must be identified.

For most keyboards, use the 0 setting.


When using USB, some mice act like a keyboard. In this case, select fallback mode 1 or 2.

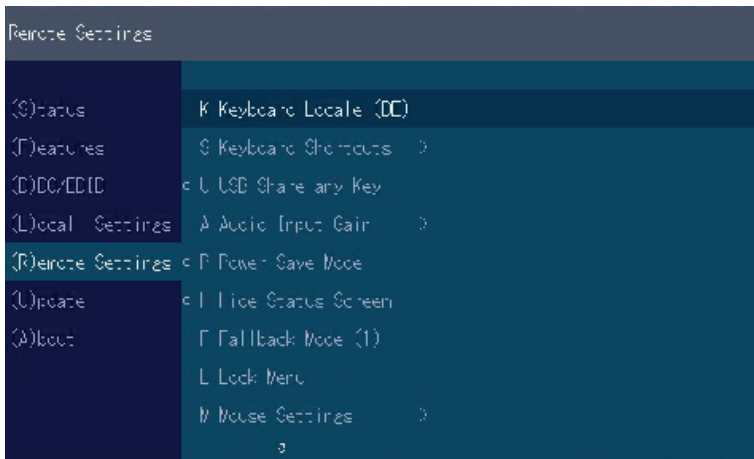

3. EXTENDER SETTINGS

3.7.9 LOCK MENU


This menu protects the OSD control and after 5 minutes the OSD can no longer be activated.

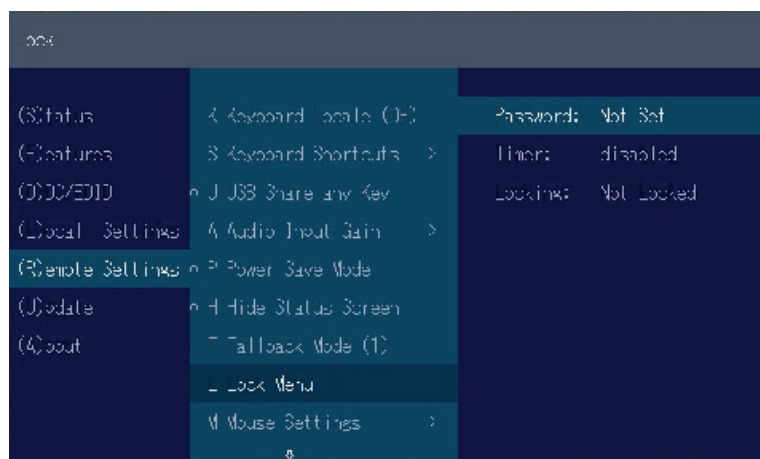

3. EXTENDER SETTINGS


3.7.10 MOUSE SPEED

Can be used in USB Emulation mode, Mouse glide & Switch and Multiview Commander.
With this function the horizontal and vertical speed can be adjusted

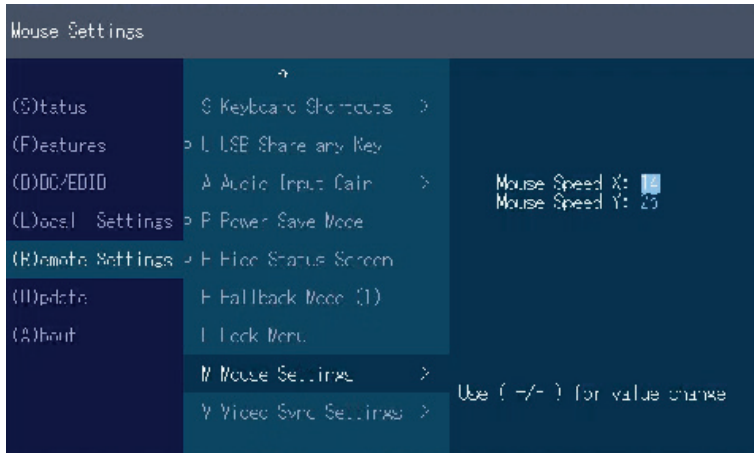

3.7.11 MONITOR SYNC STRENGTH

The frame start of the monitor is synchronized with the graphic card.
Some monitors are very sensible regarding frequency changes. Therefore the changes should be done slow and the synchronization takes a bit more time
The monitor sync strength can be adjusted between 0-3.

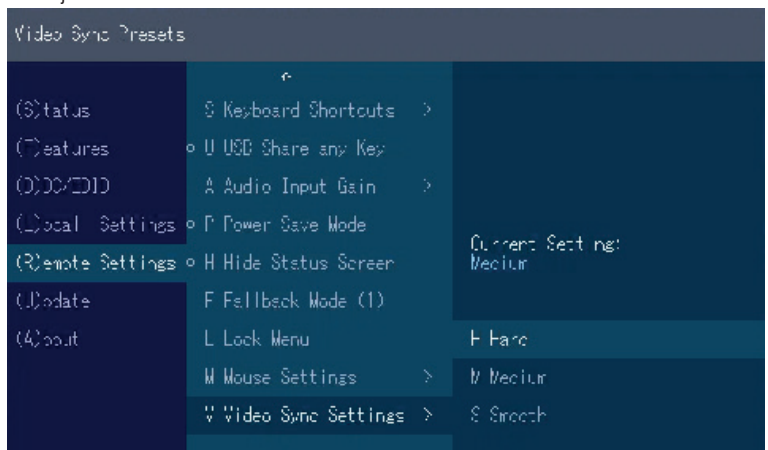

3. EXTENDER SETTINGS

Video Sync Presets			
(S)tatus	K Keyboard Locale (DE)	Current Primary:	Medium
(F)eatures	S Keyboard Shortcuts >	1 Primary+Hard	
(D)DC/ECID	L USB Share any Key	2 Primary-Medium	
(L)ocal Settings	P Power Save Mode	3 Primary-Smooth	
(R)emote Settings	H Hide Status Screen	4 Primary-Disable	
(I)ncrate	F Fallback Mode (1)		
(A)bout	L Lock Menu		
	M Mouse Settings >		
	V Video Sync Settings >		

Single

Video Sync Presets			
(S)tatus	K Keyboard Locale (DE)	Current Primary:	Medium
(F)eatures	S Keyboard Shortcuts >	Current Secondary:	Medium
(D)DC/ECID	L USB Share any Key	1 Primary+Hard	
(L)ocal Settings	P Power Save Mode	2 Primary-Medium	
(R)emote Settings	H Hide Status Screen	3 Primary-Smooth	
(I)ncrate	F Fallback Mode (1)	4 Primary-Disable	
(A)bout	L Lock Menu	5 Secondary+Hard	
	M Mouse Settings >	6 Secondary-Medium	
	V Video Sync Settings >	7 Secondary-Smooth	
		8 Secondary-Disable	


Dual

3. EXTENDER SETTINGS

3.8 FIRMWARE UPDATE

3.8.1 UPDATING A FIRMWARE WITH SWITCHING MANAGER

Update management is carried out via the Switching Manager software included in the delivery see **User Manual Switching Manager 2000 chapter 10.2**

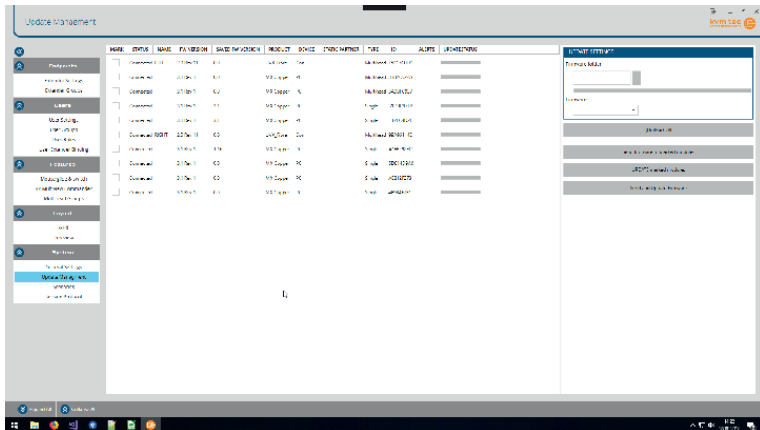

In this view, all extenders for which a firmware update is to be performed are displayed. This function displays a list of the extenders that are assigned to the Switching Manager. Updating the extenders in the system is a two-step process. In the first step the firmware is loaded into the device and in the second step the update is performed. All extenders in the system file can also be updated together. For the update, activate the Settings window and select the folder from which the firmware file is to be uploaded. The list of bitmaps is displayed under MX Firmware. Then transfer the firmware and the update will be done in two steps.

1. send the firmware to the extender.

It takes about 2 minutes until the firmware is loaded into the extender. The bar on the right in the column the main window fills blue


2. is the update.

ATTENTION Only if the bar is grey, the update is finished.

3. EXTENDER SETTINGS

3.8.2 FIRMWARE UPDATE WITH USB STICK

For the update with an USB stick the following steps are necessary

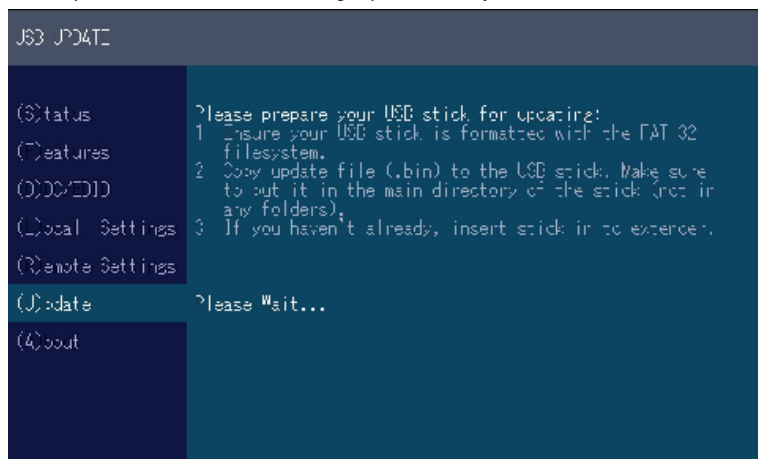

1. you receive the message that you can plug in the USB stick.
2. copy the update file (ending in .kvm) to the USB stick
3. make sure that the update file is directly on the stick and that it is not in any subdirectory
4. the USB stick must be formatted with FAT-32

3. EXTENDER SETTINGS

USB UPDATE	
(S)tatus	Please prepare your USB stick for updating: 1. Ensure your USB stick is formatted with the FAT-32 filesystem. 2. Copy update file (.bin) to the USB stick. Make sure to put it in the main directory of the stick (not in any folders). 3. If you haven't already, insert stick in to extender.
(F)eatures	
(D)DC/EDID	
(L)ocal Settings	
(R)emote Settings	Update file found for Remote Version: 0.1.6
(U)pdate	
(A)bout	
	U Start Update

USB UPDATE	
(S)tatus	Updating Remote to Version 0.1.61
(F)eatures	
(D)DC/EDID	Copying SW image 100%
(L)ocal Settings	
(R)emote Settings	
(U)pdate	Copying Remote FPGA image 100%
(A)bout	
	ESC Exit R Finalize and Reboot

3. EXTENDER SETTINGS

3.9 ABOUT THIS DEVICE

By pressing the „A“ button, or by selecting the arrow keys, you can access the info menu, where you can obtain information about hardware and software versions, as well as the activated upgrades. You can also see the current firmware version here.

FLEXLINE - KVM Extender			
	(S)tatus	General:	FLIN.012 MAXFLEX
	(F)eatures	My Name:	View Sonic Single
	(D)DC/EDID	Remote Firmware Version:	1.3.12
	(L)ocal Settings	Local Firmware Version:	1.3.12
	(R)emote Settings	Remote Device ID:	202051201002
	(U)pdate	Local Device ID:	202051401008
	(A)bout		

single

FLEXLINE - KVM Extender - DUAL			
	(S)tatus	General:	FLIN.017 MAXFLEX
	(F)eatures	My Name:	Dual Tischrand Remote
	(D)DC/EDID	Remote Firmware Version:	1.3.12
	(L)ocal Settings	Local Firmware Version:	1.3.12
	(R)emote Settings	Remote Device ID:	202051701005
	(U)pdate	Local Device ID:	202051501002
	(A)bout		

dual

4. NETWORK SETTINGS

4. NETWORK SETTINGS AND MANAGEMENT SWITCHING SYSTEMS

All network settings, user administration and extender management are done via the included Switching Manager software and all functions are described in the Switching Manager 2000 manual. You can download the manual from our website. www.kvm-development.com

4.1 DISPLAY SWITCHING LIST

Available devices that the user can connect to are displayed here.

Create shortcut:

You can create a shortcut with the following key combination „Strg+Alt+Print“

Switching List				Currently not logged in	
Nr.	Device	State	Name		
	FlexLineready	default			
	FlexLinefree	default			
-					
-					
-					
-					
-					
-					
P Push-List D Disconnect				1 / 1	

4. NETWORK SETTINGS

4.2 PUSH / GET LIST

Display of all extenders that can be shared. The current image of the workstation can be shared with other remote units via this list

Switching List				Currently not logged in
Nr.	Device	State	Name	
	FlexLineready	default		
-				
-				
-				
-				
-				
-				
G Get-List D Disconnect				1 / 1

Switching List				Currently not logged in
Nr.	Device	State	Name	
	FlexLineready	default		
-				
-				
-				
-				
-				
-				
P Push-List D Disconnect				1 / 1

4. NETWORK SETTINGS

4.3 FAVORITE LIST

A total of 8 favourites can be defined. The connection of these 8 favourites is possible with shortcuts from 1-8

Switching List			Currently not logged in
Nr.	Device	State	Name
	FlexLineready	default	
	FlexLinefree	default	
	-		
	-		
	-		
	-		
	-		
	-		
P	Push-List		D Disconnect 1 / 1

4. NETWORK SETTINGS

4.4 CONNECTING, DISCONNECTING OR SELECTING A CURRENT WORKPLACE CONNECTED DEVICES

Logging in to the local PC in the main menu, press **A**.

Enter your username and password.

Disconnecting from an encoder in the main menu, press **D**.

Enabling a direct connection

If you are not connected through a network switch, you can connect directly to an encoder with point-to-point mode.

In the main menu, press **P**. After logging in, the user receives his personalized lists (Devices, Favorites List).

4. NETWORK SETTINGS

4.5 SEARCHBOX-FUNCTION

In the list view you can search for the different extenders

Switching List		Currently not logged in	
Nr.	Device	State	Name
	FlexLineready	default	
	FlexLinefree	default	
	-		
	-		
	-		
	-		
	-		
	-		
P Push-List		D Disconnect	
		1 / 1	

In the list view you can see all available extenders. To search for specific Extenders, you must press the „TAB“ key. Now you can enter a string to search for the Extender you want to see. Press the Return key, you should now see a reduced list of Extenders.

4. NETWORK SETTINGS

4.6 IP MANAGEMENT

The KVM extenders from kvm-tec support three different addressing methods. The IP Management menu is only accessible in the active "Matrix Switching Mode" under Features.

Features	
(S)tatus	• M Matrix Switching Mode
(F)eatures	◦ D Freeze last image
(D)DC/EDID	• E USB Emulation Mode
(L)ocal Settings	• S USB Save Feature (Mass Storage / Webcam disabled)
(R)emote Settings	◦ O Power Redundancy Alert
(U)pdate	◦ L Link Redundancy Alert
(A)bout	O Diagnosis >
	U Unlock Feature >
	I IP Management >

Default

In default mode, each Extender generates an IP address using the ID number to avoid number collisions in the network.

IP Management	
(S)tatus	Current Setting Default
(F)eatures	
(D)DC/EDID	A Default
(L)ocal Settings	B DHCP
(R)emote Settings	C Static IP
(U)pdate	Main Link: 169.254.135.216
	Sec Link: 169.254.135.217
(A)bout	Partner Main Link: 169.254.56.86
	Partner Sec Link: 169.254.56.87
	Save/send settings

4. NETWORK SETTINGS

DHCP

The KVM extenders from kvm-tec support the DHCP protocol (Dynamic Host Configuration Protocol). This allows the assignment of network addresses by a DHCP server.

IP Management		
	(S)tatus	Current Setting DHCP
	(F)eatures	A Default
	(D)DC/EDID	B DHCP
	(L)ocal Settings	C Static IP
	(R)emote Settings	Main Link: 169.254.82.71
	(U)pdate	Sec Link: 169.254.168.226
	(A)bout	Partner Main Link: 169.254.56.86
		Partner Sec Link: 169.254.56.87
Save/send settings		

Static IP

In Static-IP mode the IP addresses can be assigned via the OSD. It is necessary to be connected to a local partner to be able to transmit IP addresses.

The blue values show the currently assigned IP addresses. With the arrow keys up / down you can overwrite the respective IP address. The addresses can be overwritten by entering a valid 12-digit number. E.g.: for the IP address 10.0.0.1 the 12-digit number 010.000.000.001 must be entered in the OSD. The separator points are added automatically.

IP Management		
	(S)tatus	Current Setting Static IP
	(F)eatures	A Default
	(D)DC/EDID	B DHCP
	(L)ocal Settings	C Static IP
	(R)emote Settings	Main Link: 192.168.70.100
	(U)pdate	Sec Link: 192.168.70.101
	(A)bout	Partner Main Link: 169.254.56.86
		Partner Sec Link: 169.254.56.87
Save/send settings		

4. NETWORK SETTINGS

If all four IP addresses are overwritten, "Save/send settings" must be used to transmit the new values to the extenders.

IP Management	
(S)tatus	Current Setting Static IP
(F)eatures	
(D)efault	A Default
(L)ocal Settings	B DHCP
(R)emote Settings	C Static IP
(U)pdate	Main Link: 192.168.050.100 Sec Link: 192.168.050.101
(A)bout	Partner Main Link: 192.168.050.103 Partner Sec Link: 192.168.050.104
	Save/send settings

Static IP addresses can only be overwritten in Static IP mode.


5. TROUBLESHOOTING & FIRST AID

Error	Cause	Solution
LED is not lighting	The devices get no power	Is the power supply connected? (white box)
LED is light in red	No connection between Loc and Rem	Check if the RJ45/network cable is connected well. (Clicking noise when plugging in) Control local and remote , if it does not work - please send an e-mail to support@kvm-tec.com
LED is light in orange	No picture on the monitor	Check if the local (PC) cable is connected well. Check if the remote (monitor) cable is connected well. If everything is connected well but no function appears, reconnect power supply again. If the menu is visible, press the O key and choose the resolution of the monitor. Then press the assigned number on your keyboard.
LED is light green	Screen occurs but the keyboard is not working	Plug out/in USB of keyboard and wait until driver is installed (after few seconds). Check all USB connections on both sides (Local and Remote) If it is still not working, plug out/in DC once more
LED is light green	No audio	Establish audio connection: plug stereo-jack to the audio output of the PC (green) connection with local: IN remote: headset OUT Establish microphone connection: plug stereo-jack to the microphone input of the PC (pink) connection with local OUT. Connect the microphone to the Remote IN
LED is light green	The screen flickers, has an incorrect display	Install current firmware from our homepage www.kvm-tec.com/support
LED is blinking green	Different firmware or USB is not compatible	Please contact the kvm-tec support team via e-mail: support@kvm-tec.com or by phone: +43 2253 81912 30
LED light differently	Different firmware	To enter on screen menu/check firmware version: To enter the On screen menu, press the Scroll Lock key five times in quick succession. The currently installed firmware version is displayed below the menu If firmware update does not work, please send an e-mail to support@kvm-tec.com

5. TROUBLESHOOTING & FIRST AID

First Aid Flexline

KVM Development & Support 

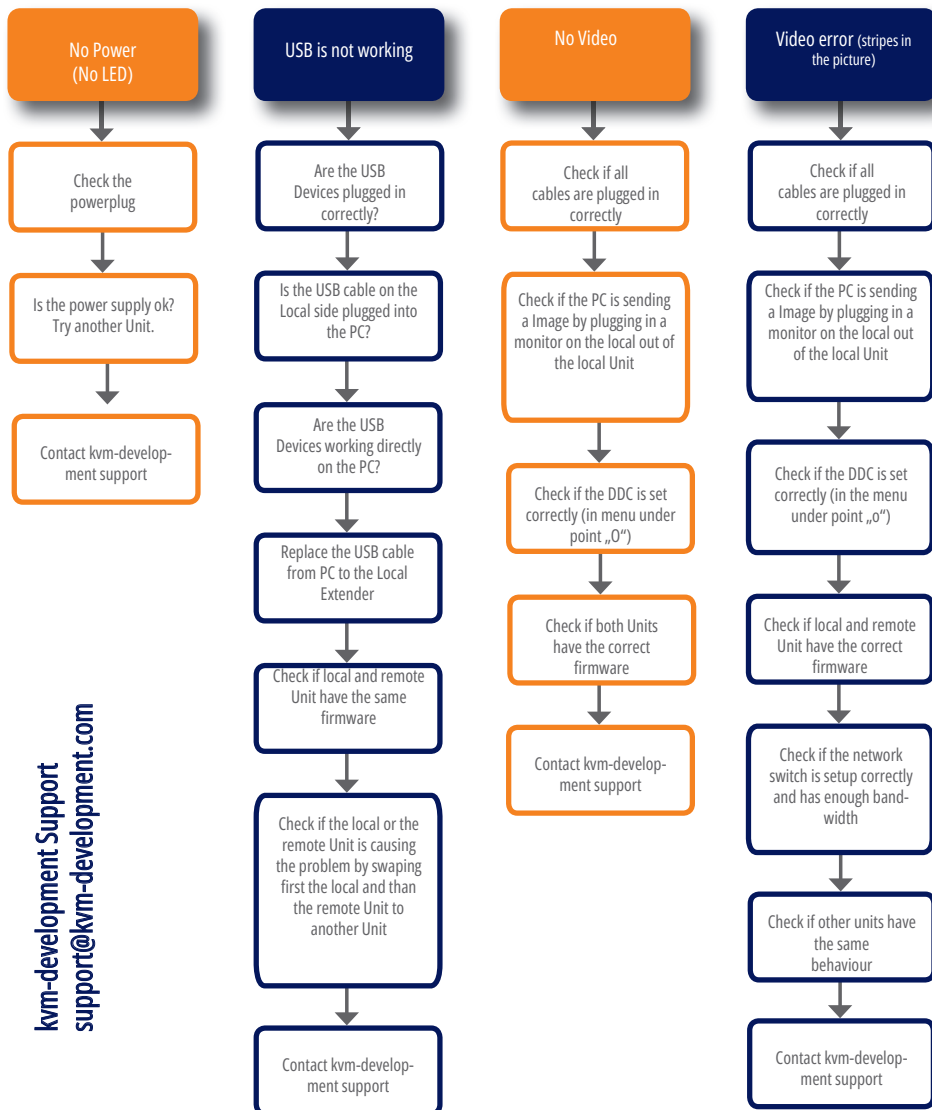

kvm-development Support
support@kvm-development.com

6. MAINTANCE AND CARE

6. MAINTANCE AND CARE

6.1 EXTENDER CARE

 **Caution!** Do not use solvent-containing cleaners. Do not use wipes, alcohols (e.g. spiritus) or chemicals as these could damage the surface.

6.2 DISPOSAL



This symbol on the product, the accessories or packaging indicates that this product must not be treated as unsorted municipal waste, but must be collected separately! Dispose of the product via a collection point for the recycling of waste electrical and electronic equipment within the EU and in other European countries that operate separate collection systems for waste electrical and electronic equipment. By disposing of the product in the proper manner, you help to avoid possible hazards for the environment and public health that could otherwise be caused by improper treatment of

recycling of materials contributes to the conservation of natural resources.

Therefore do not dispose of your old electrical and electronic equipment with the unsorted municipal waste.

The packaging is made of environmentally friendly materials, which may be disposed through your local recycling facilities. By disposing of the packaging and packaging waste in the proper manner, you help to avoid possible hazards for the environment and public health.

waste equipment. The

7. WARRANTY

7. WARRANTY

7.1 STANDARD WARRANTY

The warranty period is 24 months from the date of purchase. The warranty expires in case of:

- External effort
- improper maintenance
- Violation of the operating instructions
- lightning damage

Please, contact us first before returning the product.

7.2 EXTENDED WARRANTY



2 years standard warranty



Art Nr 9003 warranty extension to 5 years
per Set

8. REQUIREMENTS FOR CABLE

8.1 REQUIREMENTS FOR CAT5E/6/7 CABLES

A Cat5e/6/7 cable should meet the following requirements:

- The pins are connected 1:1. **Caution:** the cable pairs must be twisted to EIA/TIA- 568A (rare) or EIA/TIA-568 B (common) pairs.
- Erroneous assignments cannot be found with a simple cable tester.
- The pins for the green pair of wires are not adjacent to one other.
- The cable must at the very least meet the CAT5 specifications and be suitable for Gigabit transmission.
- The cable should meet one of the following standards: Class D ISO/IEC 11801:2002 or EN 50173-1:2002. Schema EIA/TIA-568 B.
- Only use shielded installation cable with min. cross section of 24 AWG throughout the length.
- The shield should be contiguous and connected to both ends. A shielded patch cable is allowed for connection to the device.

Schema EIA/TIA-568 B



Pin	Color
1	Orange/White
2	Orange
3	Green/White
4	Blue
5	Blue/White
6	Green
7	Brown/White
8	Brown

8. REQUIREMENTS FOR CABLE

8.2 REQUIREMENTS FIBER CABLES

8.2.1 MULTI-MODE (STANDARD)

A Multi-Mode fiber cable should meet the following requirements:

- Maximum length should be 500 m. The MA1-F includes a fiber Multimode – SFP Module which allows a transmission distance of up to 500 m.
- Dedicated fiber connection cable type Duplex Multimode 50/125 μ (OM3), LC connector

8.2.2 SINGLE-MODE (OPTIONAL)

A fiber Single-Mode – SFP Module cable should meet the following requirements:

- Up to 20 km transmission distance.
- Requires dedicated fiber connection: cable type Duplex Singlemode with LC connector

A fiber Single-Mode – SFP Module BiDi cable should meet the following requirements:

- Up to 20 km transmission distance.
 - Requires dedicated fiber connection: cable type Singlemode with LC connector
- Wavelength (λ) of 850 nm in multi-mode or 1310 nm TX -1550 nm RX in single-mode

9. REQUIREMENTS NETWORK- SWITCH

9. REQUIREMENTS NETWORK SWITCH

The entire switching network system requires its own separate network. For security reasons, it cannot be integrated into an existing corporate network.

The network switch must meet the following specifications:

1 Gigabit switch, with a port-to-port transfer rate of 1 Gigabit/second.

The following switches have all been tested and verified to work with all kvm-tec extenders.

Network requirements Matrix System UDP Version

The KVM-TEC Matrix Switching System communicates via IP

between the individual endpoints (local/CPU or remote/CON), as well as with the KVM-TEC Switching Manager, Gateway2Go and API. Sharing of videos is realized via the IGMP function of the switch via multicast.

Each endpoint joins a multicast group, even if only one connection is established. This process is repeated cyclically so that the switch keeps the multicast group active.

One exception is the Gateway2Go, which uses unicast and communicates via UDP just like the other devices.

The following UDP ports are required for the transmission:

Port Number 53248 (0xD000) to 53260 (0xD00C)

and Port Number 50000 (0xC350)

These ports must be taken into account when configuring the firewall. For the connection via WAN a secured VPN connection is necessary.

The KVM-TEC Matrix system supports DHCP management of IP addresses, static IP addresses are possible, internal default address range and assignment of IP addresses via a DHCP server. To meet all these requirements, the use of Layer 3 switches is recommended.

10. ADDRESS & PHONE / EMAILS

If you have any questions about our products, please contact kvm-tec or your dealer.

KVM Development & Support GmbH
Steinbruchgasse 34
2500 Baden
Austria
Phone: 0043 (0) 2253 81 912
Email: support@kvm-development.com
Web: www.kvm-development.com

KVM Development & Support GmbH
Steinbruchgasse 34
2500 Baden
Austria
www.kvm-development.com

11. NOTES