


First Aid USBflex

KVM Development & Support 

KVM Development & Support 

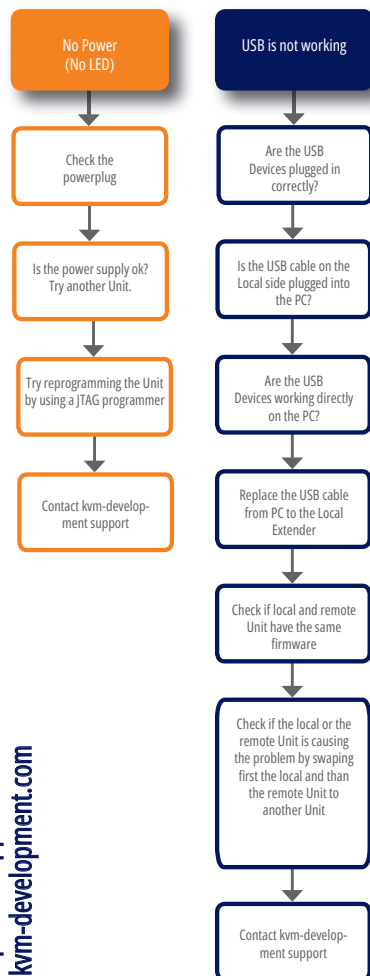

Update with USB-Stick

Plug the USB stick with update file into USB Flex.
 2. press the button on the back left (if PiP, the USB channel will be disconnected) ~ 4 sec
 3. wait until LED flashes orange (USB stick is scanned for updates) ~ 10-20 sec
 4. LED lights up specifically for 3 seconds
 LED red -> no update on stick found (remove stick and start at step 1)
 LED green -> Update found, ready to start
 5. press button again
 6. wait until the update is completed or an error occurs (for PiP local is updated first) ~ 2-3 min (PiP ~ 5-6 min)
 While update is running, LED flashes green, if data is transferred or copied, LED flashes very fast.
 At the end of the update, the LED flashes orange 4 more times and then starts the reboot process (the Extender must not be disconnected from the power supply during this process!)



USB
flex


6031L CPU/LOCAL
6031R CON/REMOTE

kvm-tec
Quick
Installation

kvm-development Support
support@kvm-development.com

www.kvm-development.com

Full HD
over IP

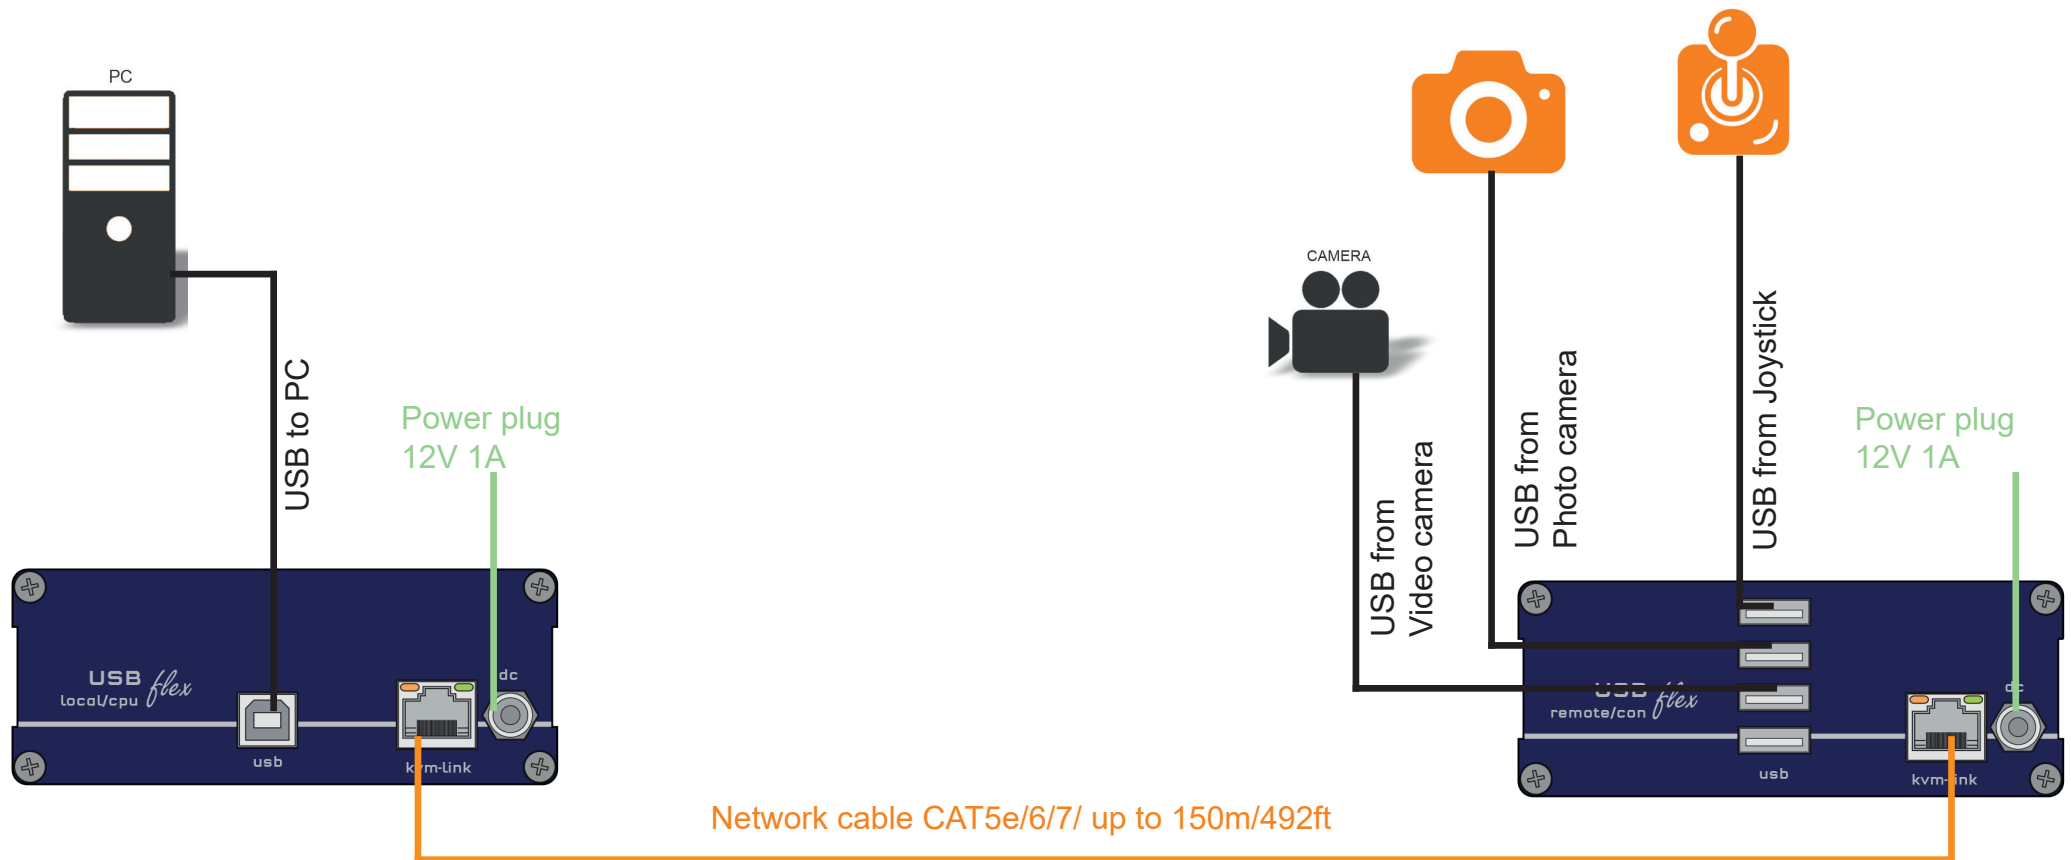

Quick Installation USBflex local / CPU – remote/ CON

1. Connect the CON / Remote and the CPU / Local Unit to the included 12V 1A power supply.
2. Now connect the USB cable to a USB port on your PC and connect the other end of the USB cable to the CPU / Local Unit. Connect some USB devices to the CON / Remote Unit.
3. Connect the CPU / Local and the CON / Remote Unit with a network cable.

HAVE FUN - your kvm-tec Extender is now in use for many years (MTBF approx 10 years)