 


First Aid MAXflex

KVM Development & Support 

KVM Development & Support 

max
flex

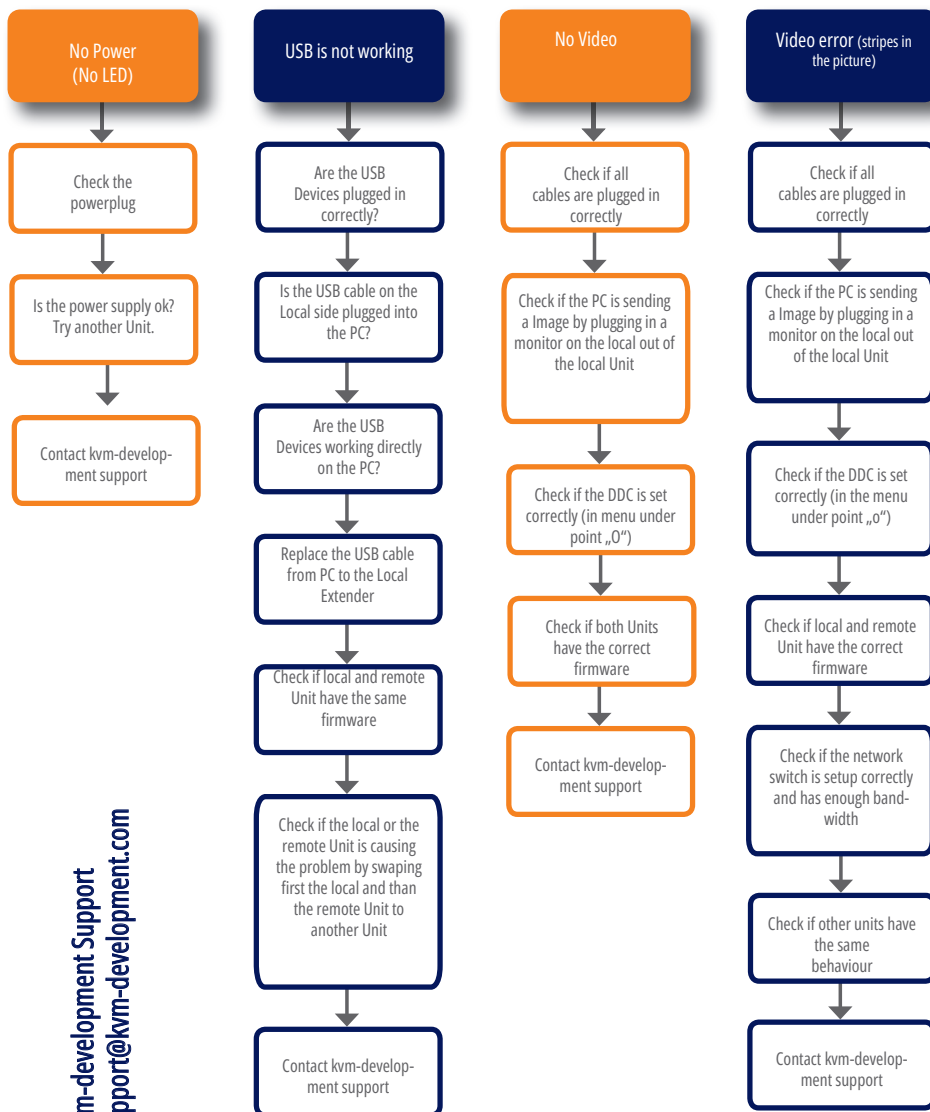

kvm-development Support
support@kvm-development.com

 
MAXflex
Dual Fiber

6026L CPU/LOCAL
6026R CON/REMOTE

kvm-tec
Quick
Instruction

www.kvm-development.com

FULL HD
over IP

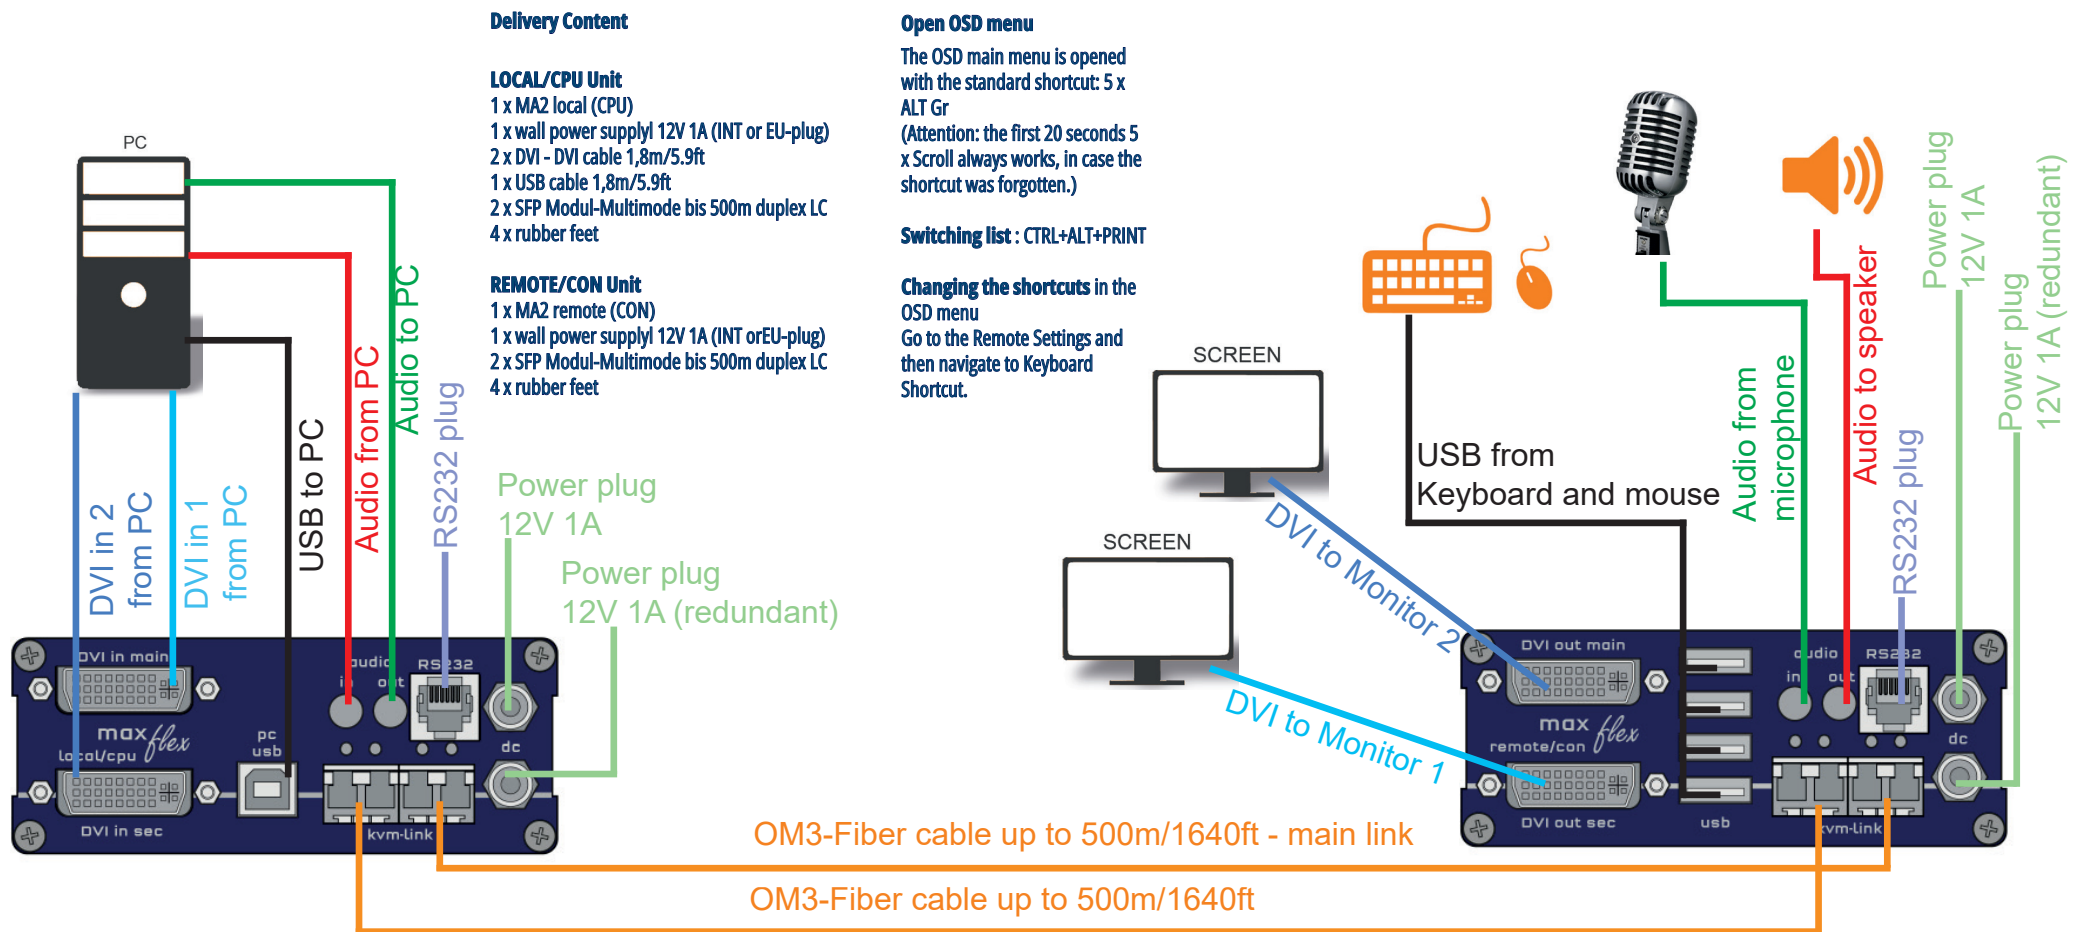


USING THE ON SCREEN MENU

Use the monitor and keyboard to use the main menu.

To access the main menu:

 - 1. Make sure the extenders, the monitors and the computer are switched on.
- 2. Press the **ALT+GR** key on your keyboard quickly five times.
The **main menu** appears with an overview of the sub-menus.
- 3. To open a sub-menu press the applicable key.

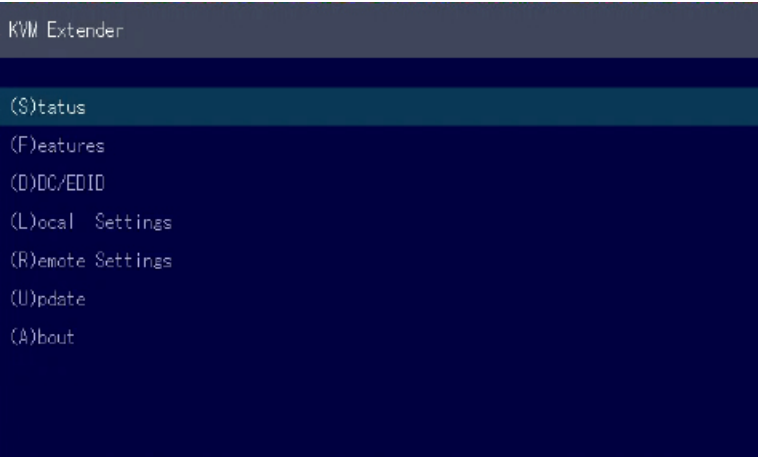


Main Menu


Main menu Short Cuts :

S	Status Overview	Menu Status /current status
U	Update Flash FW	Firmware Updates
F	Features Overview	Settings Features
D	DDC Option	DDC Option Fix settings 1020 x 1080
L	Local Settings	Settings Local
R	Remote Settings	Settings Remote
A	About Overview	Overview Upgrades Upgrades
Q	Exit	Exit

 SYSTEM STATUS

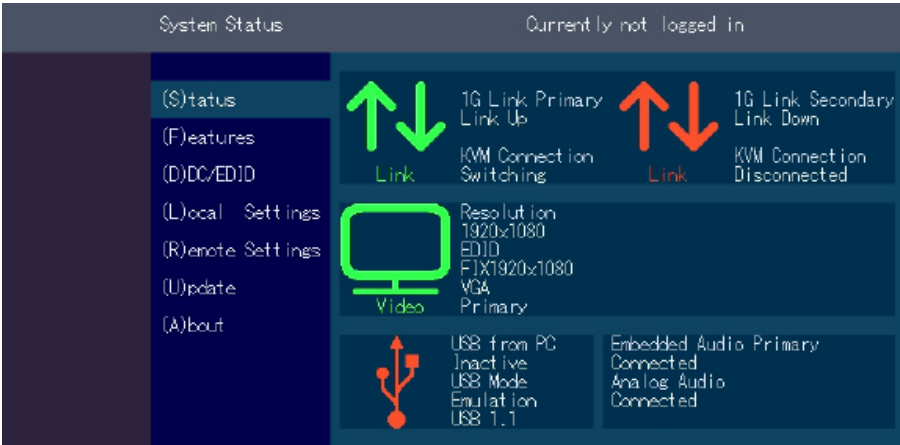

Single

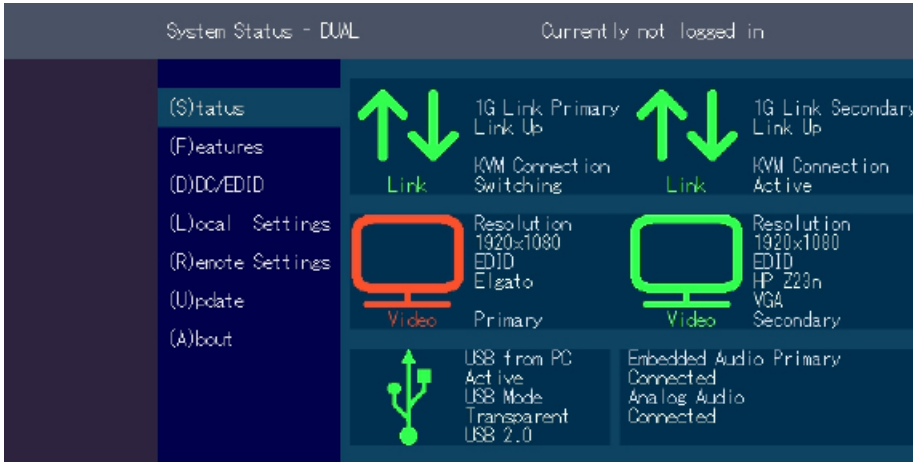 

Dual

In the status overview menu the current status of the extender connection is displayed. It provides information on the connection itself as well as resolution of the video channel, and USB-status.

The enabled options and the current firmware-version is displayed in the left top corner.

 
Link status shows whether there is a physical connection available. **Connected** indicates if kvm data is currently able to be transmitted.

Video and USB show if data is currently being transmitted.

VIEWING THE FIRMWARE VERSION

Under „A“ - About the currently installed firmware version of the remote (CON) and local (CPU) Extender is displayed (e.g. ,4267“)

FEATURES MENÜ

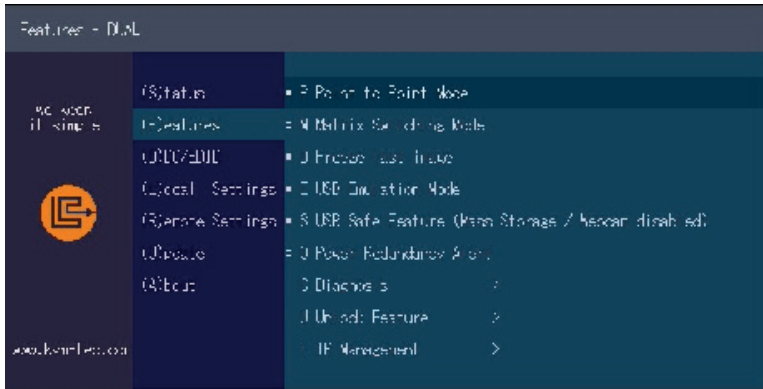


Features Menu

P	Point to Point Mode	Enabled/Disabled (Point to Point Point to Point excludes itself with Matrix mode)
M	Matrix Switching Mode	Disabled/Enabled
D	Freeze last Image	(Disabled)Disabled/Enabled
E	USB Emulation Mode	(Disabled) Disabled/Enabled
S	USB Save Feature	(mass storage usable) Disabled/Enabled
O	Power Redundance Alert	Alert System
C	Diagnosis	Diagnosis menu
U	Unlock Features	Unlock Features
I	IP Management	IP Management

POINT TO POINT

You can switch the Point to Point mode on and off by pressing the „P“ key

 ATTENTION - if the point to point mode is activated, the switching mode cannot be activated

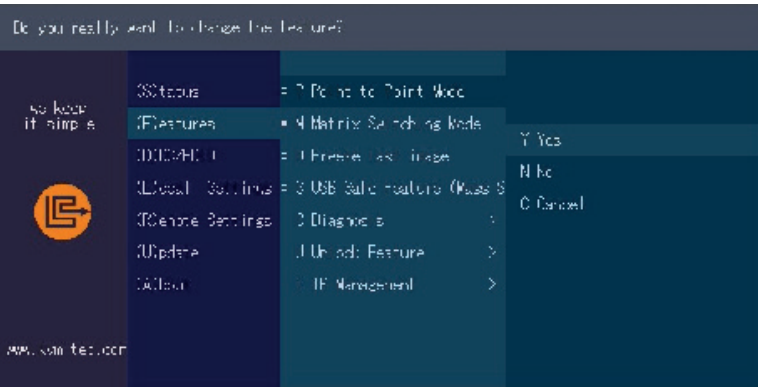

MATRIX SWITCHING MODE

By pressing the „M“ button you can switch the Matrix Switching Mode off and on

KVM Development & Support GmbH
Steinbruchgasse 34
2500 Baden
Austria
www.kvm-development.com