

# First Aid masterEASY

KVM Development &  
Support



 
 
# master Easy

FULL HD - KVM EXTENDER OVER IP

Tune in the easy KVM World

masterEASY  
Single in Fiber  
Part No. 8113

[www.kvm-development.com](http://www.kvm-development.com)

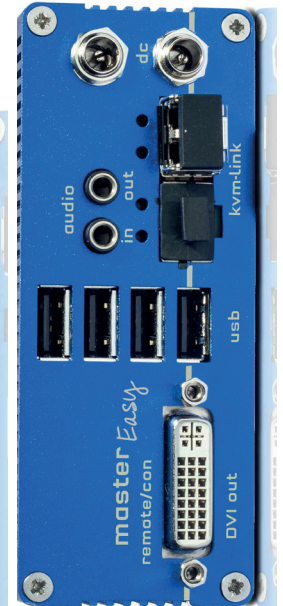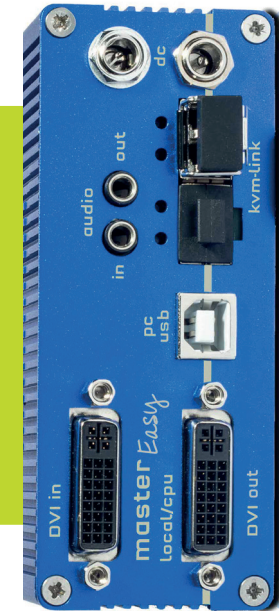


## Quick Instructions


KVM Development &  
Support



**Full HD**  
over IP

  kvm-development Support  
[support@kvm-development.com](mailto:support@kvm-development.com)

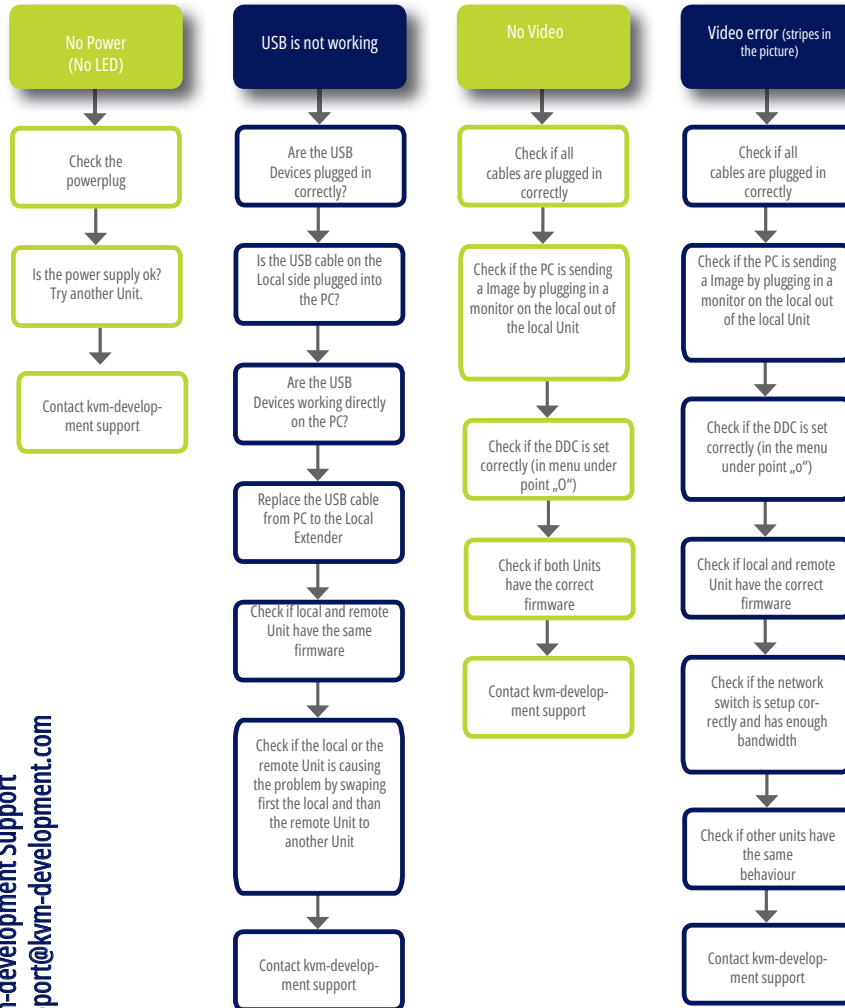

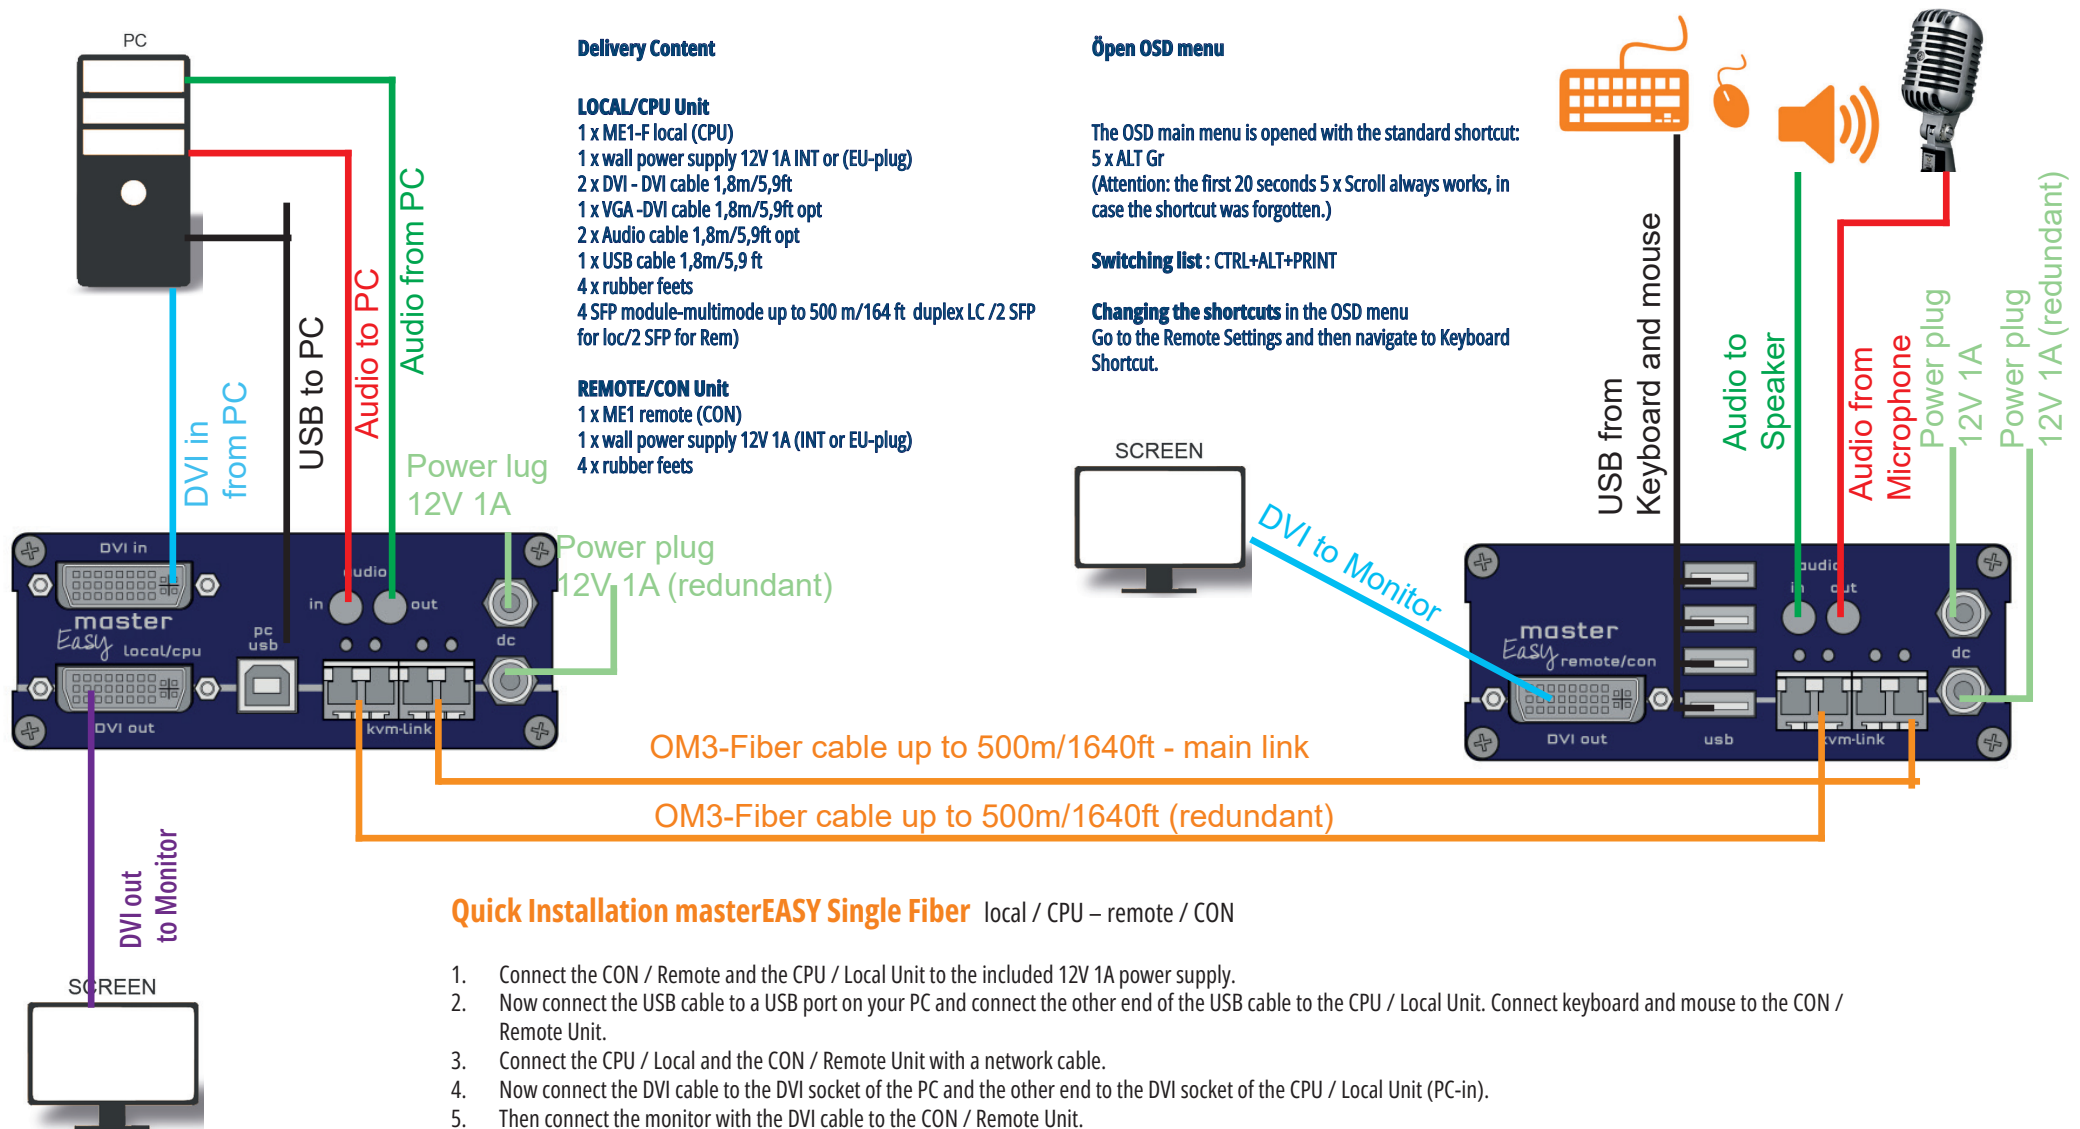


**HAVE FUN - your kvm-tec Extender is now in use for many years (MTBF approx 10 years)**

## ACCESS TO MAIN MENU

Use the monitor and the keyboard to access the main menu

### Access to the main menu.

 1. make sure the extenders, monitors, and computers are turned on.
2. Press the Scroll Lock button five times quickly. The main menu and an overview of the submenus are displayed.
3. To enter a submenu, press the corresponding key.

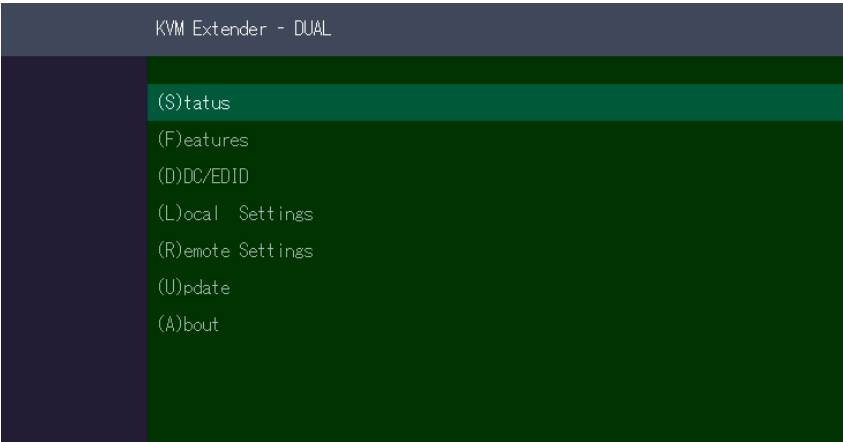

### Main menu Short Cuts :

S Status Overview  
U Update Flash FW  
F Features Overview  
D DDC Option  
L Local Settings  
R Remote Settings  
A About Overview  
Key „Esc“

 
Menu Status / current Status  
Firmware update  
Settings Features  
DDC Option Fix  
Settings Local  
Settings Remote  
Exit

## DISPLAYING THE FIRMWARE VERSION

Make sure that the main menu is open. Under „A“ - About the currently installed firmware version of the remote (CON) and local (CPU) extender is displayed.

## FEATURES

Press the F key to enter the Features menu.  
Switching mode is set by default

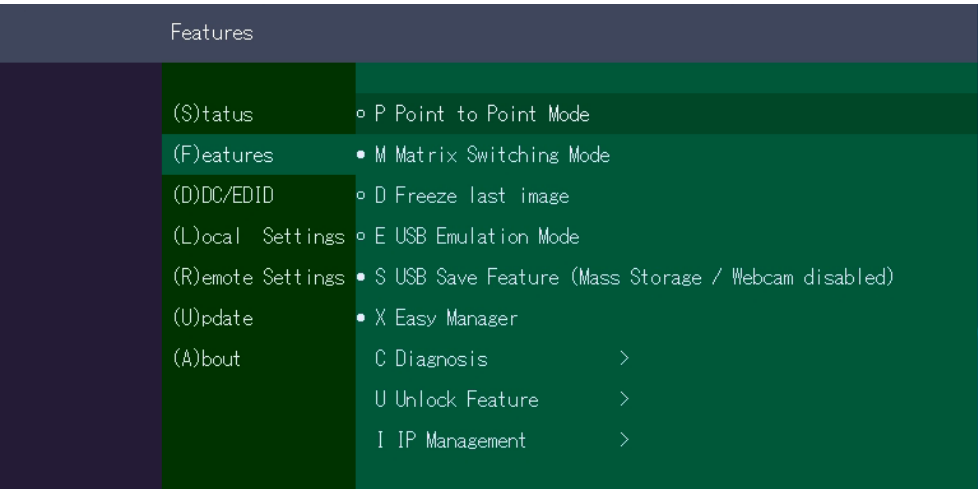


FRONTBRIDGING

HARDWARE: 1 X DUAL LOCAL + 2 X SINGLE REMOTE

The „Status Menu“ displays the current status of the extender connection. The menu shows the information about the connection, the resolution of the video channel and the USB status.

The link status shows if a connection is possible. Connected shows if the kvm files can currently be transferred.

 Video and USB show if data is currently being transferred

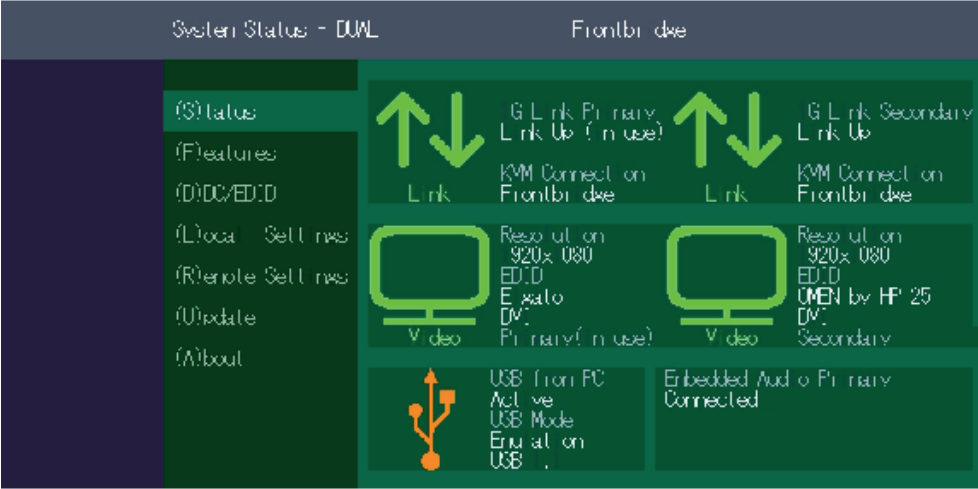


BACKBRIDGING

HARDWARE: 1 X DUAL LOCAL + 2 X SINGLE REMOTE

The „Status Menu“ displays the current status of the extender connection. The menu shows the information about the connection, the resolution of the video channel and the USB status.

The link status shows if a connection is possible. Connected shows if the kvm files can currently be transferred.

 Video and USB show if data is currently being transferred

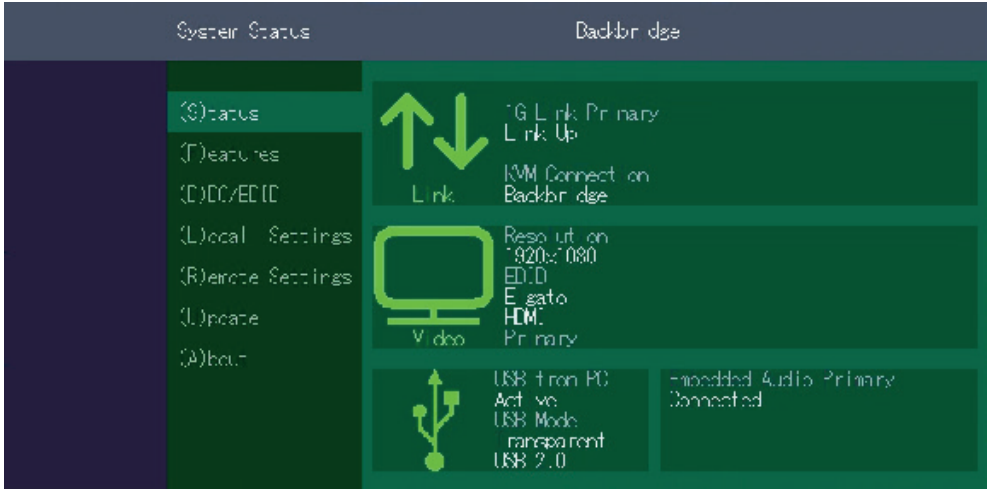

KVM Development & Support GmbH  
Steinbruchgasse 34  
2500 Baden  
Austria  
[www.kvm-development.com](http://www.kvm-development.com)