


First Aid

KVM Development & Support 

ScalableLine - 4K/5K

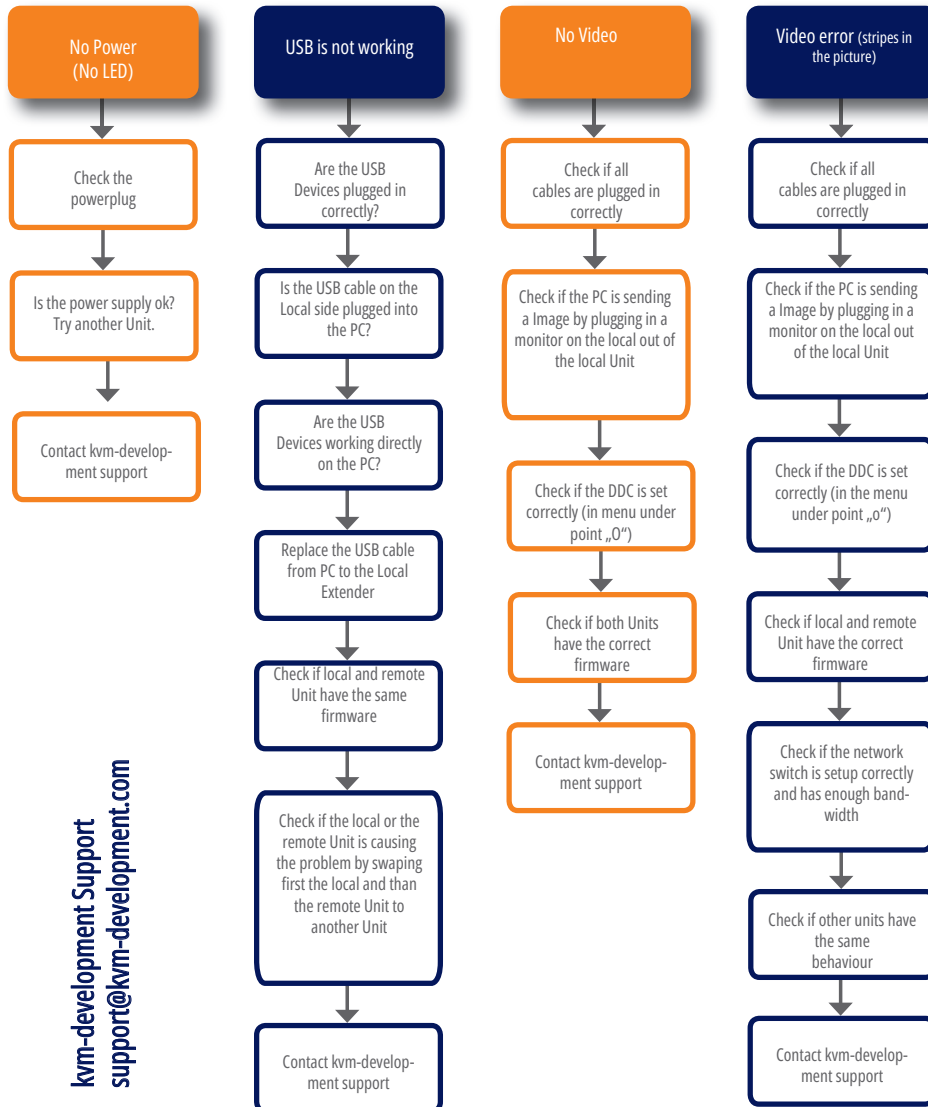


kvm-development Support
support@kvm-development.com

Scalable


line

Quickinstruction
ScalableLine 4K/5K

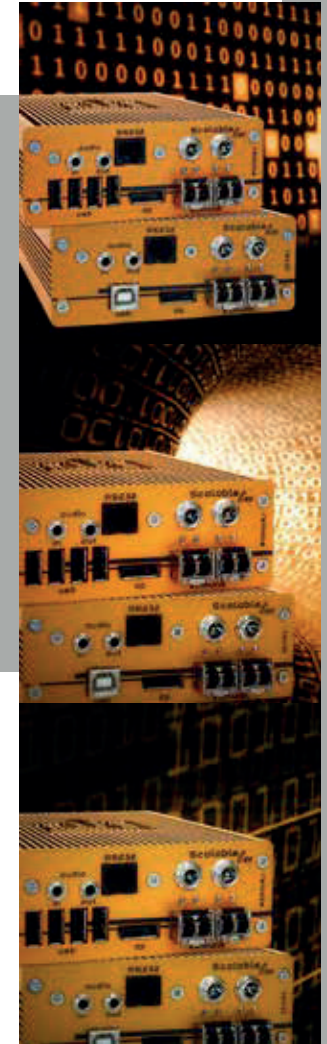

move - zoom - cut it out - PIP

www.kvm-development.com

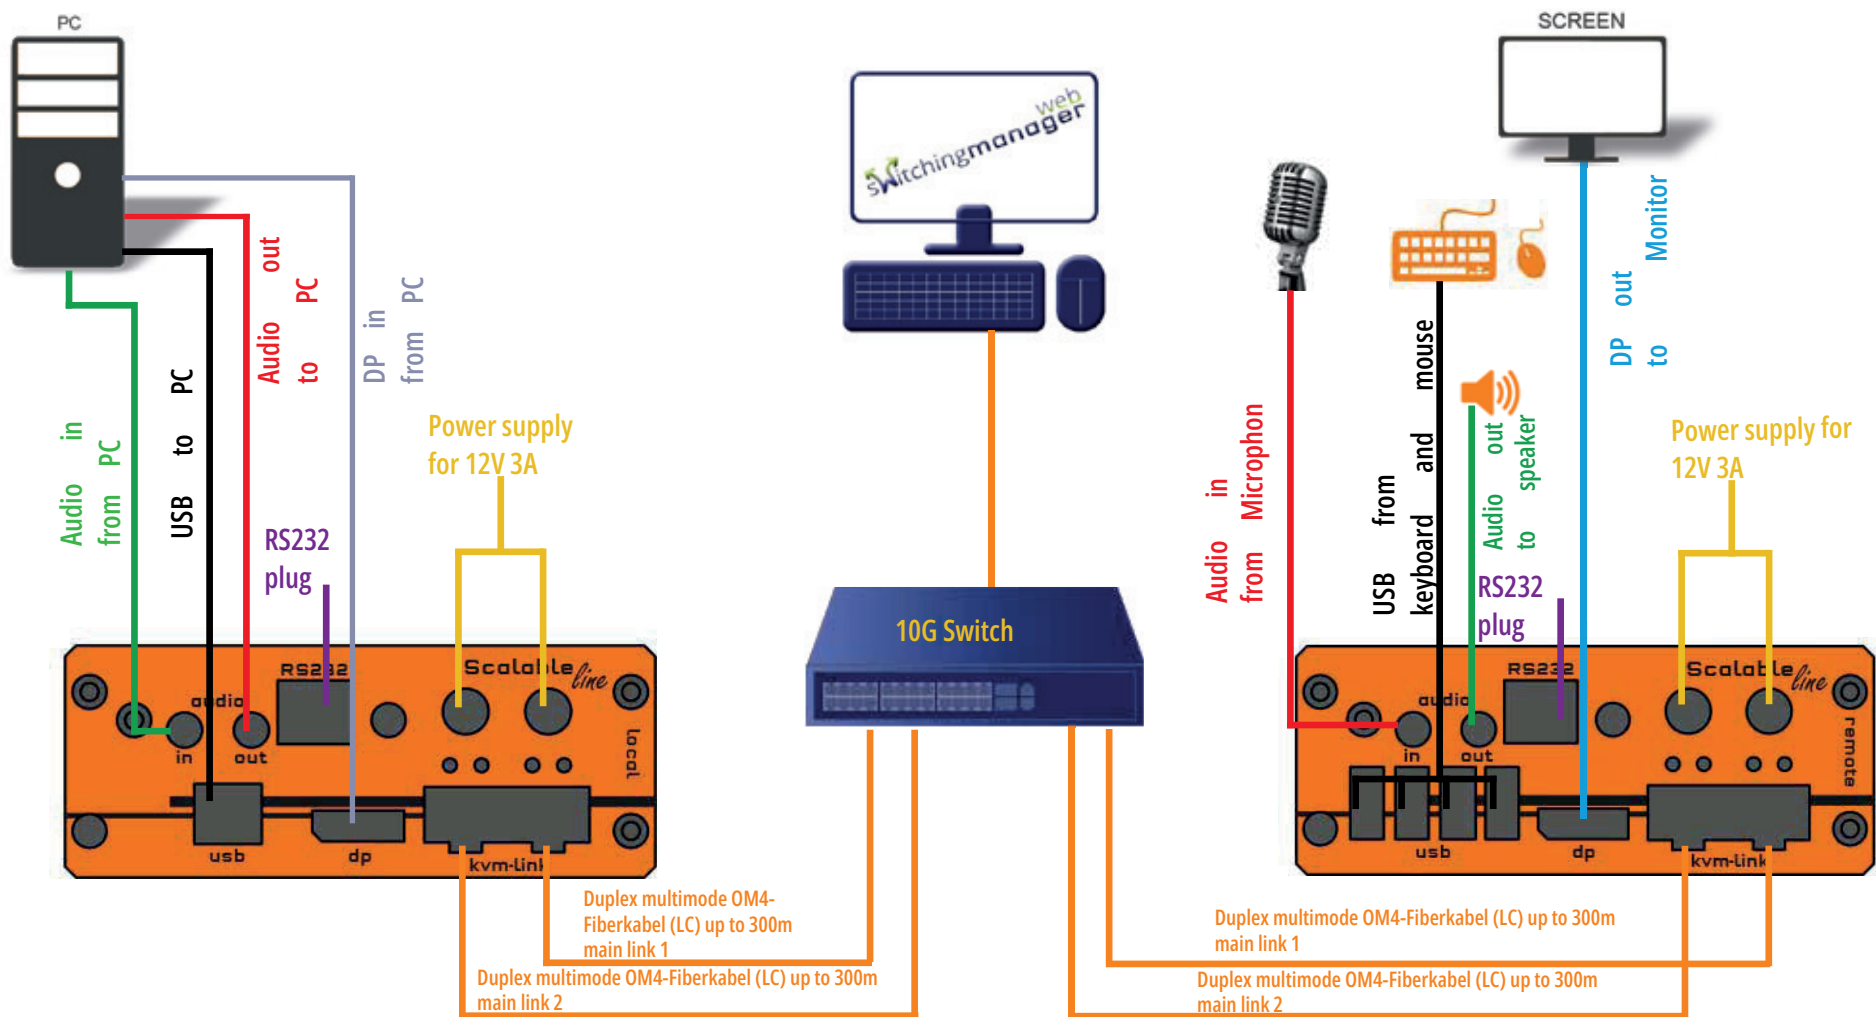

1. Connect the CON/Remote and the CPU/Local Unit with the supplied 12V 2A power supply.
2. Now connect the USB cable to a USB socket of your PC and connect the other end of the USB cable to the Local Unit. Connect the keyboard and mouse to the Remote Unit.
3. Connect the Local and the Remote Unit with a network fiber cable.
4. Connect the DP cable to the DP socket of the PC to the DP socket DP/in of the Local device and connect the screen on the remote side with the DP cable.
5. Connect the Audio cable from PC to Local Extender and connect the Audio cable from Remote Extender to Speaker
6. Connect the Audio Cable from Microphone to Remote Extender and connect the Audio cable from Local Extender to PC.

HAVE FUN - Your kvm-tec Extender is now in use for many years (MTBF approx. 10 years)!